
ASSEMBLY INSTRUCTIONS

Playground equipment · Item no. W-A007P



Test standard:	EN 1176-1, EN 1176-3
Overall dimensions:	721.2 × 452.6 × 325 cm
Weight:	427.3 kg (net) / 446.9 kg (gross)
Age group:	3 to 14 years · max. 2 children at a time

WISDOM Education Europe GmbH

schönherr.fabrik · Schönherrstraße 8 · 09113 Chemnitz · Germany
Phone: +49 (0) 37360 488 999 · E-mail: hello@wisdomeurope.eu
www.wisdomeurope.eu

Product information

Description:	Playground equipment (WiseKidz Play Tower (Coloured))
Item no.:	W-A007P
Imported into the EU by:	WISDOM Education Europe GmbH, schönherr.fabrik, Schönherrstraße 8, 09113 Chemnitz, Germany
Manufacturer:	ATA School Supplies Co., Ltd.
Manufacturer address:	Building 4, Lane 2777, Baoan Road, Malu Town, Jiading District, Shanghai, China
Test standard:	EN 1176-1, EN 1176-3
Overall dimensions:	721.2 × 452.6 × 325 cm
Weight:	427.3 kg (net) / 446.9 kg (gross)
Minimum space:	1058 × 803 cm

Assembly notes

1. Ensure the area is safe and free of hazards prior to assembly. The minimum space required is 1058 × 803 cm.
2. A minimum of two adults is required for assembly.
3. The product and materials are intended for indoor or outdoor use under supervision.
4. Before assembly, check the number of parts against the parts list (hardware packages of the individual assembly steps).
5. When assembling, ensure the ground is impact-attenuating or protected by soft material (e.g. cardboard or a blanket) to avoid scratching the equipment.
6. Tighten all bolts firmly after assembly.
7. Remove all assembly materials and tools from the play area before use.
8. Keep children away from the product as long as it is not fully assembled, as well as during disassembly or maintenance work.
9. The product can be installed in two ways: surface mounting on concrete with expansion bolts, or inground installation (set in concrete). Both options are shown in these instructions.

Safety and usage instructions

1. Read the instructions and warning labels carefully before use.
2. Inspect the equipment and play area for potential hazards before each use.
3. Maximum number of simultaneous users: 2.
4. Age group: 3 to 14 years.
5. Never leave children unattended. Constant adult supervision is required.
6. Ensure the surroundings are safe before use. Do not use the equipment in bad weather.
7. Anchoring notes: check monthly that all fixings are tight - the expansion bolts for surface mounting, and the firm seating of the equipment in its foundation for inground installation. Retighten or replace loose connections in good time.
8. Do not climb beyond the intended surfaces. Use the slide only seated, feet first.
9. If material is damaged and needs repair, contact the manufacturer or importer for repair or replacement.
10. The ground must be level (horizontal) during assembly and remain level throughout the entire period of use.

Cleaning and maintenance

1. Clean with a damp cloth.
2. Use only neutral cleaning agents.
3. Inspect the product regularly.
4. Carry out inspections according to the inspection schedule at the end of these instructions.
5. Complete the inspection record after each inspection.

W-A007P






Wisdom Education Europe GmbH
Drosselweg 10, 09526 Olbernhau,
Germany
www.wisdomeurope.eu
Test standard: EN 1176-1, EN 1176-3
Item Code: W-A007P
Year of manufacture: 2026


This nameplate shall be installed at any lower position on the panel.



16h




[cm]

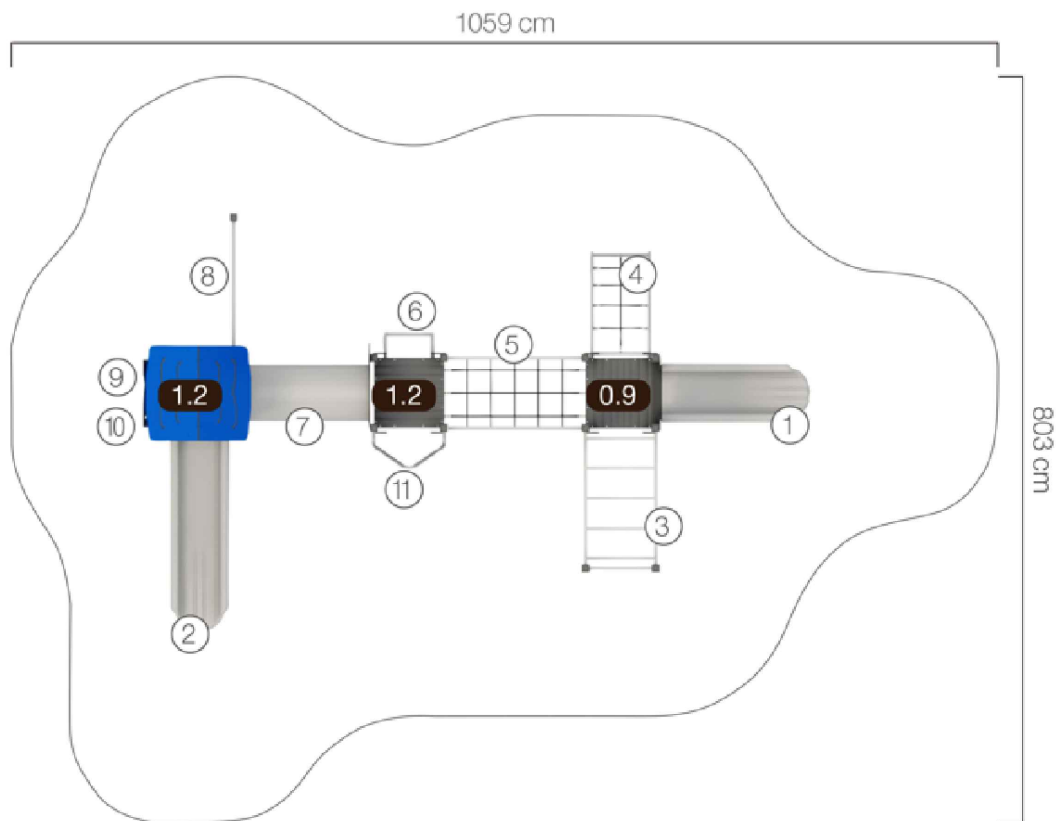


Activities: 11

- | | | |
|-----------------------------------|----------------------------------|---------------------------------|
| ① 90cm Single Slide | ② 120cm Single Slide | ③ Stainless Challenge Ladder |
| ④ 90cm Stainless Arch Net Climber | ⑤ Inclined Net Bridge | ⑥ 120cm PE Upright Rock Climber |
| ⑦ Crawl Tunnel | ⑧ Stainless Net Climber | ⑨ PE Bay Window Panel |
| ⑩ PE Car Panel (Below) | ⑪ 120cm Stainless Fireman's Pole | |

[cm]

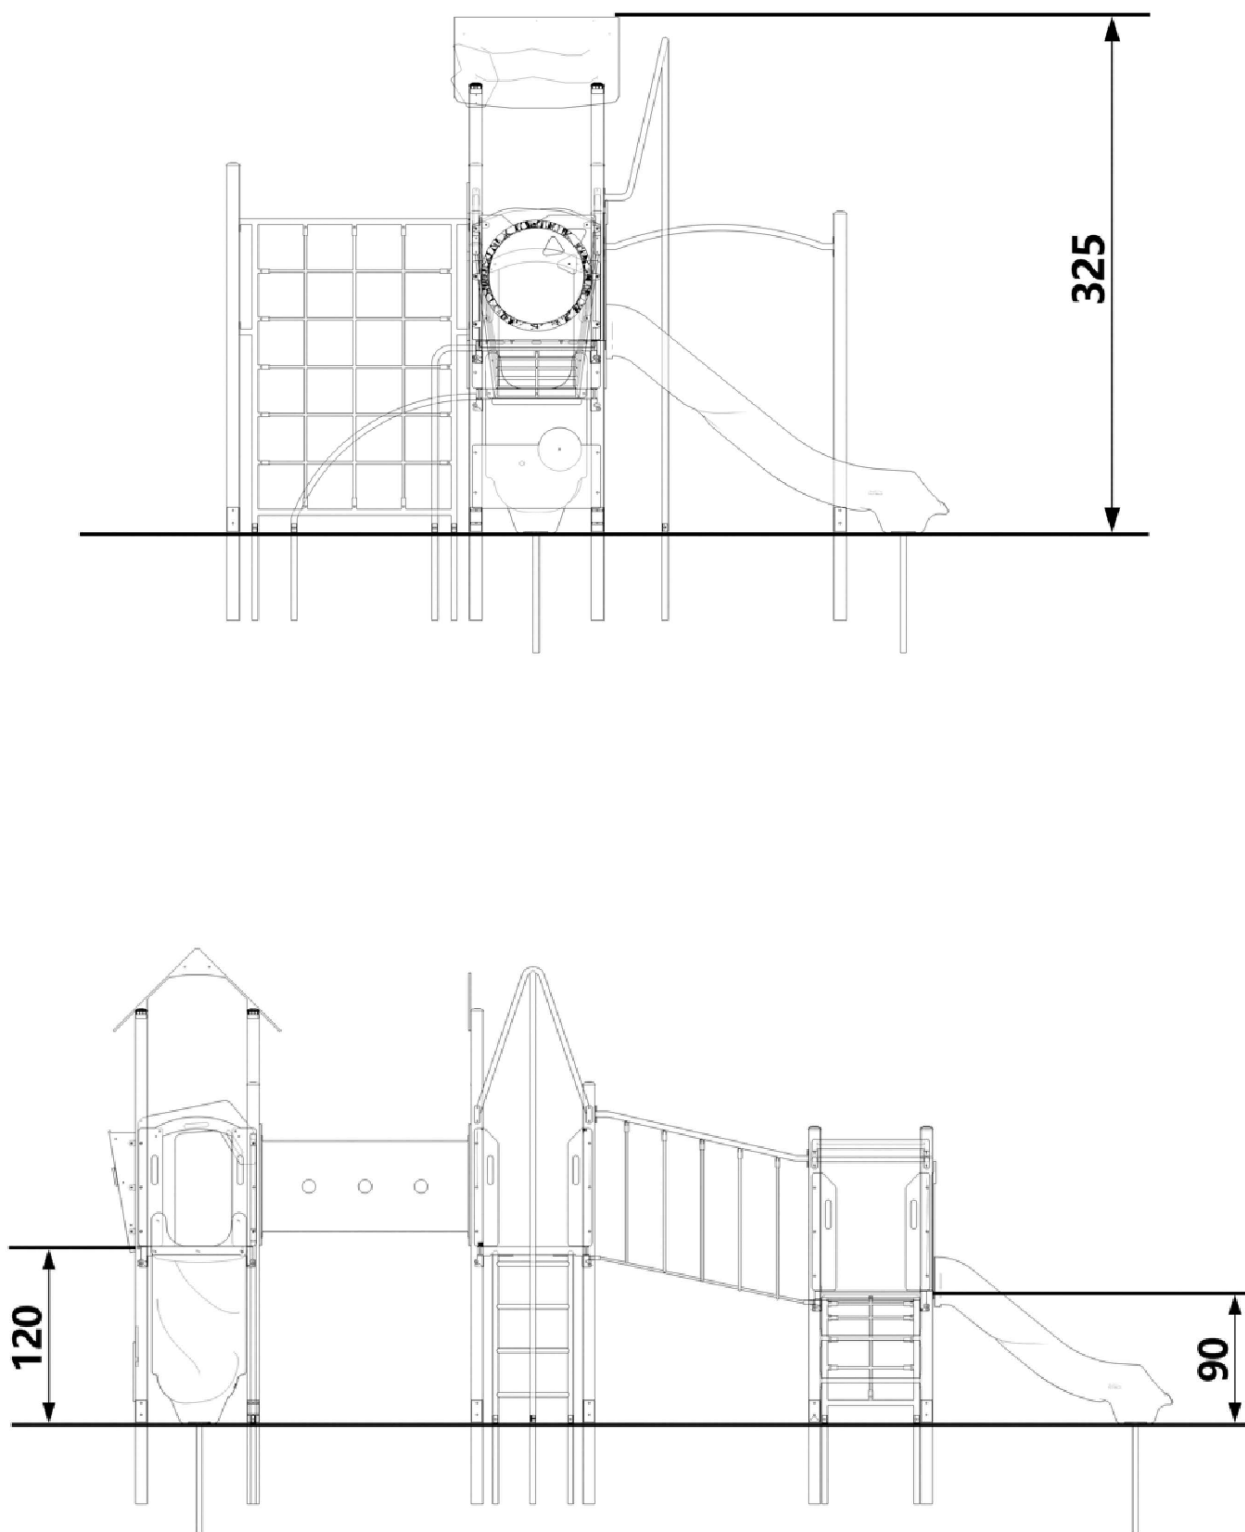


[cm]

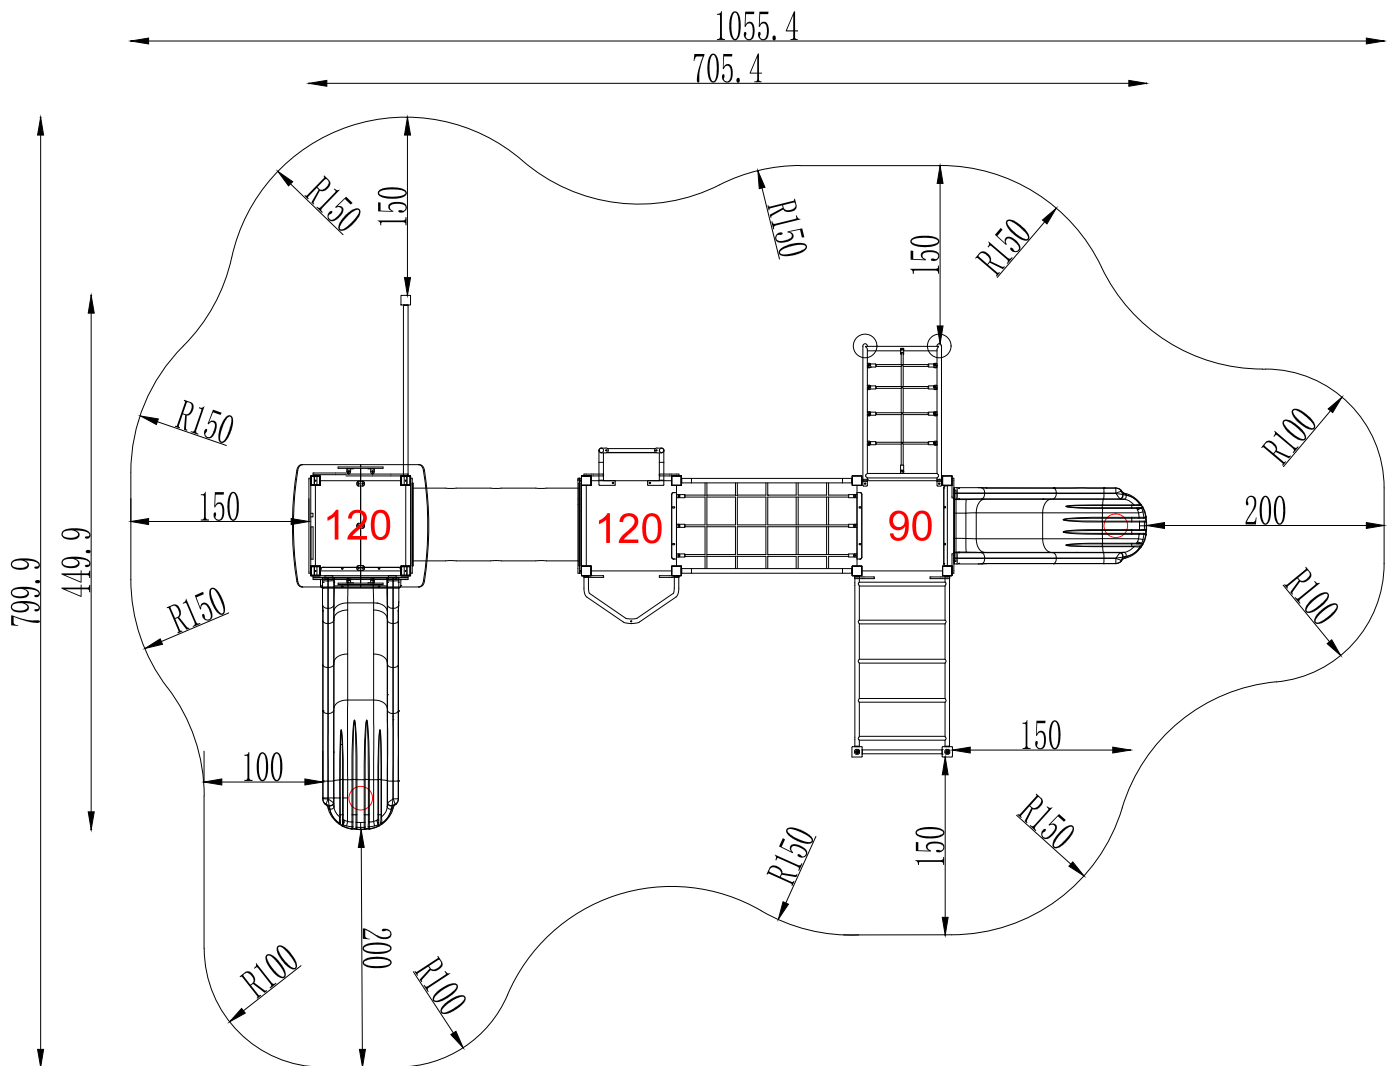


[cm]

Footing Diagram

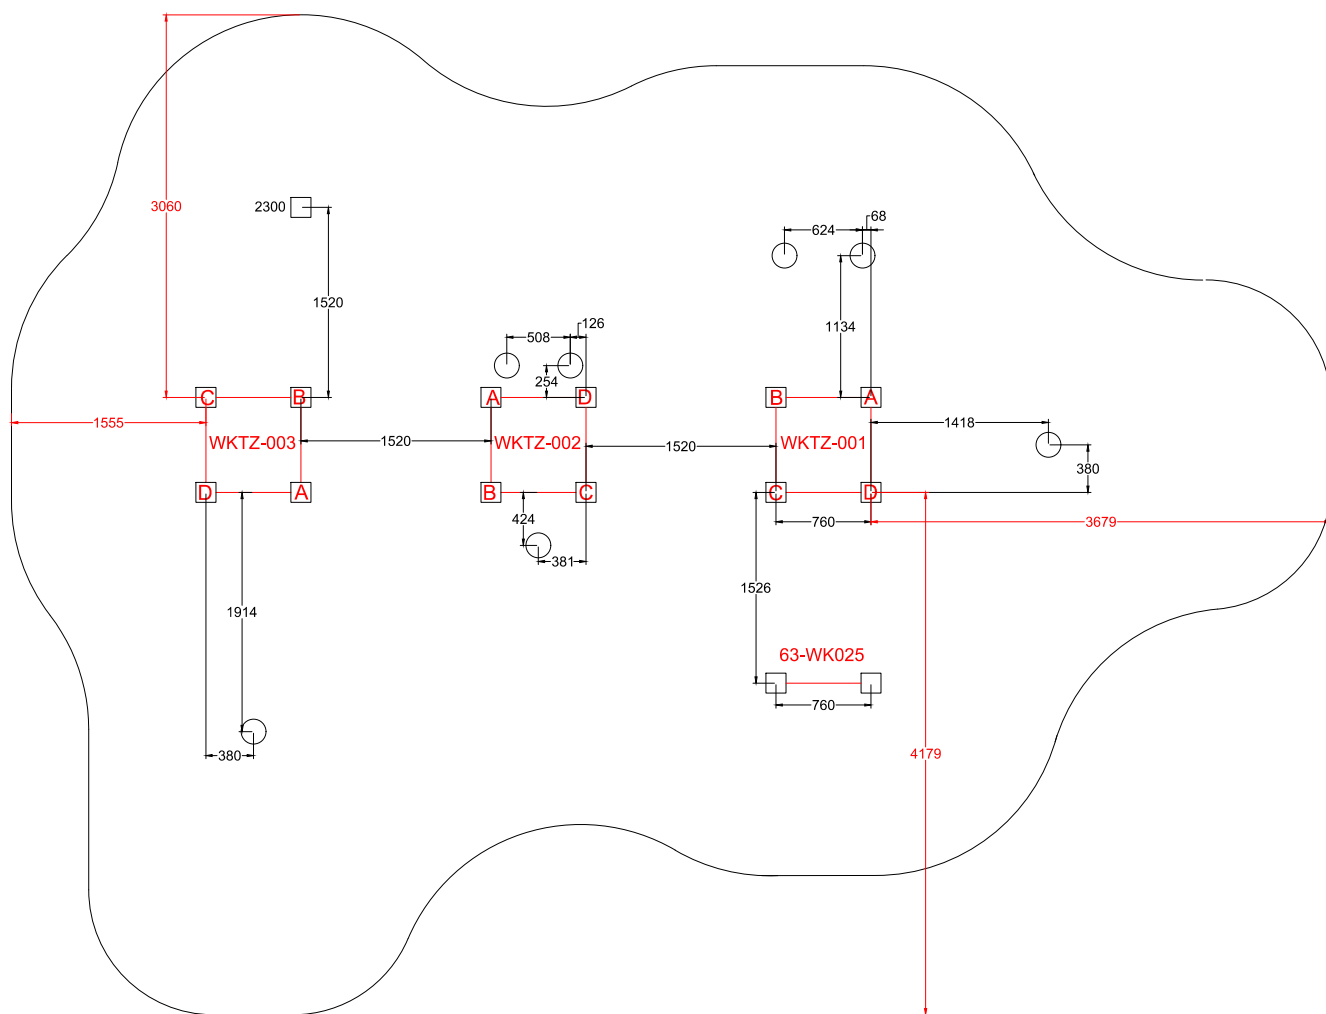


[mm]

Surface Mounted Installation

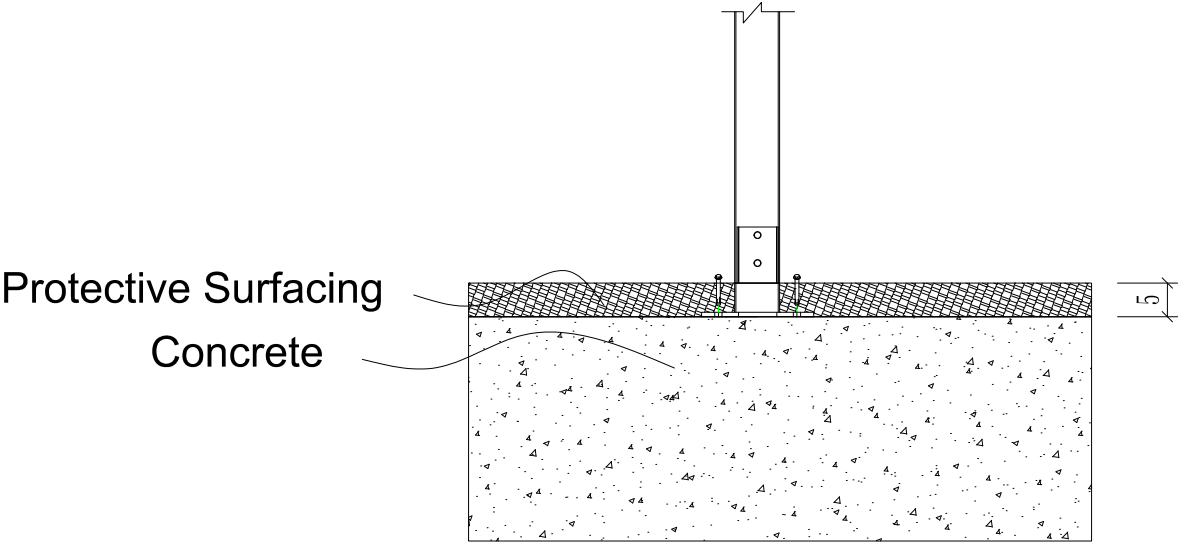

Inground Installation

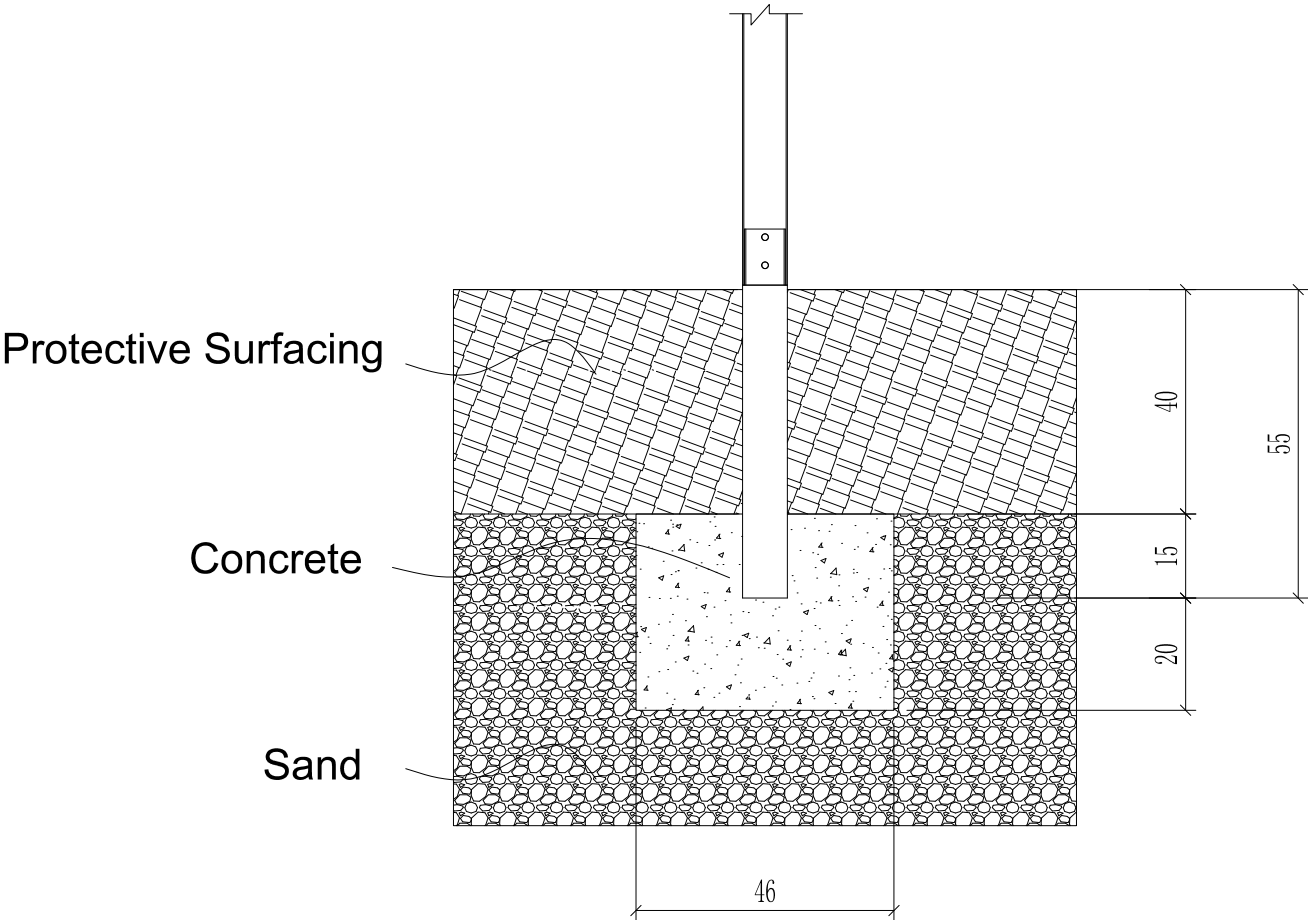

[cm]

Parts List


No.	Item	Description	Picture	Qty	
1	35-WKM230-001-131	80*80*H2292mm SHS Steel Post (Midnight)		1	
2	63-WK001	WiseKidz - 90cm Stainless Arch Net Climber		1	
3	63-WK011	WiseKidz - 120cm Stainless Rung Ladder		1	
4	63-WK014	WiseKidz - 120cm Stainless Fireman's Pole		1	
5	63-WK017	WiseKidz - Stainless Net Climber		1	
6	63-WK024-10	WiseKidz - Stainless Challenge Ladder 1520mm (Silver Gray)		1	
7	63-WK025-131	WiseKidz - Steel Post Entry Ladder (Midnight & Stainless)		1	
8	64-WK001-131	WiseKidz - WPC Deck (Midnight)		3	
9	65-WKP001A-10	WiseKidz - 90cm Single Slide (Silver Gray)		1	
10	65-WKP002A-10	WiseKidz - 120cm Single Slide (Silver Gray)		1	
11	66-WK001-128129	WiseKidz - PE Single Slide Hood (True Blue & Garnet)		2	
12	66-WK002-128129	WiseKidz - PE Climber Entry (True Blue & Garnet)		4	
13	66-WK003-128129	WiseKidz - PE Climber Side Entry (True Blue & Garnet)		1	
14	66-WK004-128129	WiseKidz - PE Bay Window Panel (True Blue & Garnet)		1	
15	66-WK009-121129	WiseKidz - PE Crawl Tunnel Entry (Orange & Garnet)		2	
16	66-WK014-121128	WiseKidz - PE Car Panel (Orange & True Blue)		1	


17	67-WK001-10	Wise Kidz - ϕ 600mm Crawl Tunnel L1410mm (Silver Gray)		1	
18	67-WK007-10	WiseKidz - 300mm Inclined Net Bridge L1520mm (Silver Gray)		1	
19	69-WK001-128131	WiseKidz - PE Gable Roof (True Blue)		1	
20	70-21001-131	Single Slide Inground Footer (Midnight)		2	
21	70-WK002-V55-131	WiseKidz - Steel Post Inground Footer H55cm		15	
22	70-WK005-V55-10	WiseKidz - 38mm Post Inground Footer H55cm (Silver Gray)		7	
23	72-WK001-128129	WiseKidz - Post Topper (True Blue & Garnet)		1	
24	WKTZ-001-131	80*80*H1992mm(4pcs) WiseKidz - Galvanized Steel Post Set 900mm Deck w/o Roof (Midnight)		1	
25	WKTZ-002-131	80*80*H2292mm(3pcs)+H2792mm(1pc) WiseKidz - Galvanized Steel Post Set 1200mm Deck w/o Roof (Midnight)		1	
26	WKTZ-003-131	80*80*H2792mm(4pcs) WiseKidz - Galvanized Steel Post Set 1200mm Deck w/Roof (Midnight)		1	

Hardware List

No.	Item	Description	Qty	
1	63-WK001WJB	WiseKidz - 90cm Stainless Arch Net Climber - Hardware Package	1	
2	63-WK011WJB	WiseKidz - 120cm Stainless Rung Ladder - Hardware Package	1	
3	63-WK014WJB	WiseKidz - 120cm Stainless Fireman's Pole - Hardware Package	1	
4	63-WK017WJB	WiseKidz - Stainless Net Climber - Hardware Package	1	
5	63-WK024WJB	WiseKidz - Stainless Challenge Ladder 1520mm - Hardware Package	1	
6	63-WK025WJB	WiseKidz - Steel Post Entry Ladder - Hardware Package	1	
7	64-WK001WJB	WiseKidz - WPC Square Deck 760mm - Hardware Package	3	
8	65-WKP001AWJB	WiseKidz - 90cm Single Slide - Hardware Package	1	
9	65-WKP002AWJB	WiseKidz - 120cm Single Slide - Hardware Package	1	
10	66-WK001WJB	WiseKidz - PE Single Slide Hood - Hardware Package	2	
11	66-WK002WJB	WiseKidz - PE Climber Entry - Hardware Package	4	
12	66-WK003WJB	WiseKidz - PE Climber Side Entry - Hardware Package	1	
13	66-WK004WJB	WiseKidz - PE Bay Window Panel - Hardware Package	1	
14	66-WK009WJB	WiseKidz - PE Crawl Tunnel Entry - Hardware Package	2	
15	66-WK014WJB	WiseKidz - PE Car Panel - Hardware Package	1	
16	67-WK001WJB	WiseKidz - ϕ 600mm Crawl Tunnel L1410mm - Hardware Package	1	

17	67-WK007WJB	WiseKidz - 300mm Inclined Net Bridge L1520mm - Hardware Package	1	
18	69-WK001WJB	WiseKidz - PE Gable Roof - Hardware Package	1	
19	70-21001WJB	Single Slide Inground Footer -Hardware Package	2	
20	70-WK002- V55WJB	WiseKidz - Steel Post Inground Footer H55cm - Hardware Package	15	
21	70-WK005- V55WJB	Wise Kidz - 38mm Post Inground Footer H55cm - Hardware Package	7	
22	72-WK001WJB	WiseKidz - Post Topper - Hardware Package	1	
		Gand total	50	

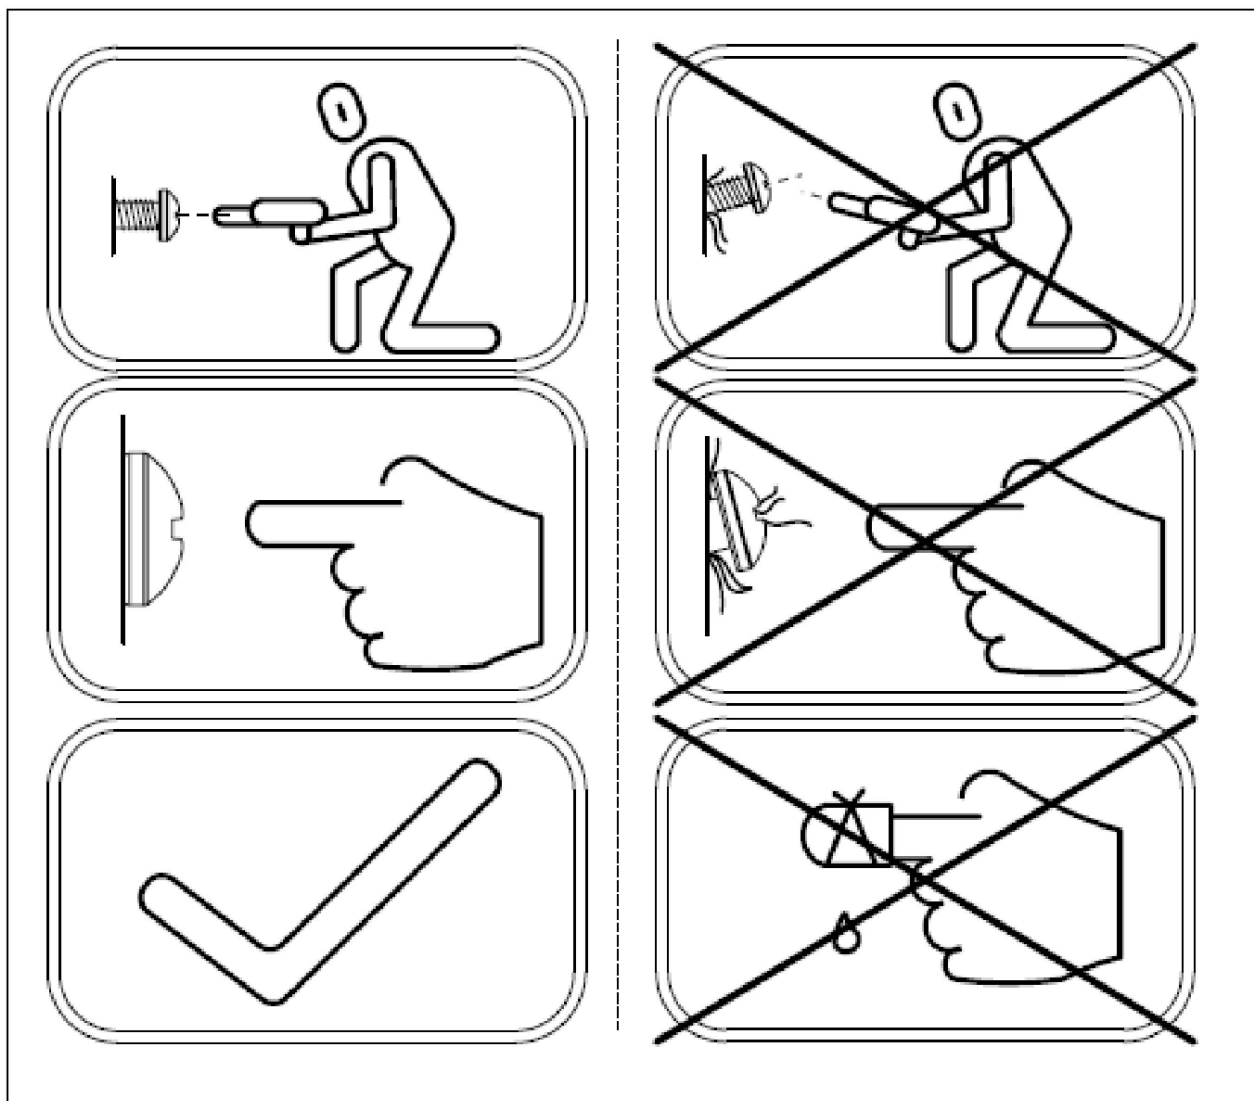

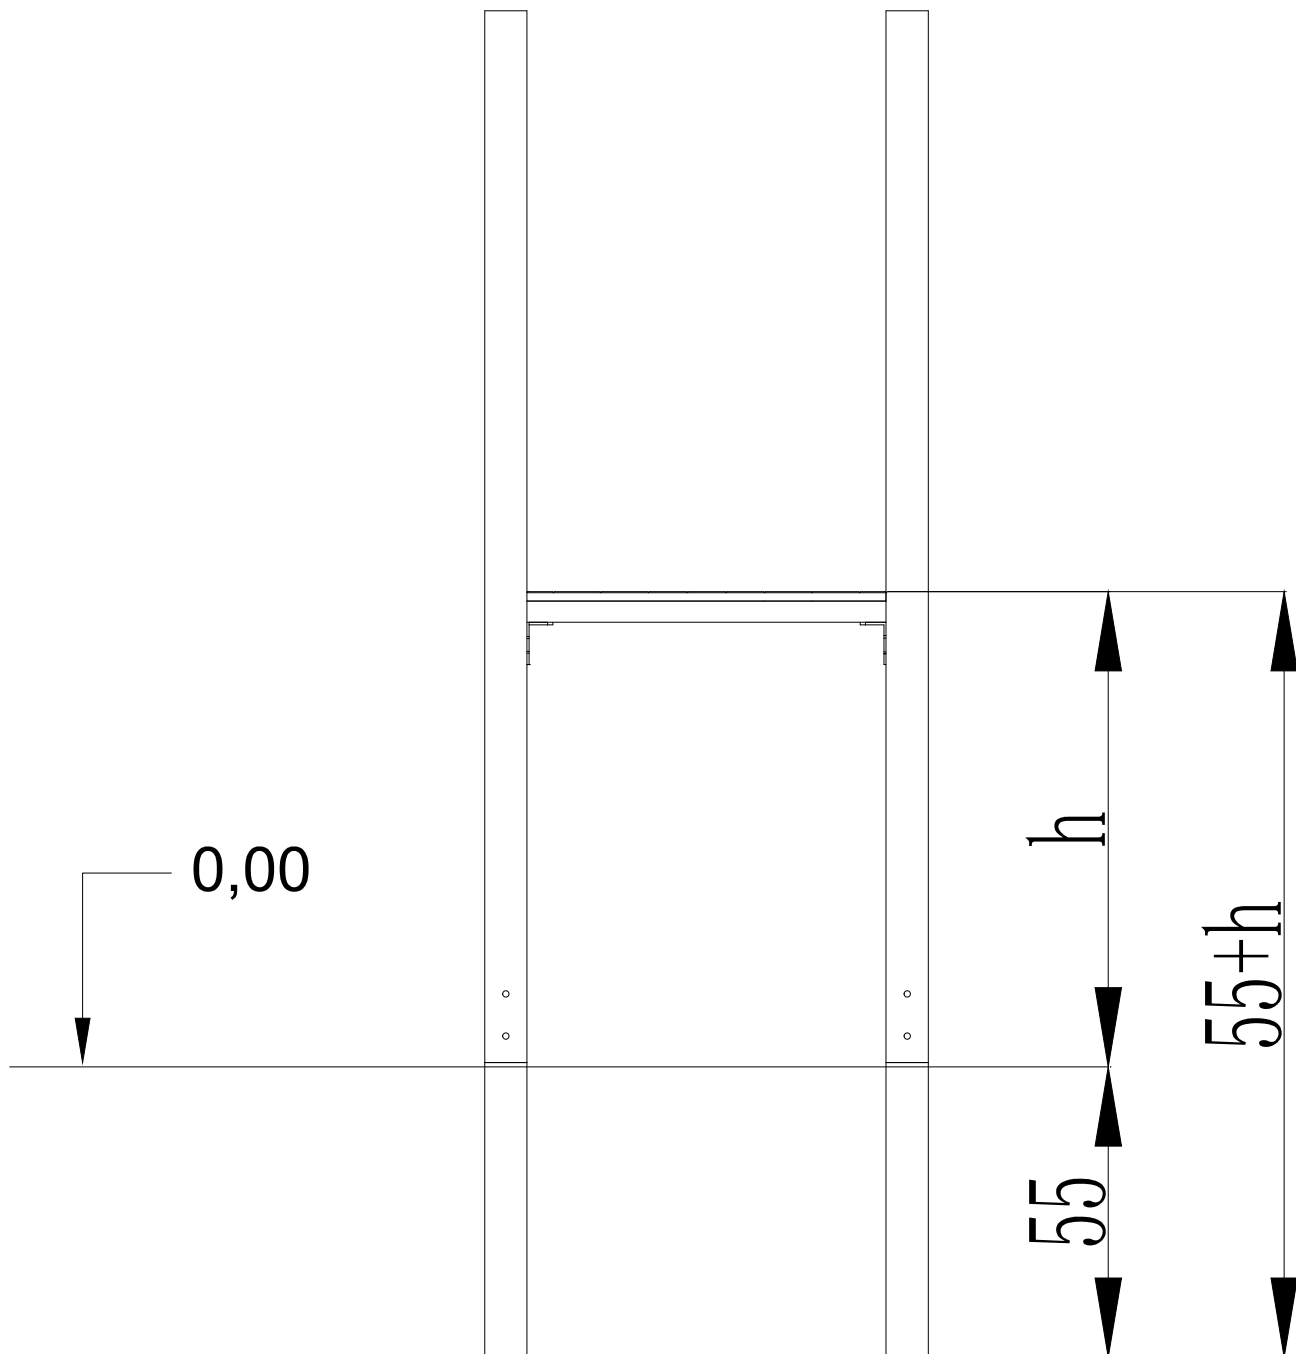

[cm]


Installation Steps:

1: As shown in the figure, connect the post to the surface mount plate, and connect and fasten them with the corresponding hardware.

2: Use expansion bolts to connect the installed post and surface mount plate to the ground.


70-WK002-V55 WiseKidz - Steel Post Inground Footer H55cm

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M10*120	2
2	FLAT WASHER	10.5/25*T1.5	4
3	LOCK NUT	M10	2
4	PLASTIC CAP	φ34 M10	2

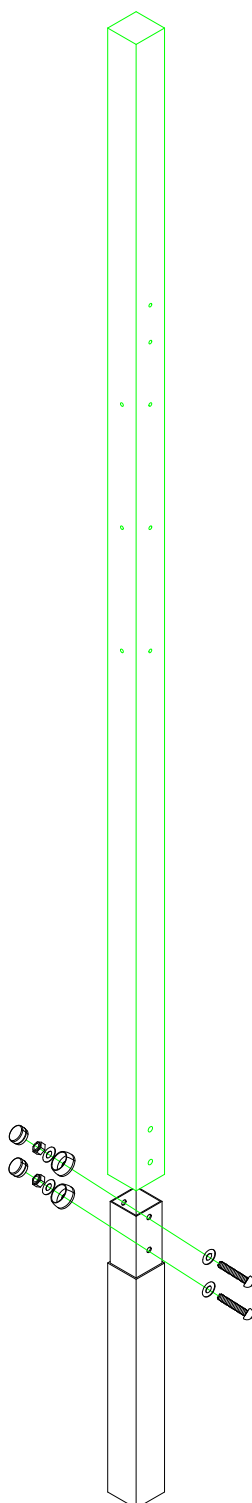

Post Position Diagram

64-WK001 WiseKidz - WPC Deck

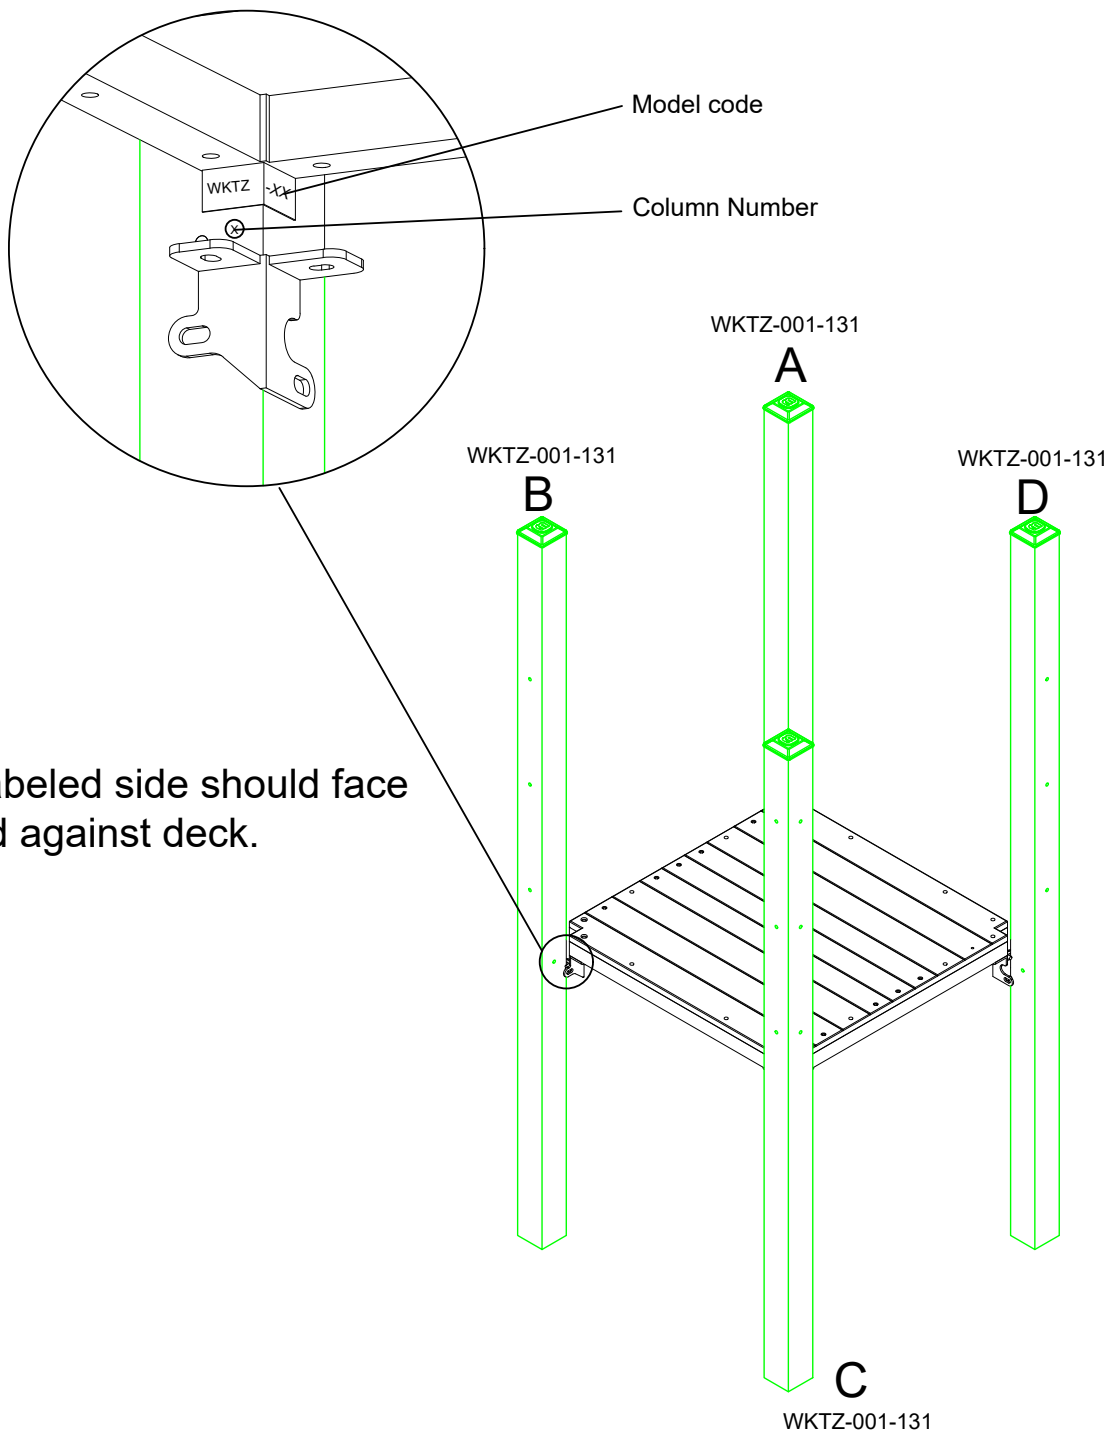


Installation Steps:

1: Use custom corner braces to align the connection holes of the deck and the post, then use corresponding hardware to connect and fasten them.

64-WK001 WiseKidz - WPC Deck

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*70	8
2	FLAT WASHER	8.5/23.5*T1.5	8
3	LOCK NUT	M8	8
4	PLASTIC CAP	Ø10*34	8
5	TAMPER RESISTANT TORX-BOLT	M8*25	8

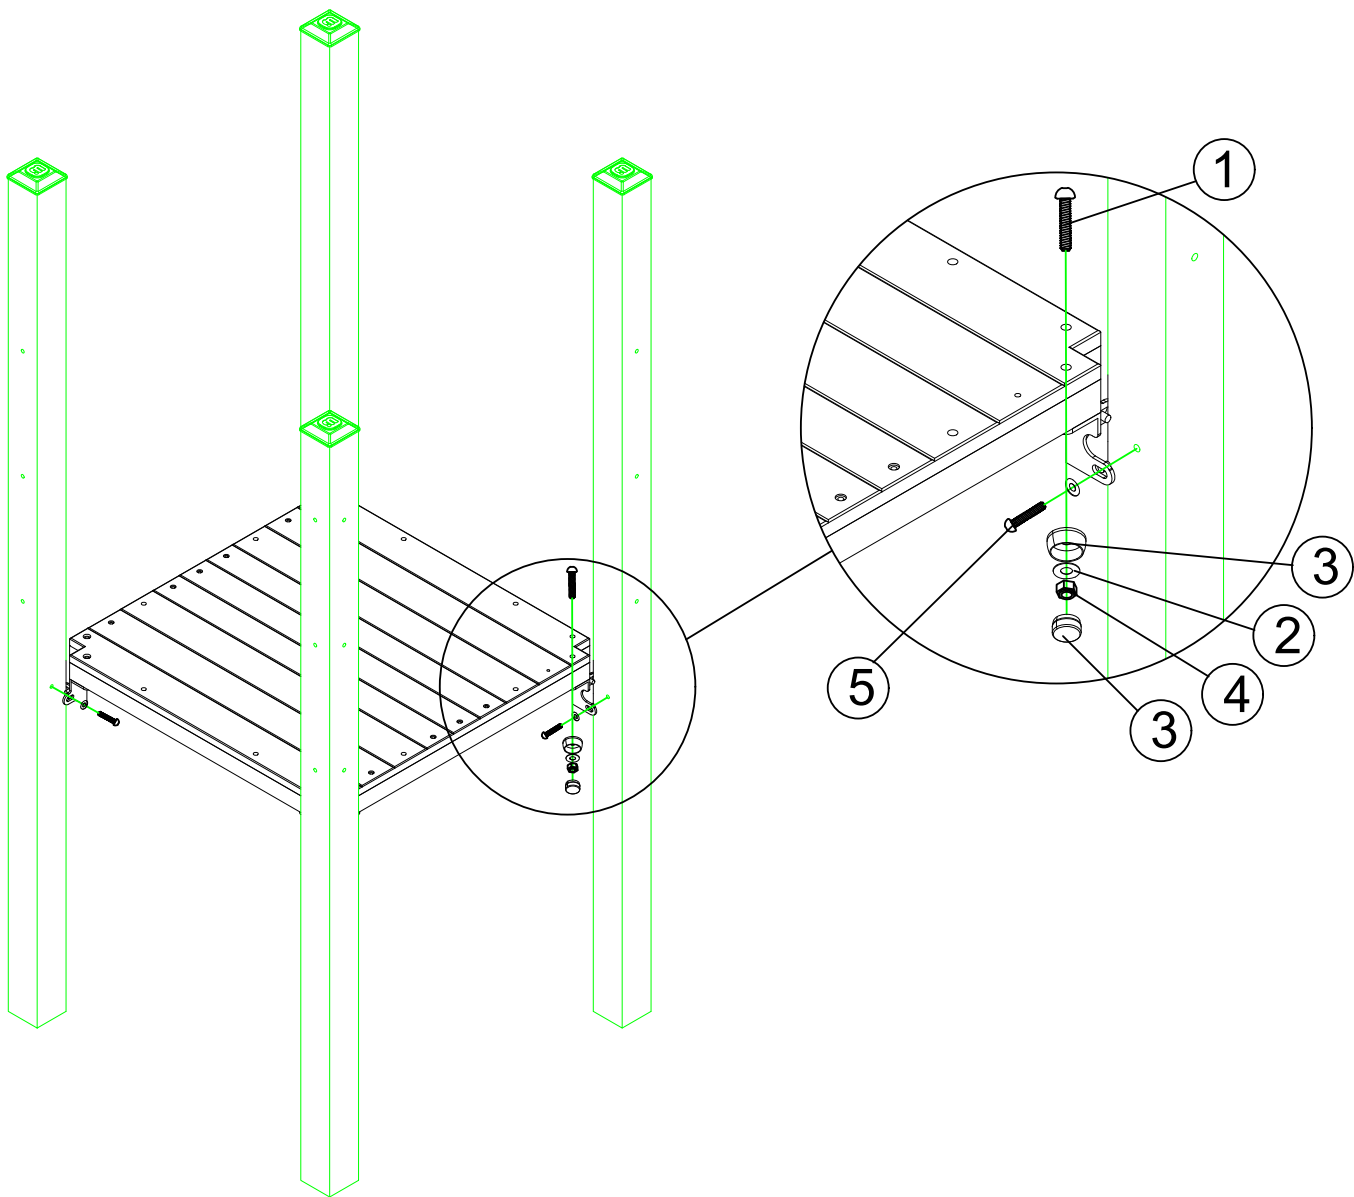


Installation Steps:

1: Place the net climber under the deck, align the connection holes, and use corresponding hardware to connect and fasten them.

1: Align the handrail with the center of the post, and use corresponding hardware to connect and fasten it.

67-WK007 WiseKidz - 300mm Inclined Net Bridge L1520mm

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*70	4
2	FLAT WASHER	8.5/23.5*T1.5	4
3	LOCK NUT	M8	4
4	PLASTIC CAP	φ34 M10	4
5	Stainless Steel Hex Self-drilling Screw	M8*50	8

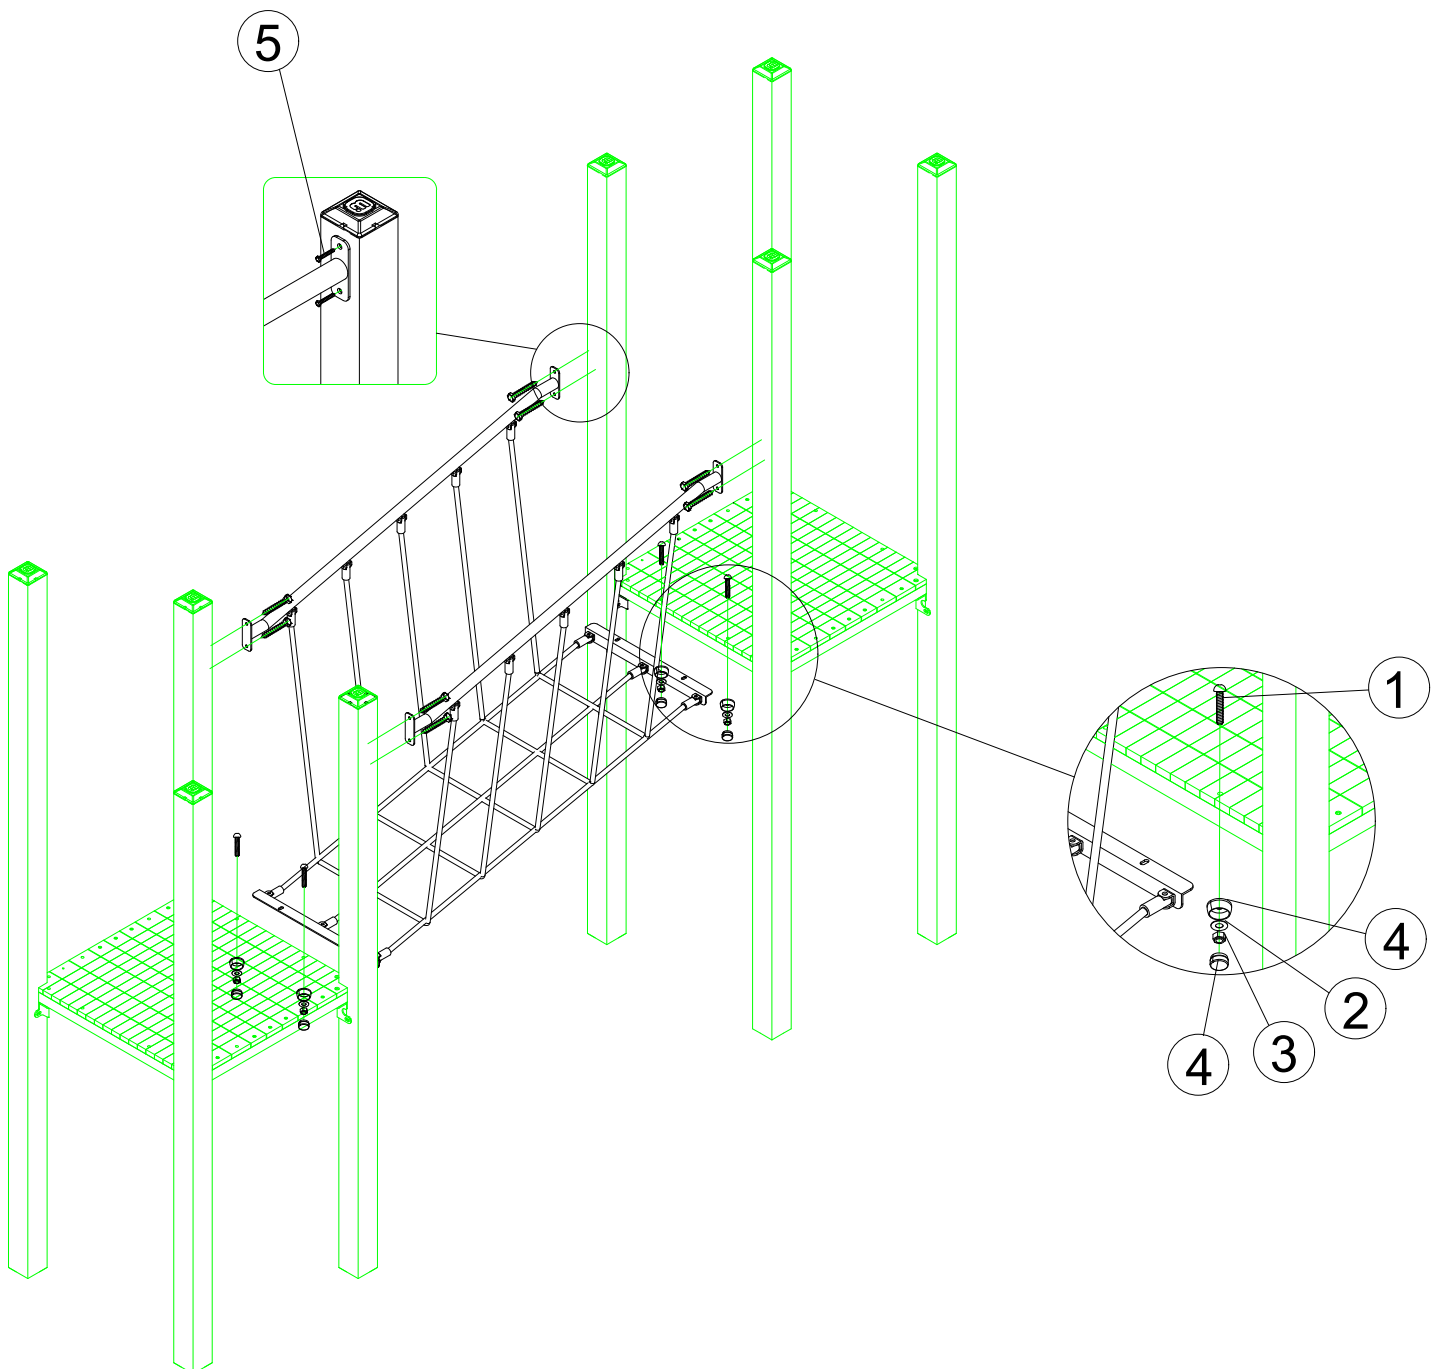


Installation Steps:

1: Align the connection holes of the panel and the crawl tunnel, then use corresponding hardware to connect and fasten them.

67-WK001 Wise Kidz - 600mm Crawl Tunnel L1410mm

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	20
2	FLAT WASHER	8.5/23.5*T1.5	40
3	LOCK NUT	M8	20
4	PLASTIC CAP	Ø34 M10	20

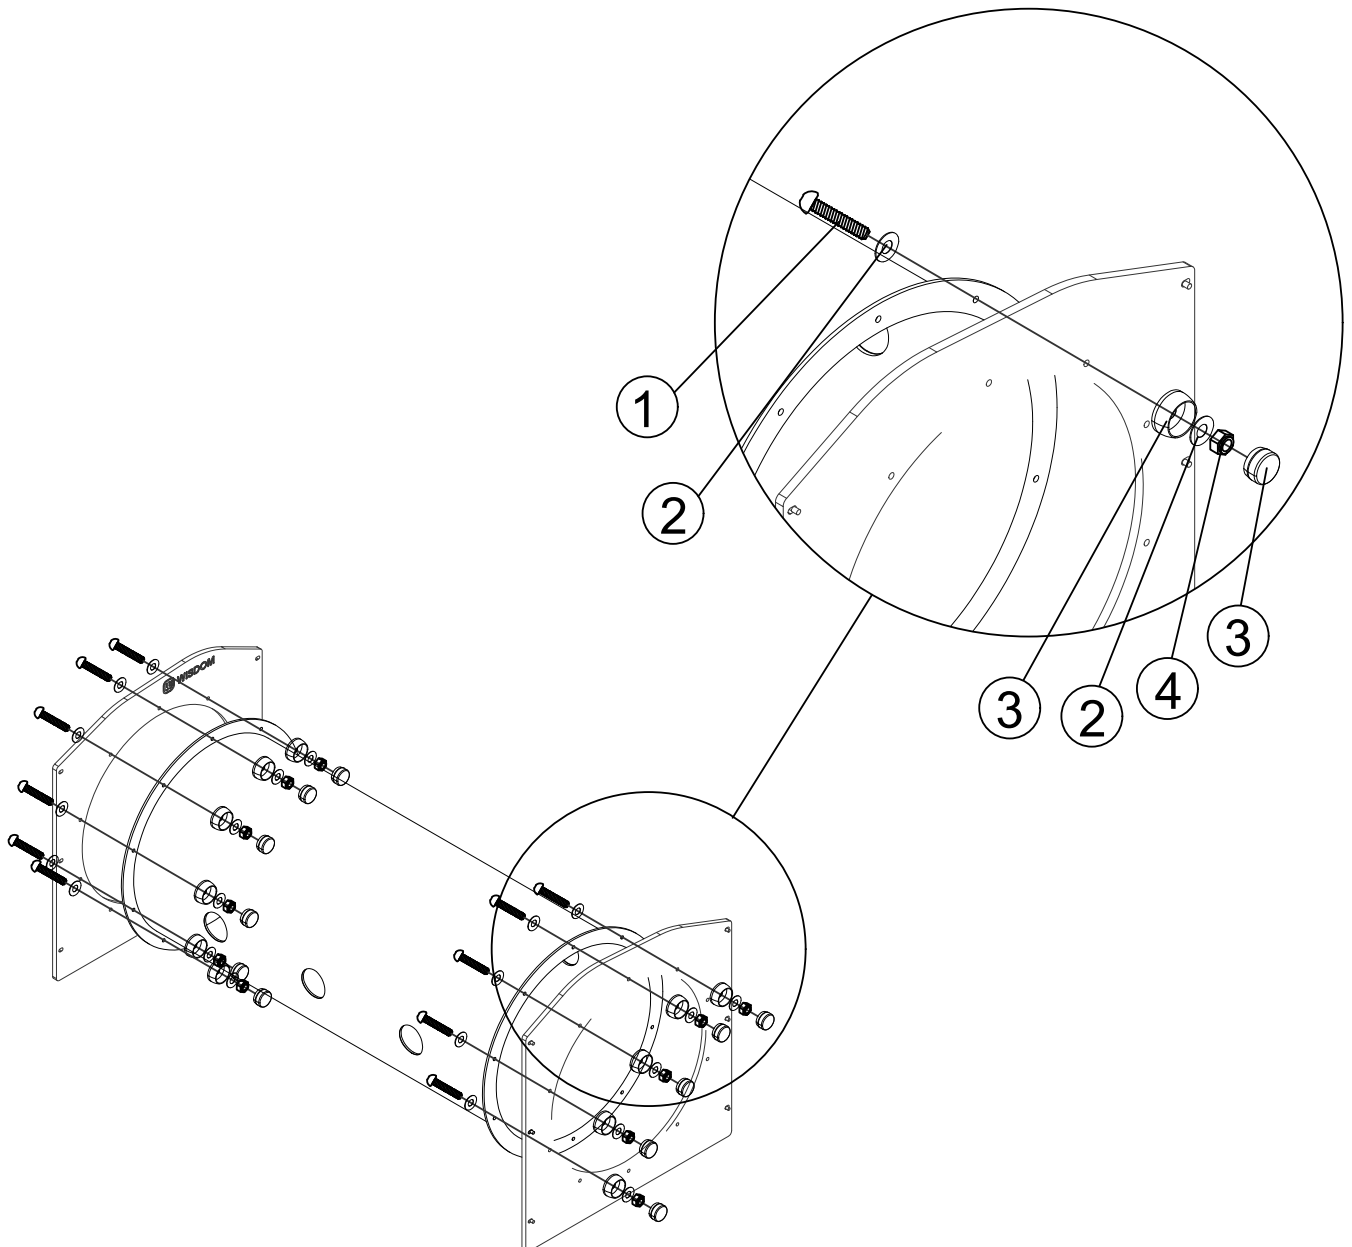


Installation Steps:

- 1: Align footer with climber holes and secure with corresponding hardware.
- 2: Place Arch Net Climber below the deck, align the connection holes, and secure with corresponding hardware.

63-WK001 WiseKidz - 90cm Stainless Arch Net Climber

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*75	2
2	FLAT WASHER	8.5/23.5*T1.5	2
3	LOCK NUT	M8	2
4	PLASTIC CAP	Ø10*34	4
5	TAMPER RESISTANT TORX-BOLT	M8*50	2
6	SPRING WASHER	M8*2.5	4

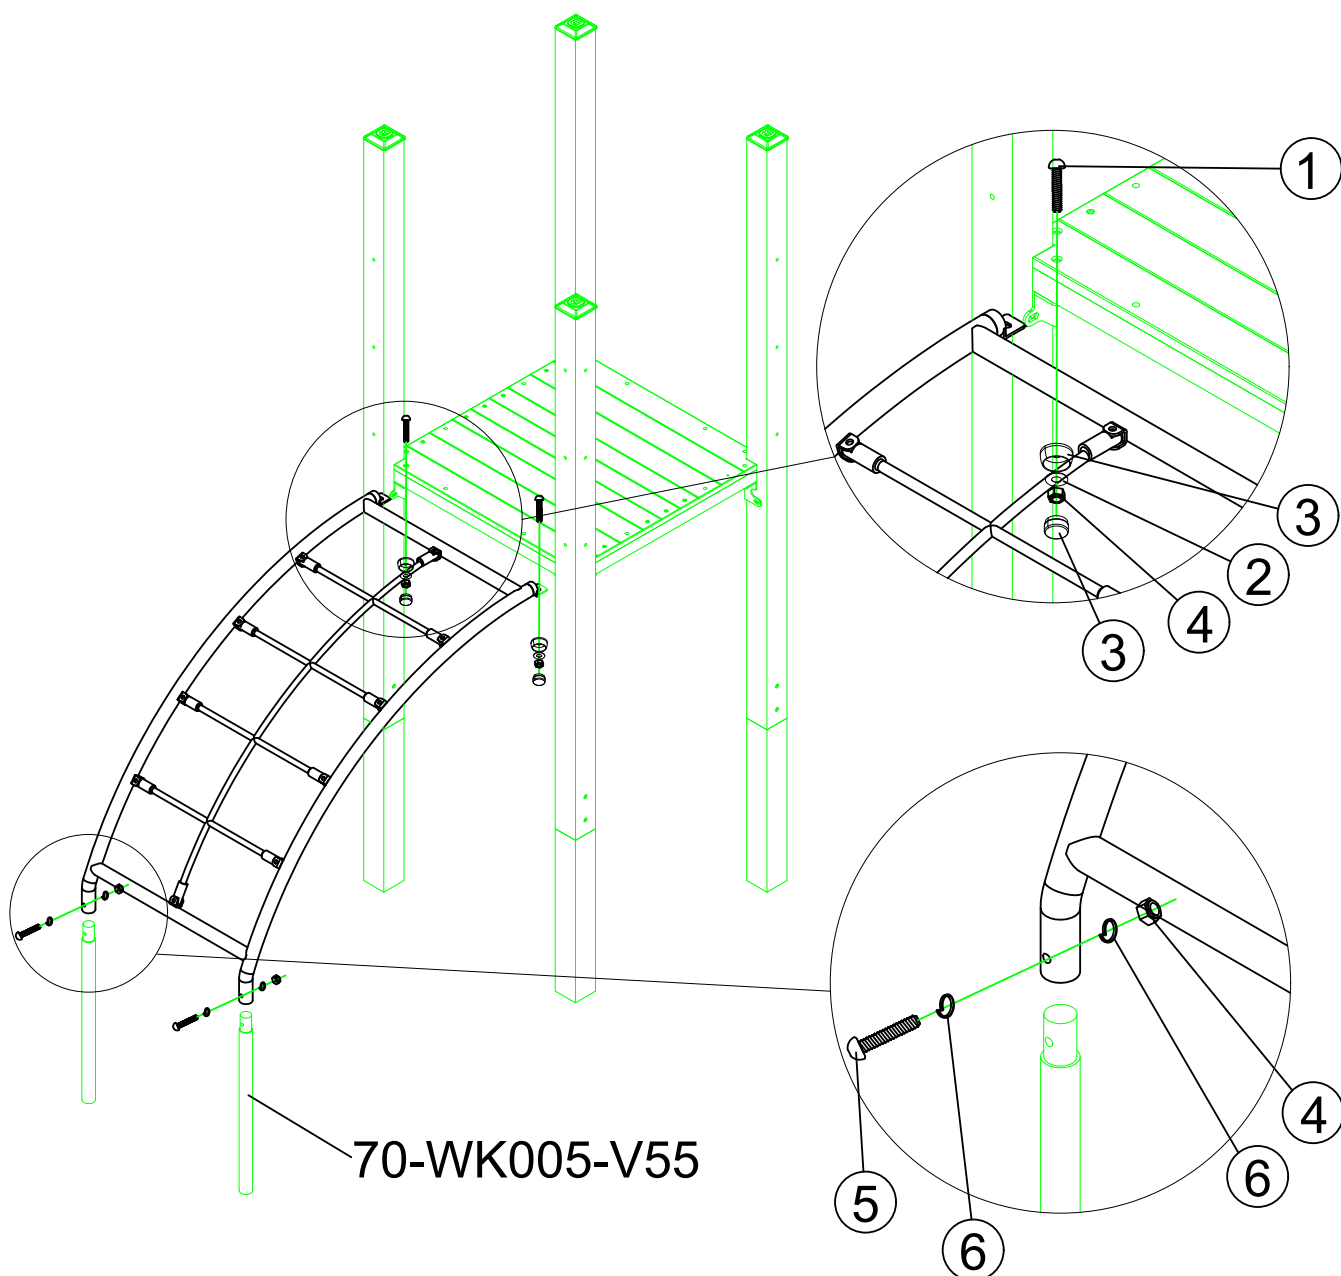


Installation Steps:

1:As shown in the figure, insert the inground footer into the fireman's pole sleeve, then secure with corresponding hardware.

63-WK014 WiseKidz - 120cm Stainless Fireman's Pole 1-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	SPRING WASHER	M8*2.5	4
3	LOCK NUT	M8	2

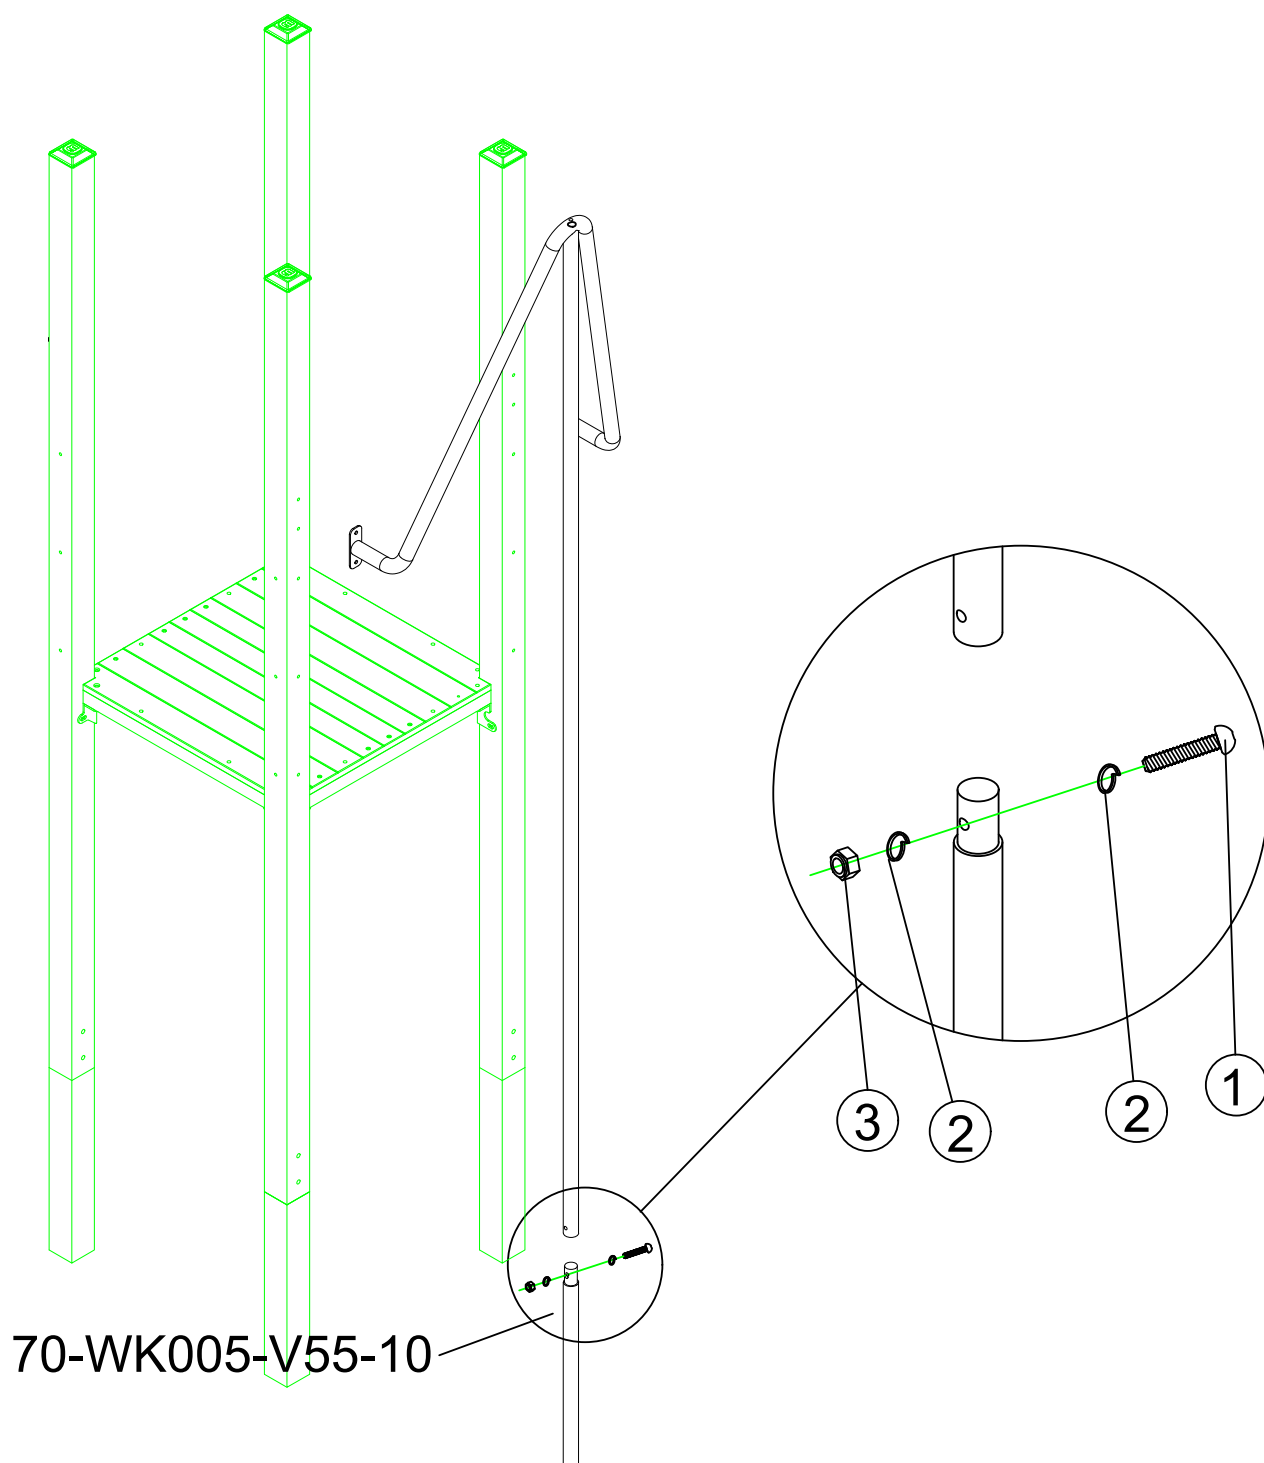


Installation Steps:

1:As shown in the figure, insert the inground footer into the fireman's pole sleeve, then secure with corresponding hardware.

63-WK014 WiseKidz - 120cm Stainless Fireman's Pole 2-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*25	4
2	FLAT WASHER	8.5/23.5*T1.5	5
3	TAMPER RESISTANT TORX-BOLT	M8*55	4

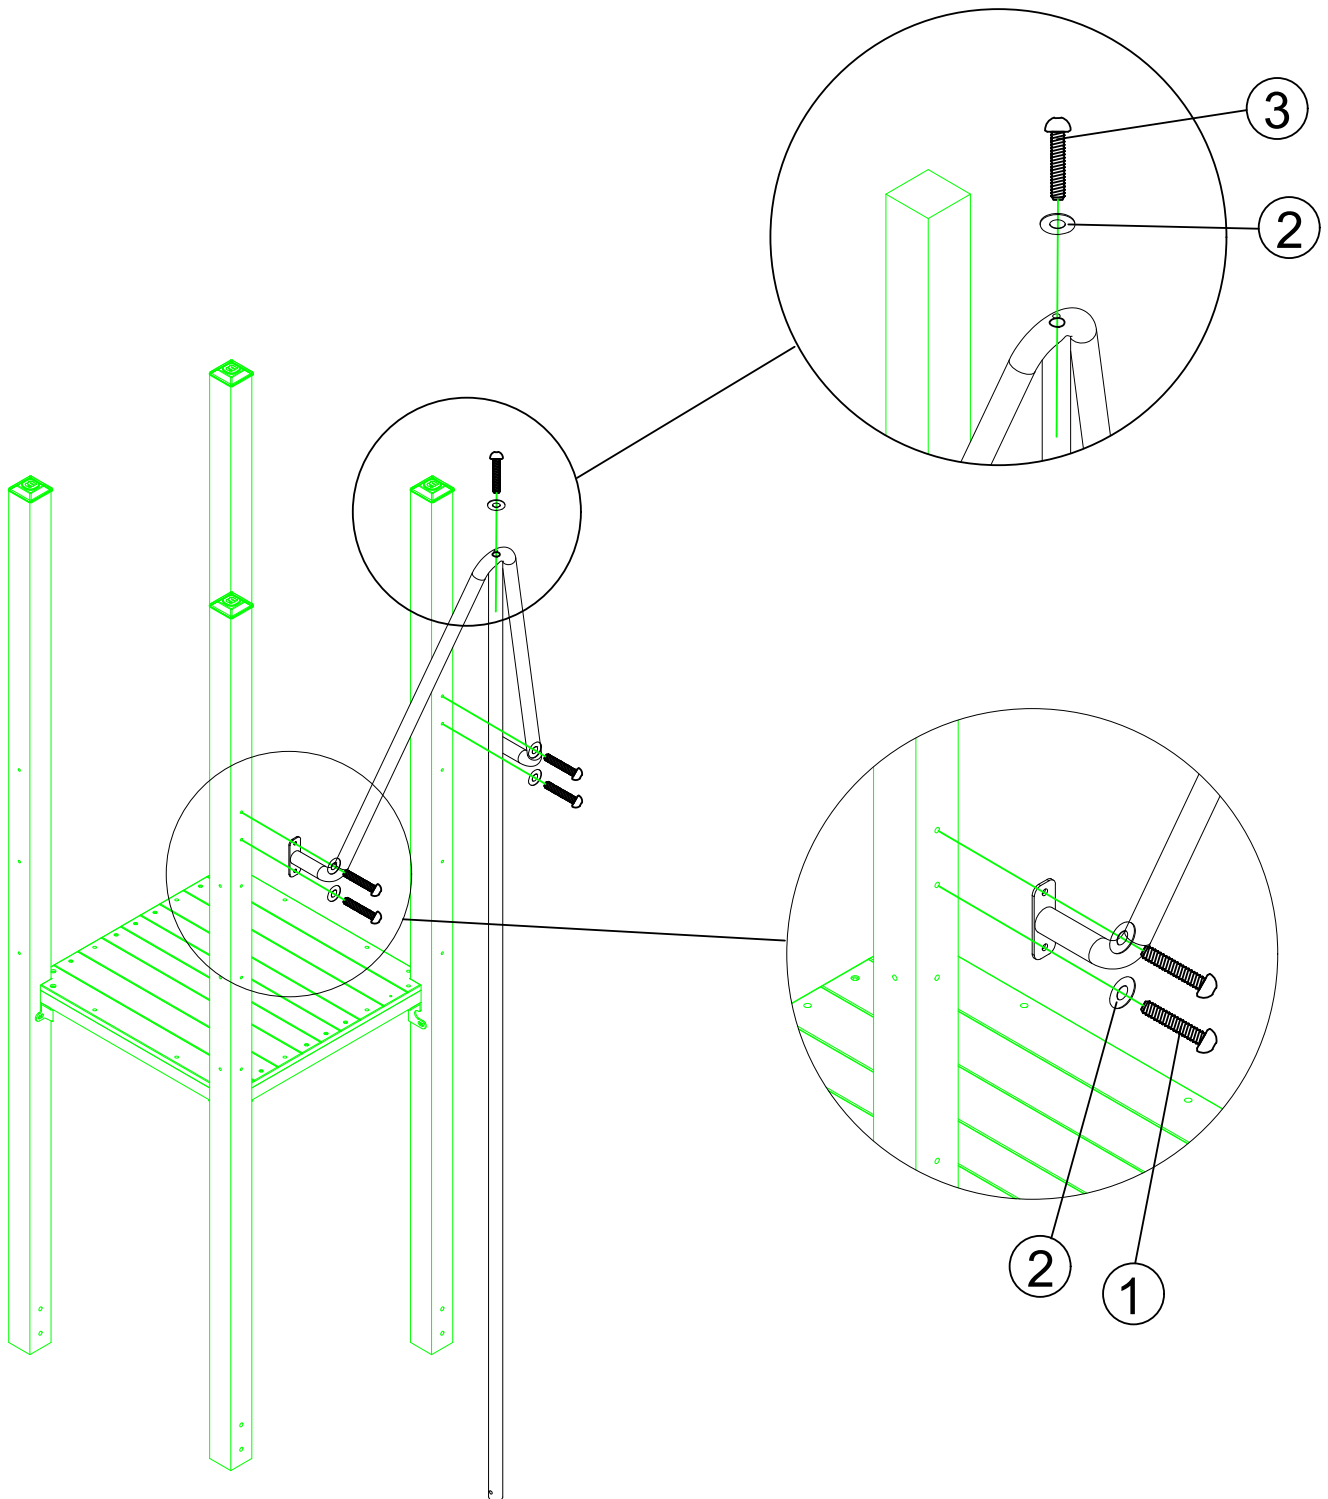


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	SPRING WASHER	M8*2.5	4
3	LOCK NUT	M8	2

Installation Steps:

1: Insert inground footer into climber sleeve and secure with corresponding hardware.

2: Use expansion bolts to secure the buried anchor to the ground.

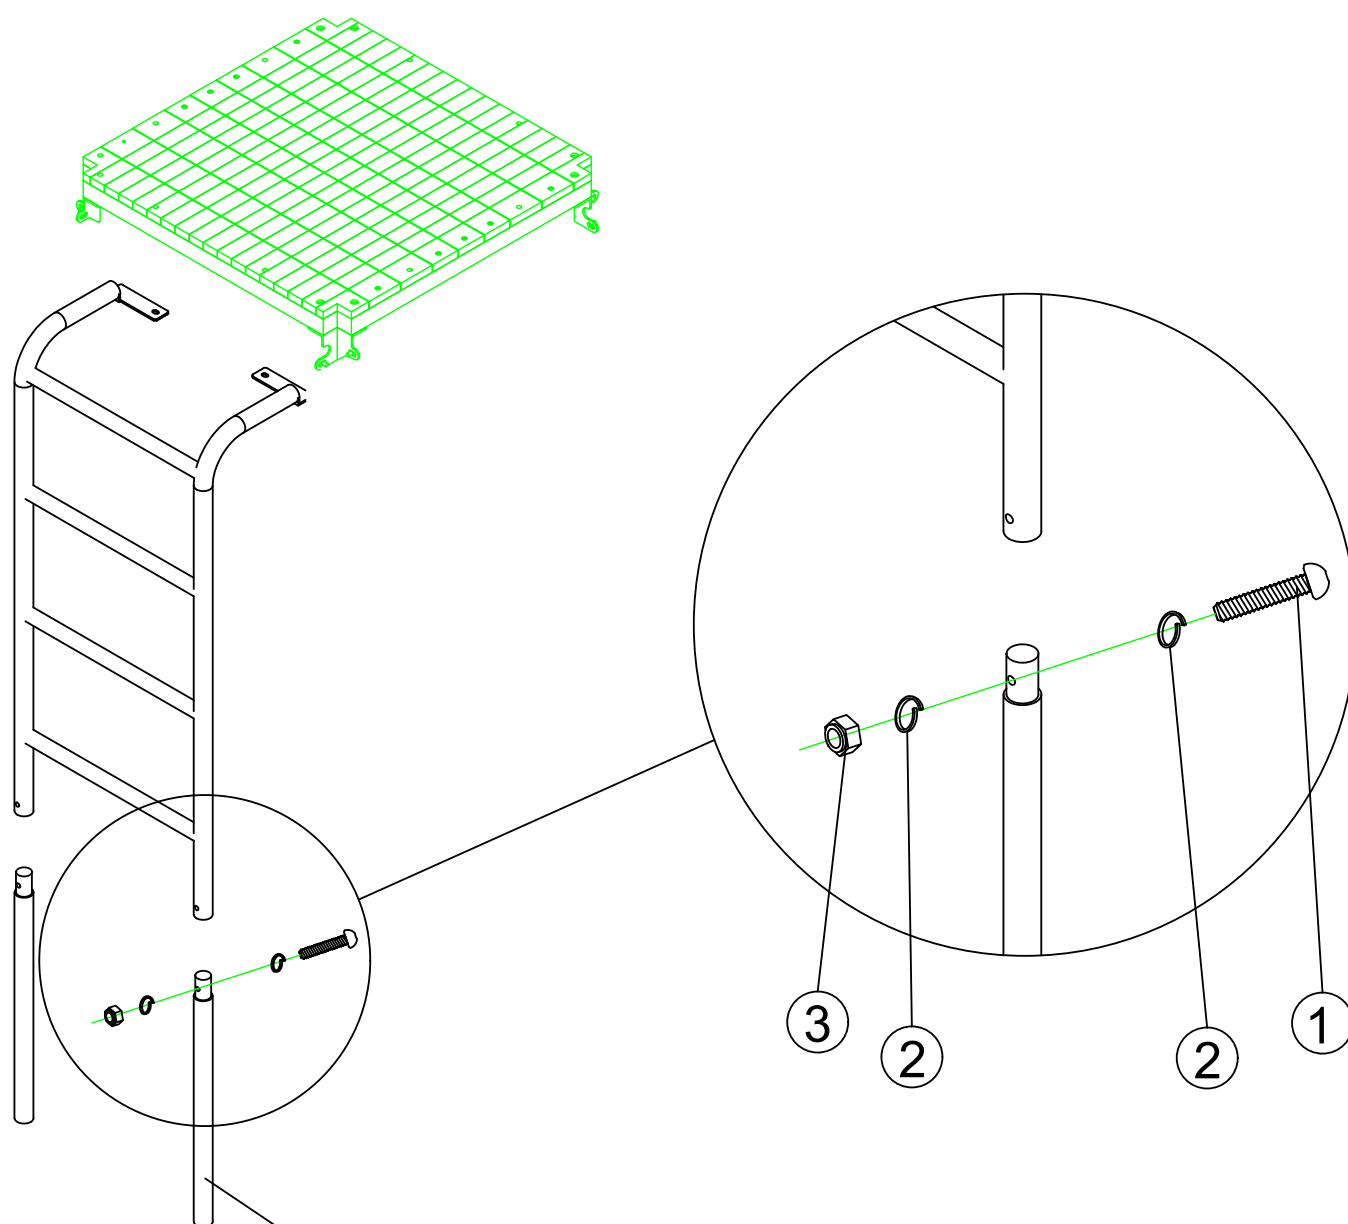

70-WK005-V55


63-WK011 WiseKidz - 120cm Stainless Rung Ladder 2-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	FLAT WASHER	8.5/23.5*T1.5	4
3	LOCK NUT	M8	2
4	PLASTIC CAP	φ34 M10	2

Installation Steps:

1: Remove the screws from the corresponding holes on the deck before install the rung ladder.

2: Place the ladder climber below the deck and align the connection holes, then secure with corresponding hardware.

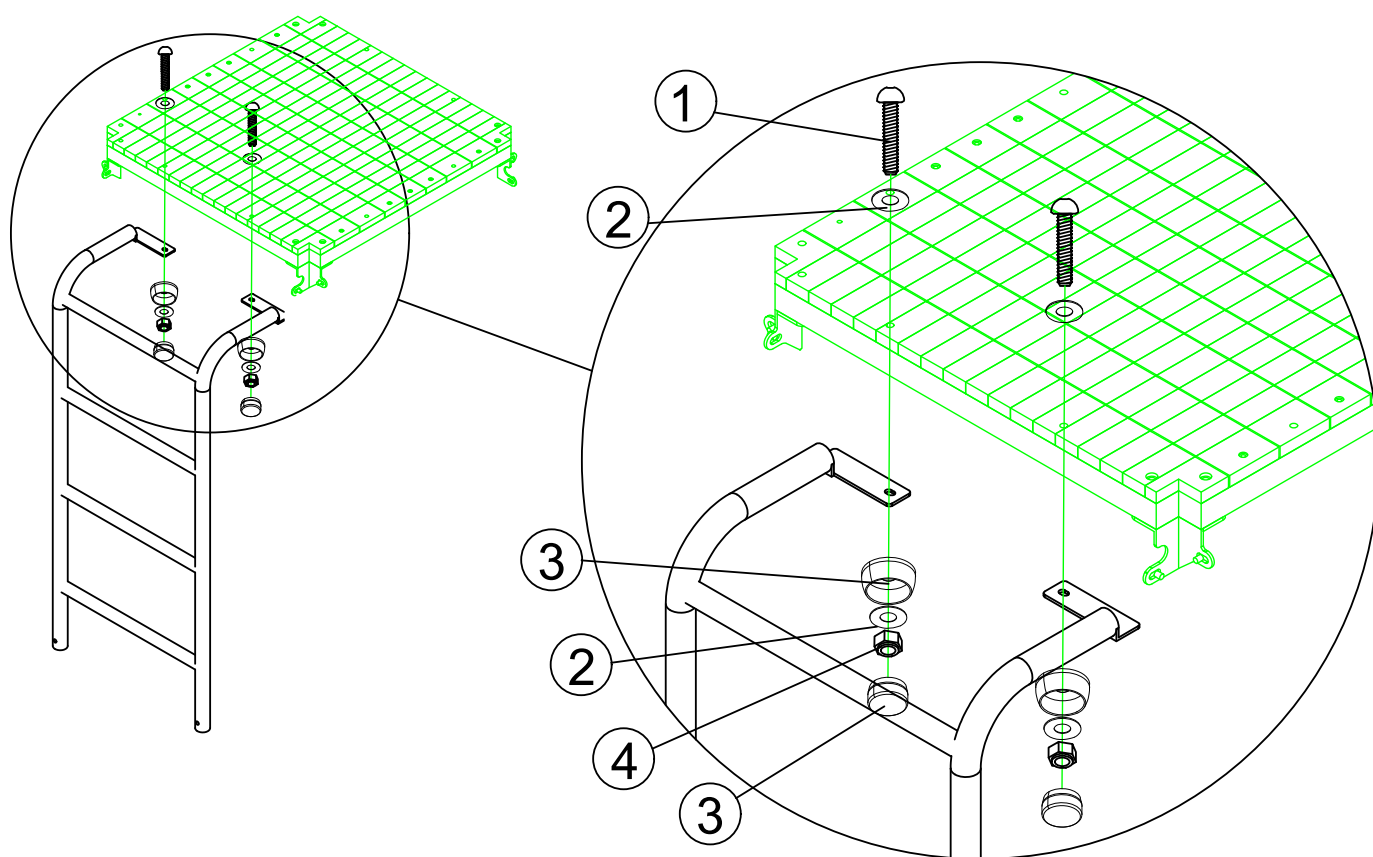


Installation Steps:

1. As shown figure, fix the inground footer with the climber by using corresponding hardware

63-WK017 WiseKidz - 120cm Stainless Upright Net Climber 1-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	SPRING WASHER	M8*2.5	4
3	LOCK NUT	M8	2

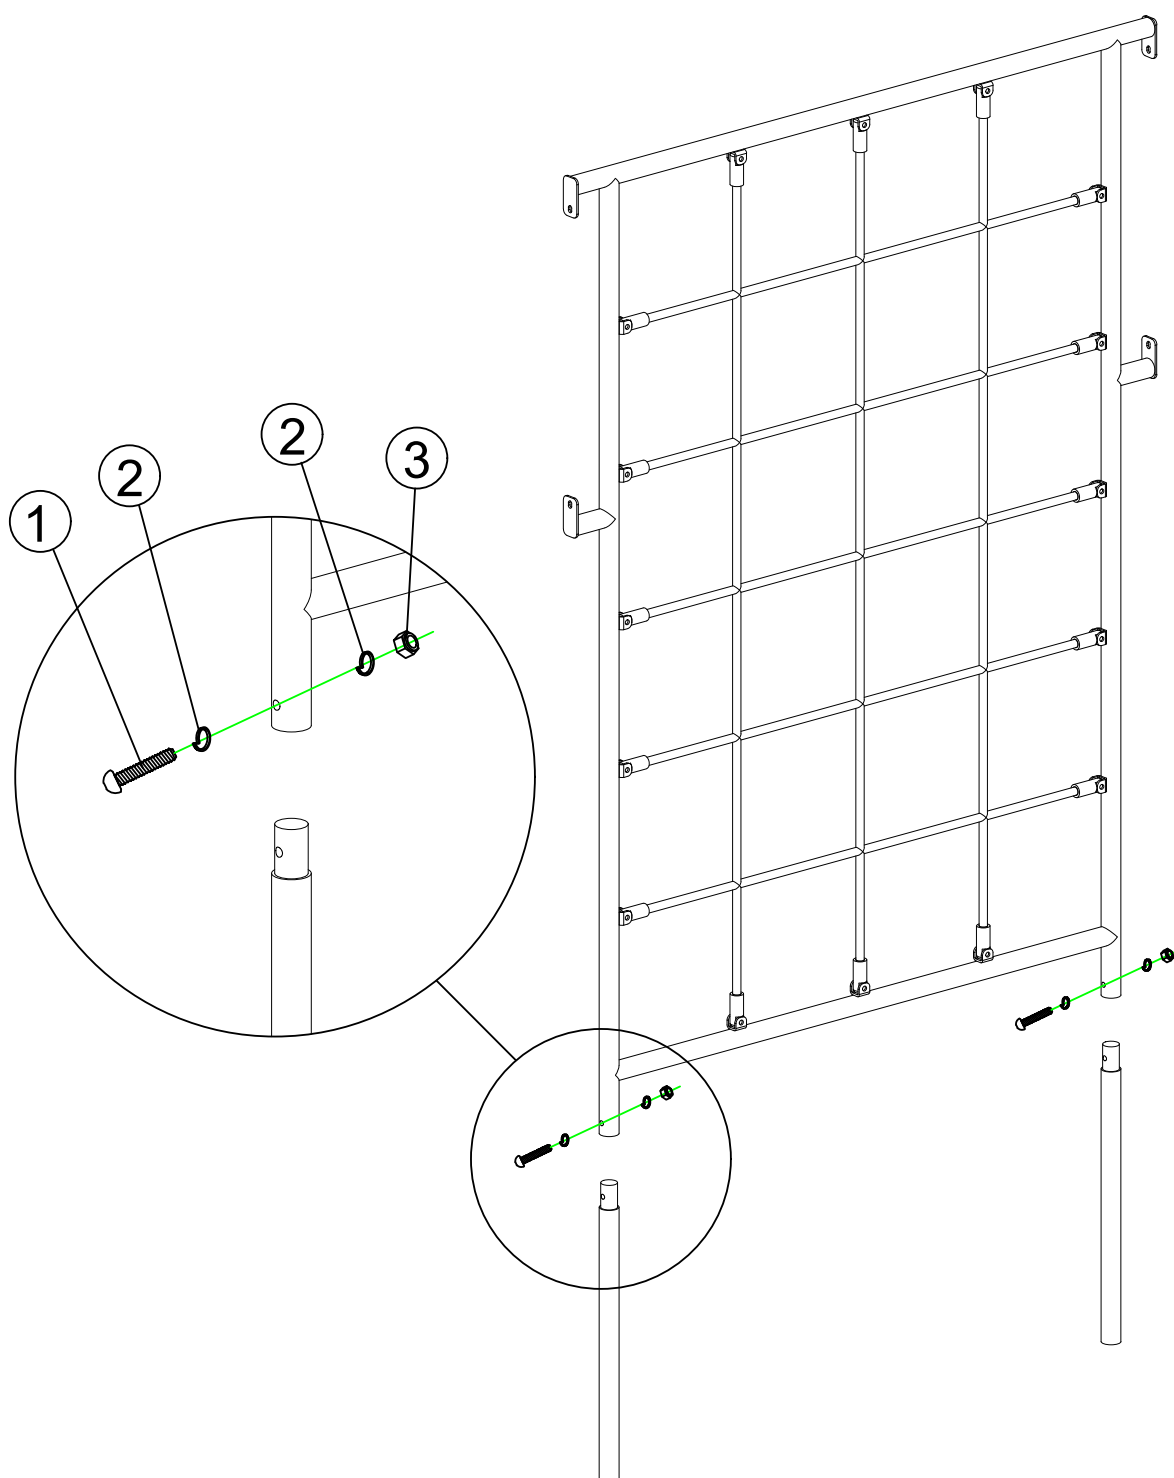


Installation Steps:

1.As shown figure, fix the climber with the posts by using corresponding hardware.

63-WK017 WiseKidz - 120cm Stainless Upright Net Climber 2-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	4
2	FLAT WASHER	8.5/23.5*T1.5	4

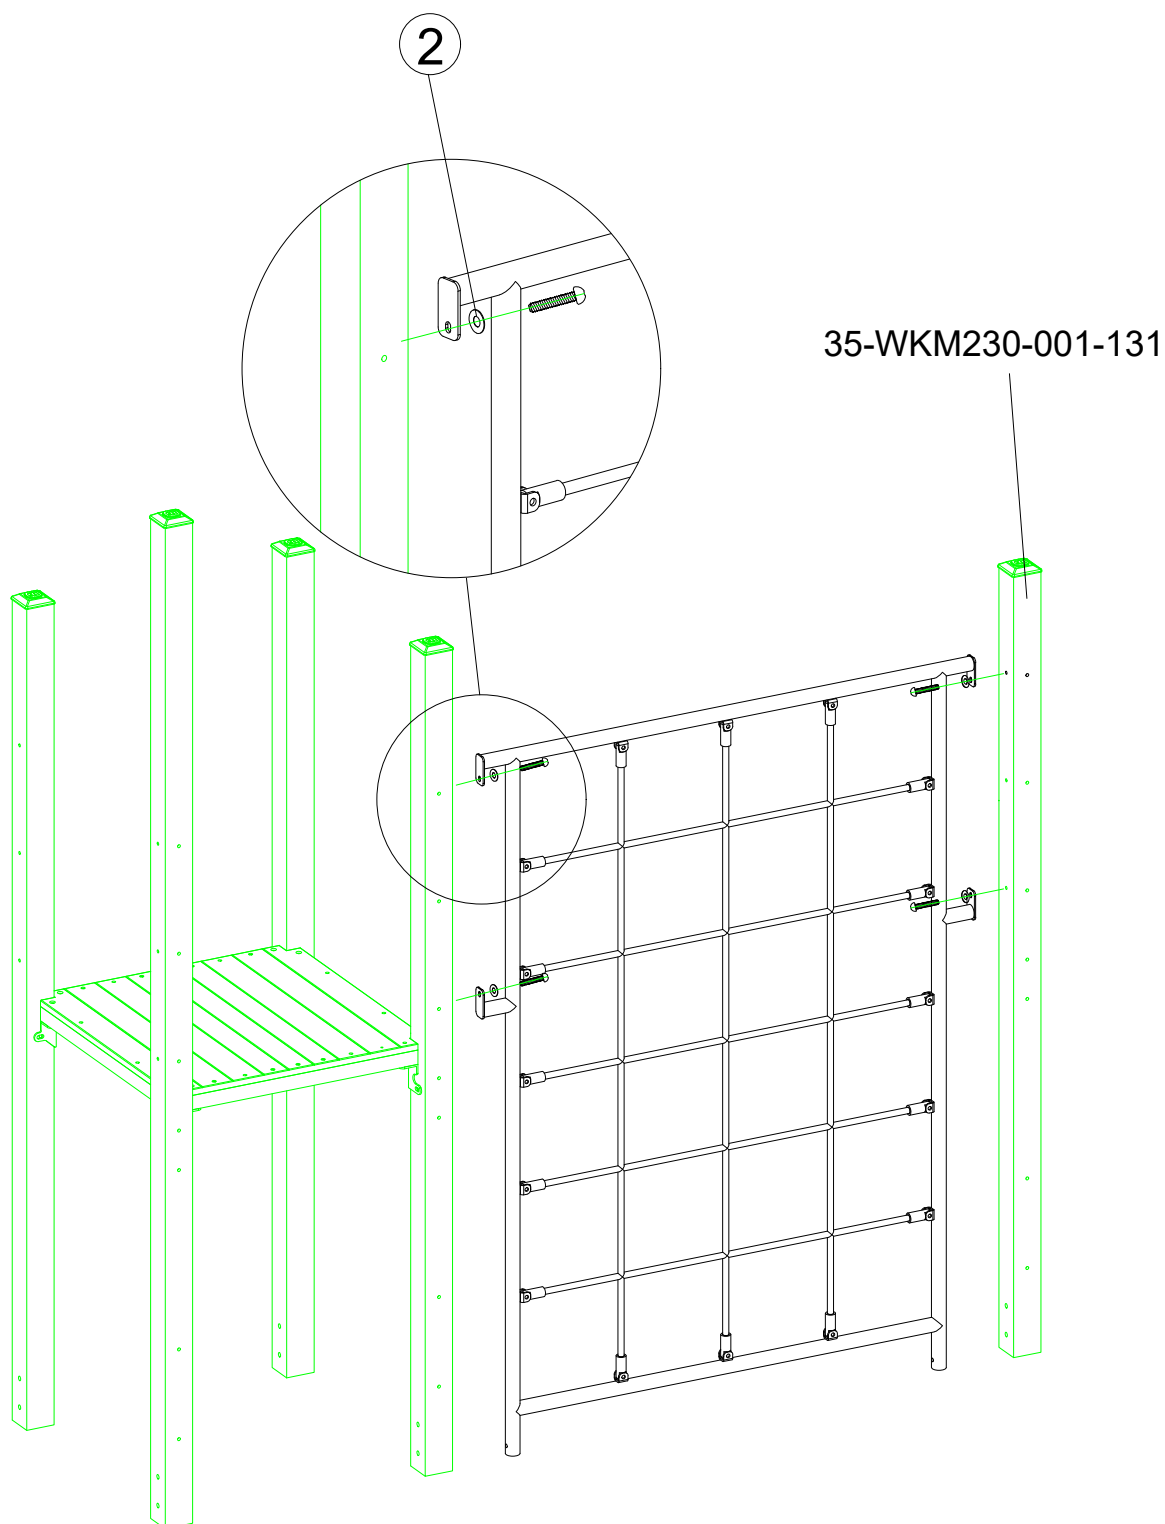


Installation Steps:

1: Align the challenge ladder with corresponding holes on the posts, insert corresponding hardware and tighten.

63-WK024 Wise Kidz - Stainless Challenge Ladder 1520mm

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	8
2	FLAT WASHER	8.5/23.5*T1.5	8

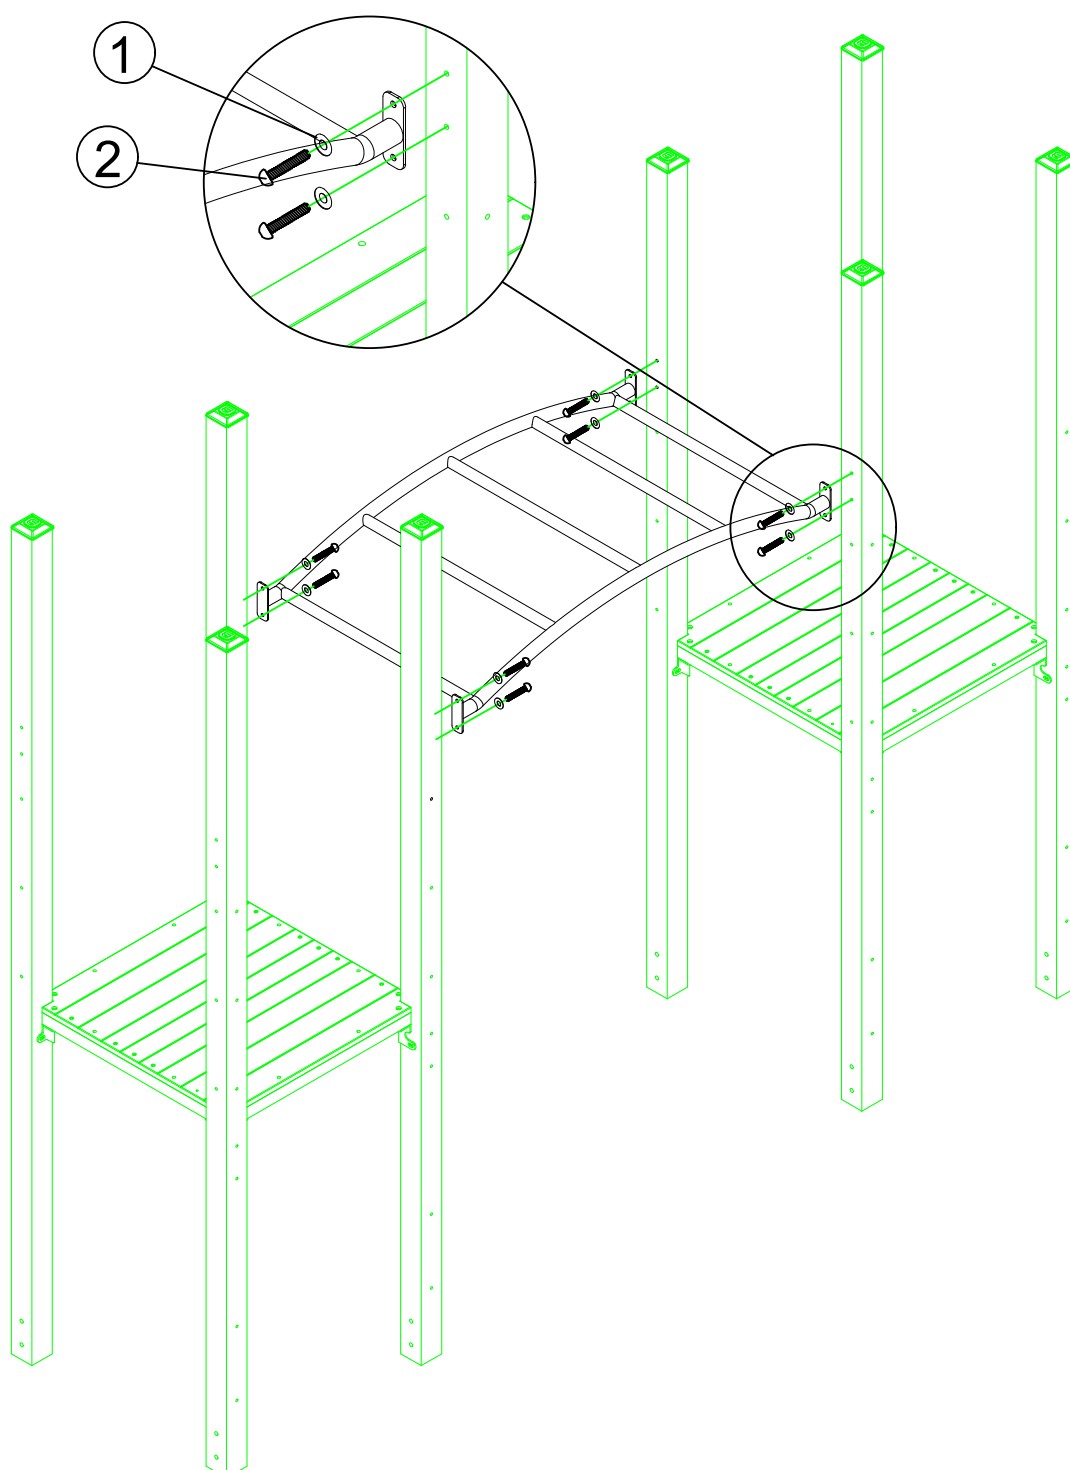


Installation Steps:

- 1: As shown figure, align the rungs with corresponding holes on the posts, insert corresponding hardware and tighten.

63-WK025 WiseKidz - Steel Post Entry Ladder

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	8*30	12
2	FLAT WASHER	8.5/23.5*T1.5	12


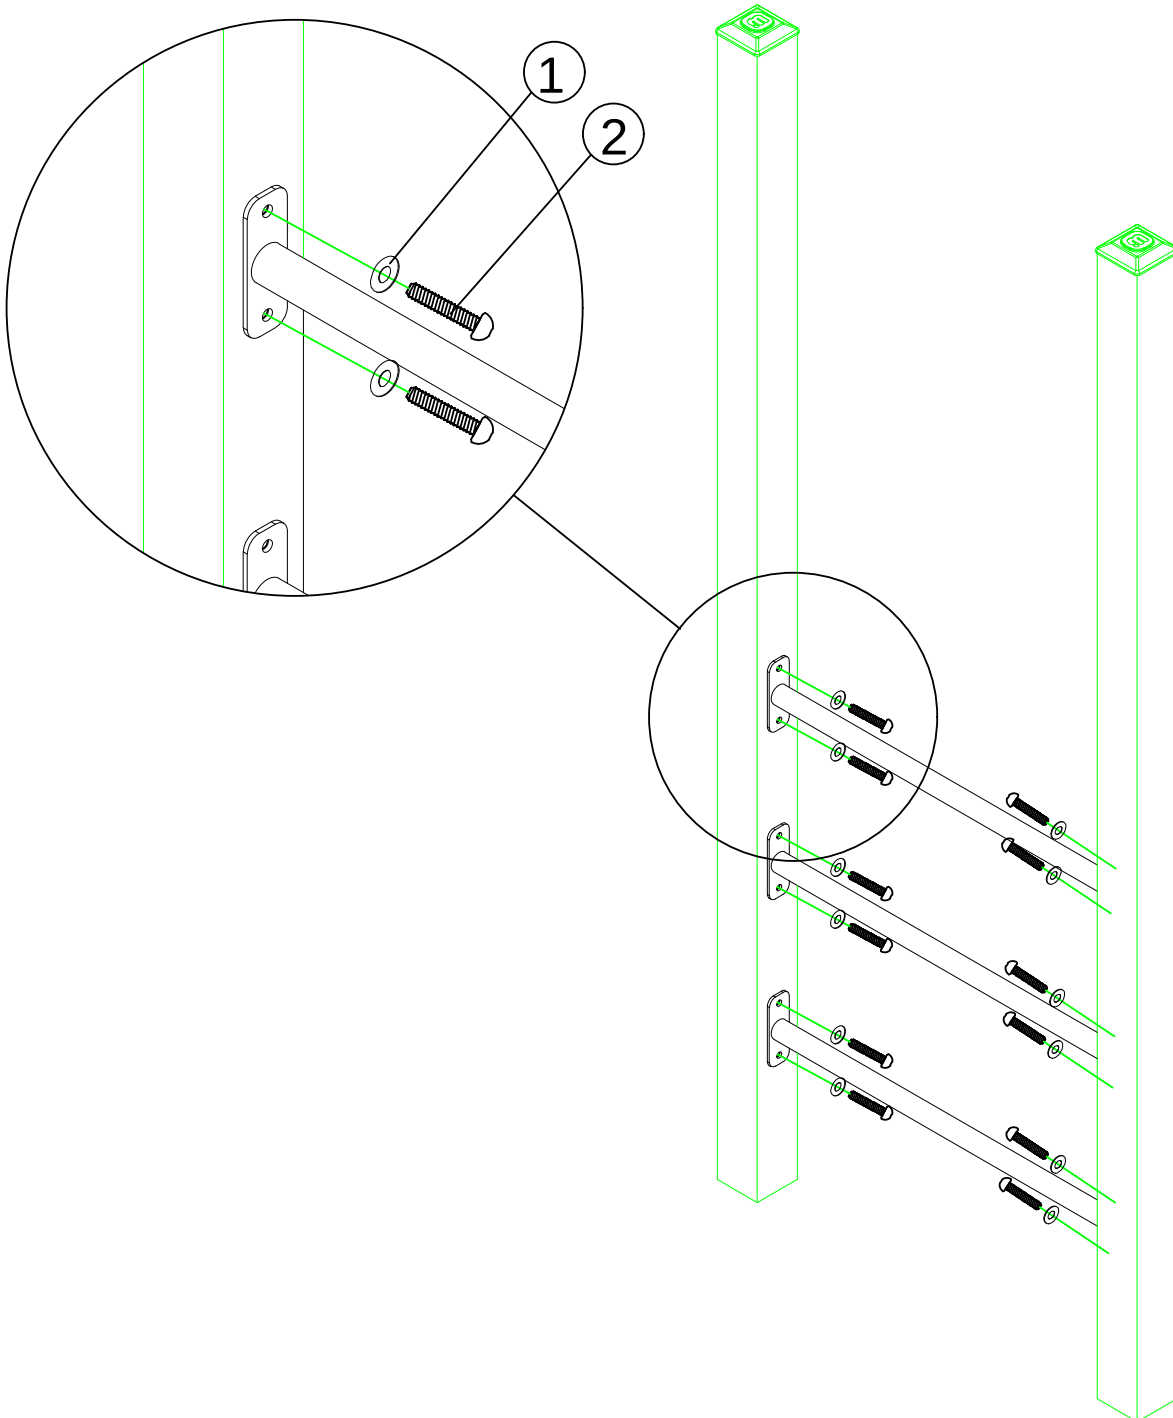


Installation Steps:

1: Align the connection holes of the panel with those of the post, then connect and tighten them with the corresponding hardware.

66-WK014 WiseKidz - PE Car Panel

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	4
2	FLAT WASHER	8.5/23.5*T1.5	4

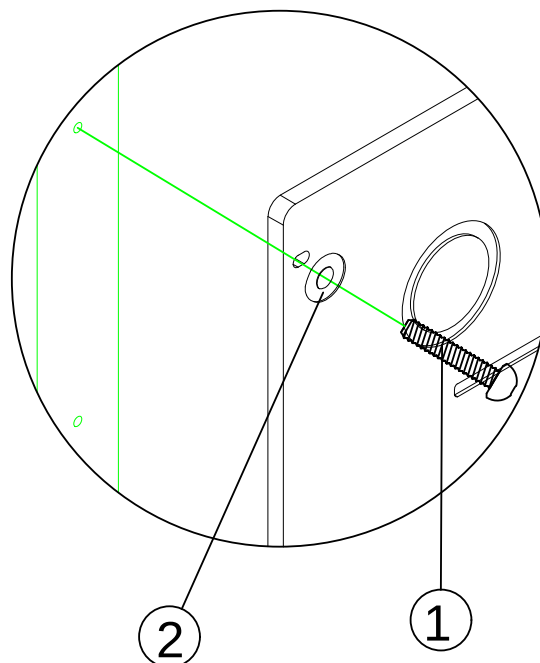
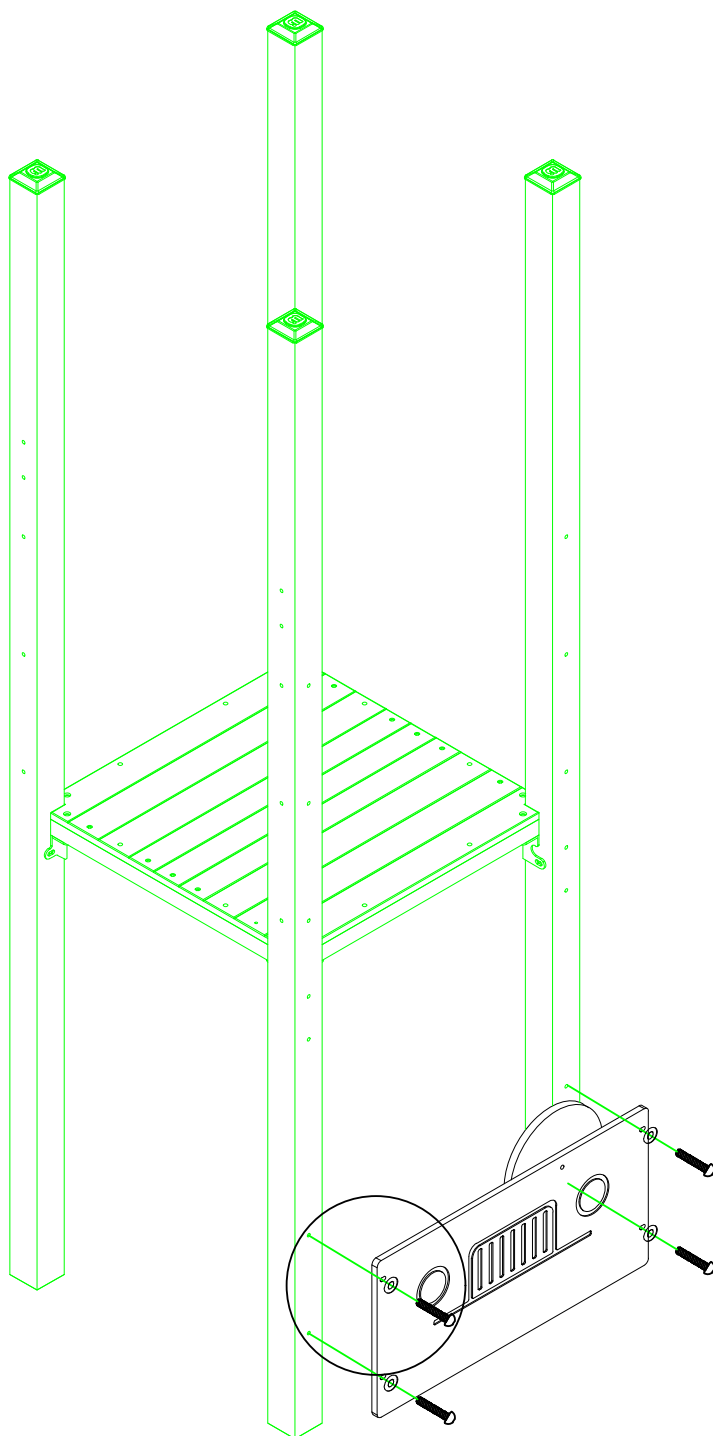


Installation Steps:

1: As shown in the figure, align the panel with the embedded holes of the post, and use corresponding hardware to connect and fasten them.

66-WK002 WiseKidz - PE Climber Entry

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

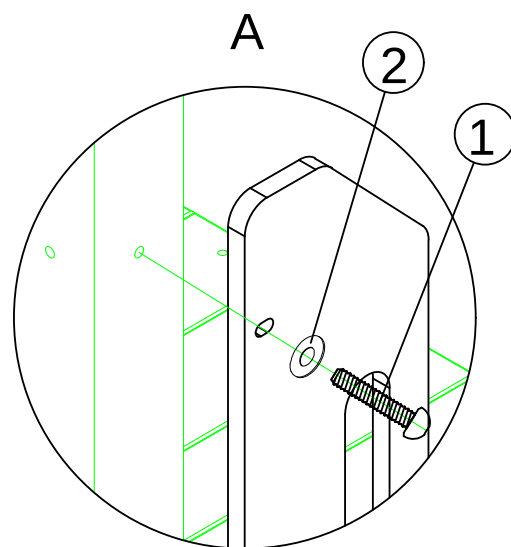
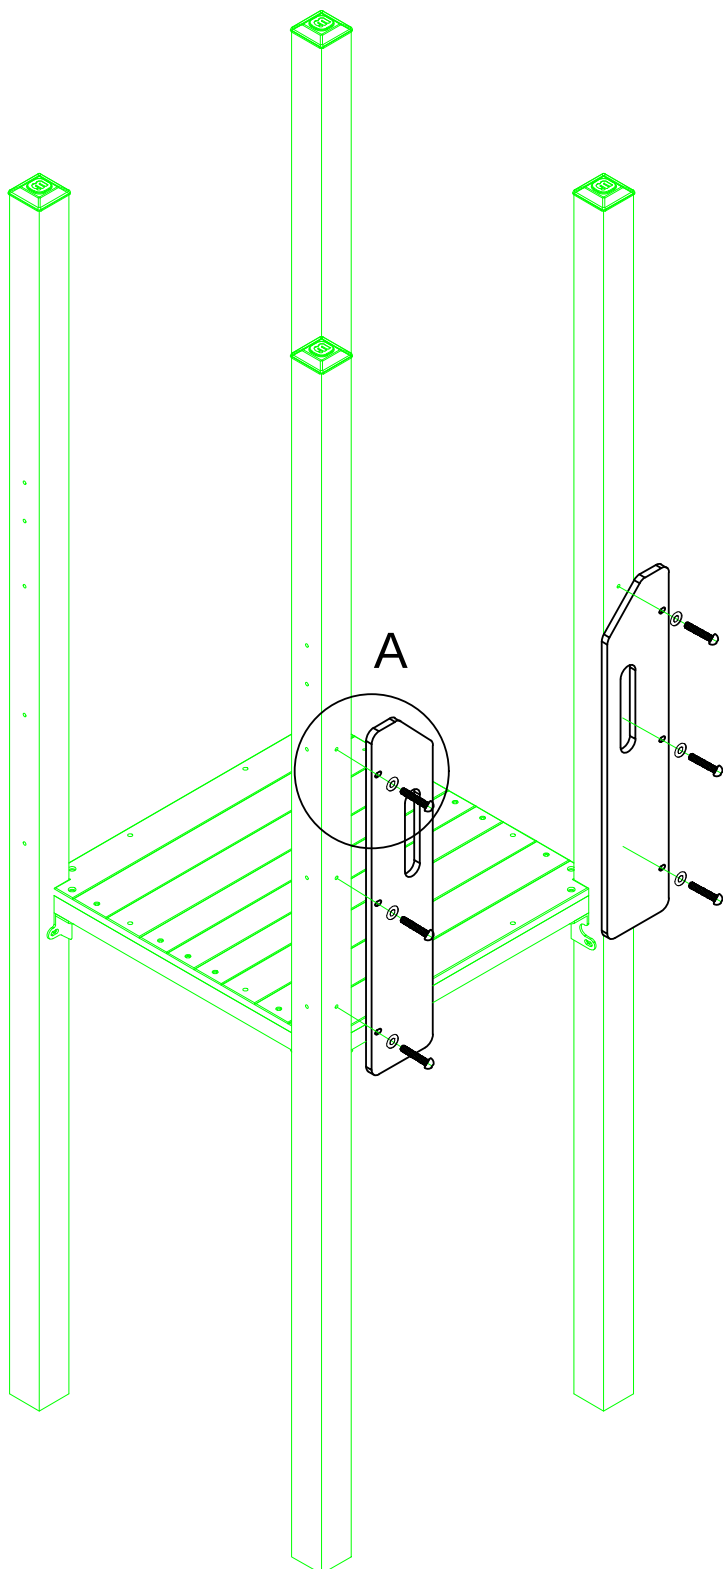


Installation Steps:

1: Align the connection holes of the panel with those of the post, then connect and tighten them with the corresponding hardware.

66-WK009 WiseKidz - PE Crawl Tunnel Entry


Number	Name	Model	Quantity
1	STAINLESS STEEL HEX HEAD SELF-TAPPING SCREW	M8*70	6
2	FLAT WASHER	8.5/23.5*T1.5	6

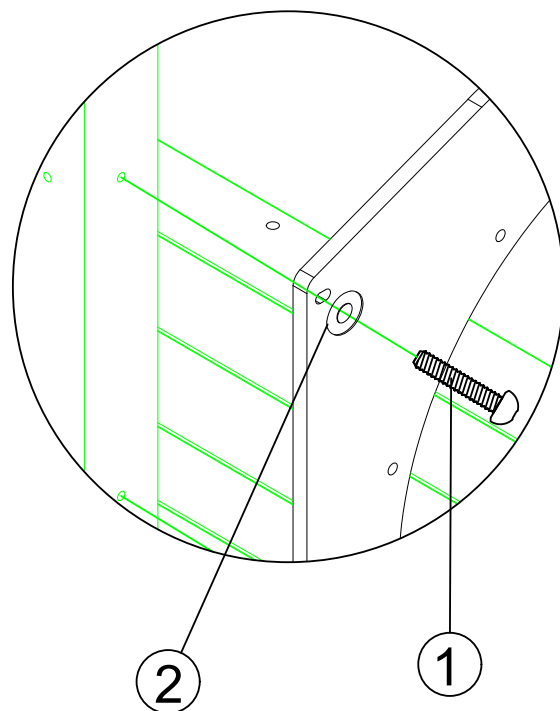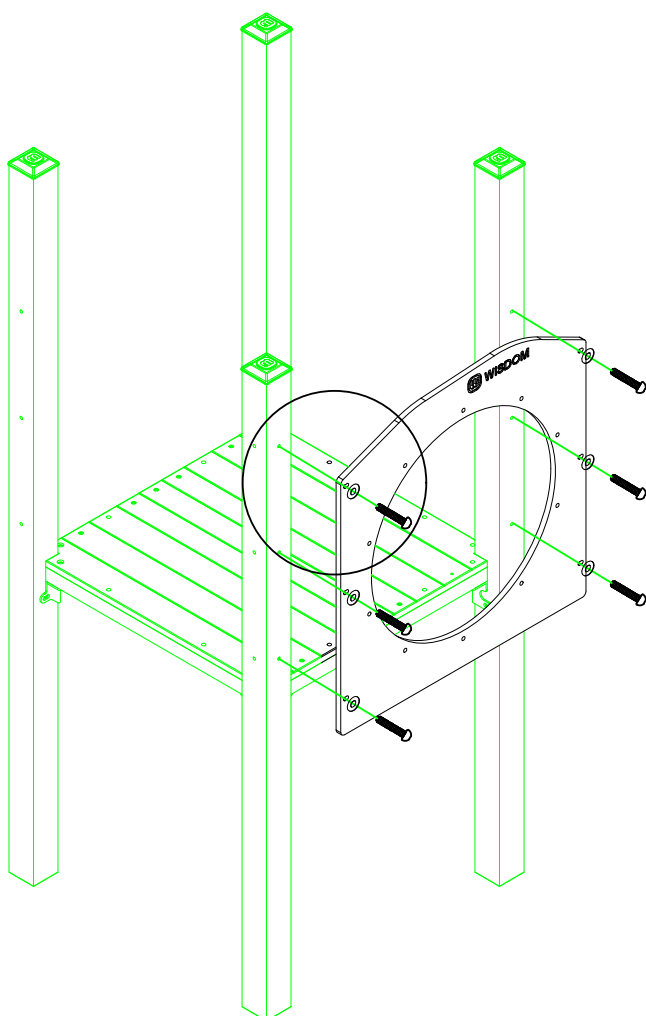

Installation Steps:

1: As shown: First, find stainless net climbing arc. Align the connection holes on one side of the panel with those of the iron sheet on stainless net climbing arc, then align with connection holes. Connect and fasten with the corresponding hardware.


66-WK003 WiseKidz - PE Climber Side Entry			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	4
2	FLAT WASHER	8.5/23.5*T1.5	4

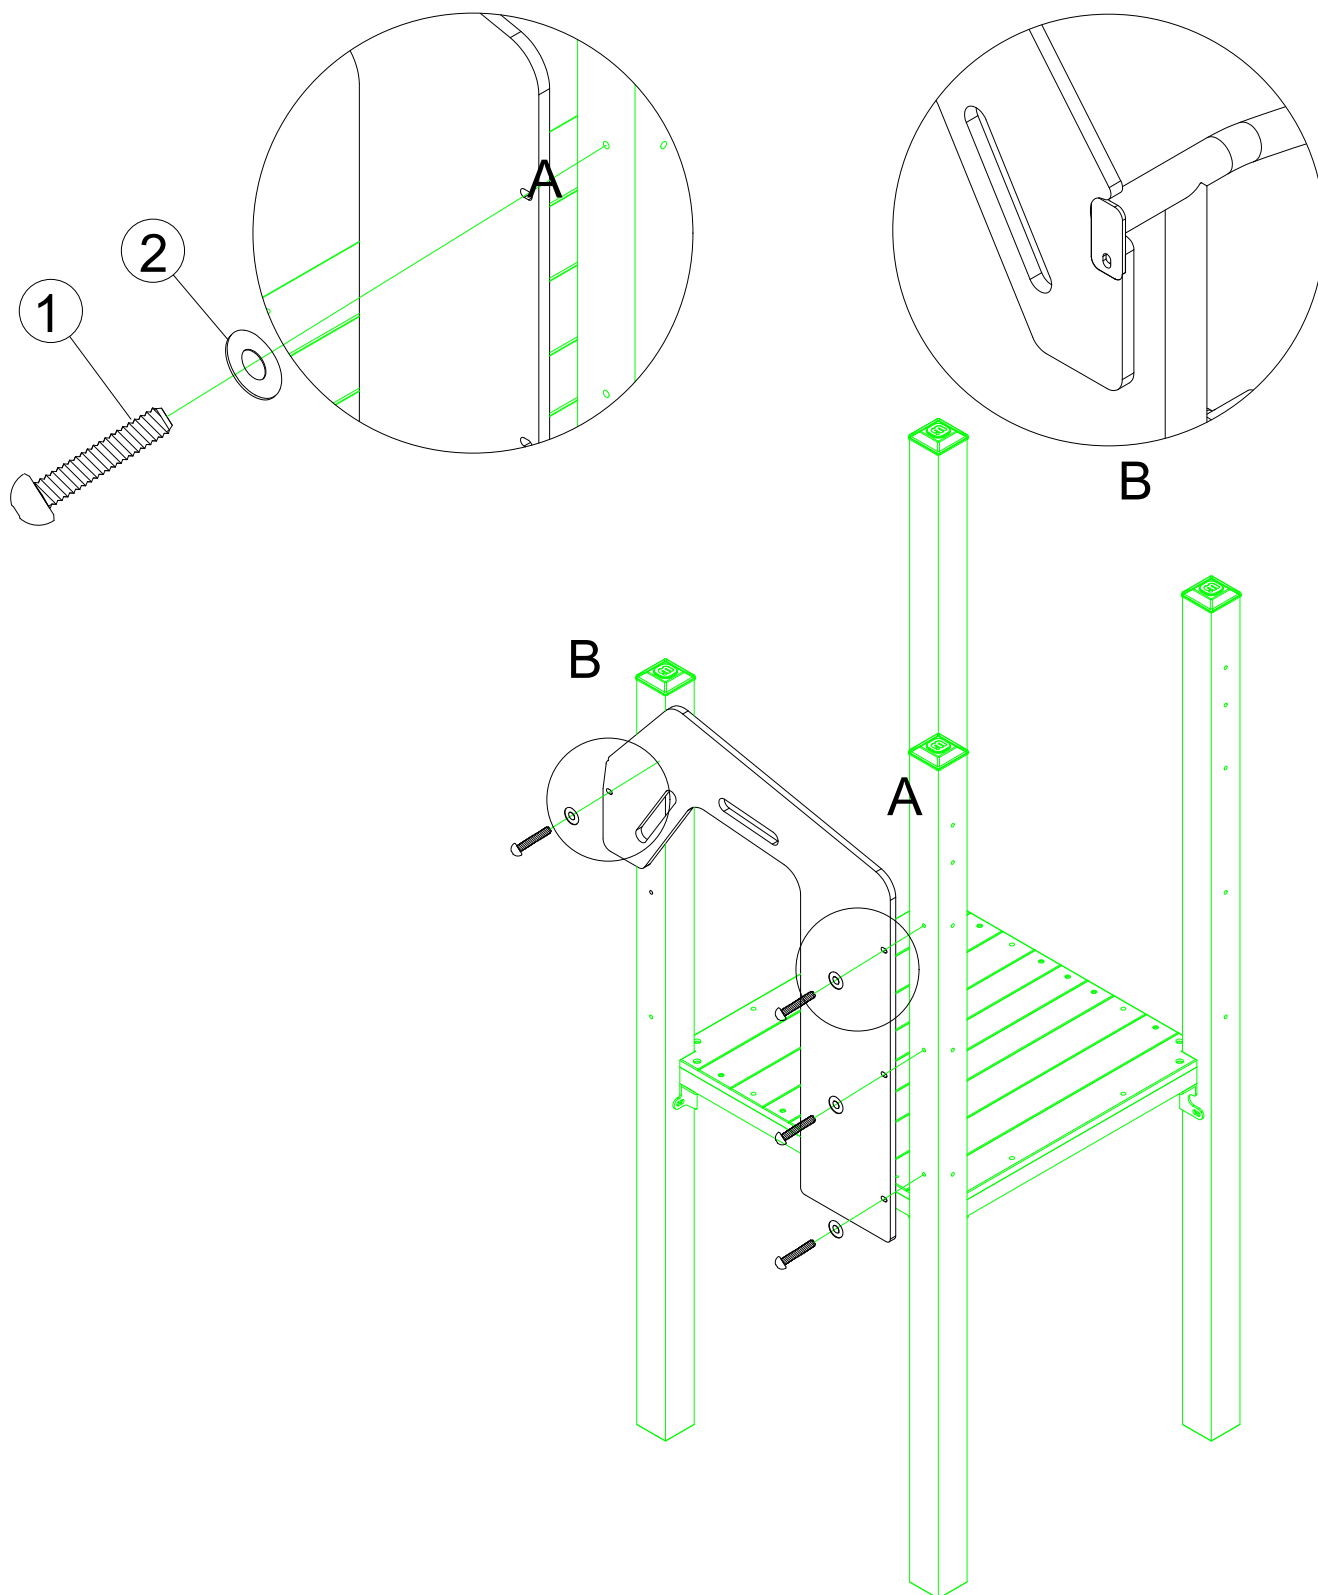

Installation Steps:

1:As shown in the diagram, align the 90° angle bracket with the holes on the panel, then connect and tighten them with corresponding hardware.

66-WK004 WiseKidz - PE Bay Window Panel 1-7			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	12
3	PLASTIC CAP	φ34 M10	6
4	LOCK NUT	M8	6
5	STAINLESS BRACKET		6



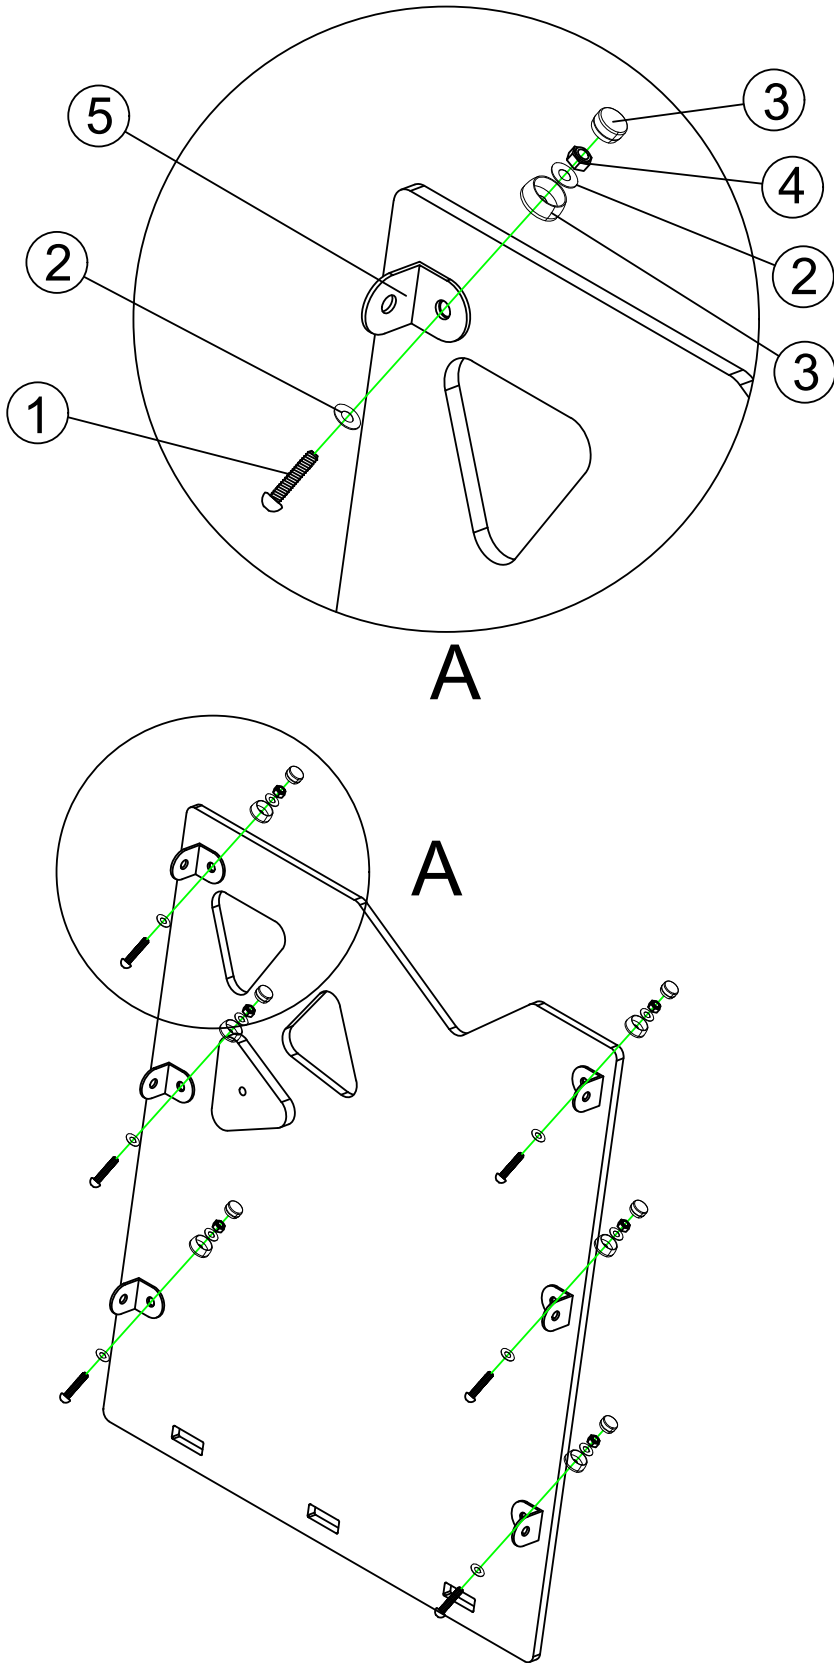


Installation Steps:

1:As shown in the diagram, align the 90° angle bracket with the holes on the panel ,then connect and tighten them with corresponding hardware.

66-WK004 WiseKidz - PE Bay Window Panel 2-7


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	12
3	PLASTIC CAP	φ34 M10	6
4	LOCK NUT	M8	6
5	STAINLESS BRACKET		6

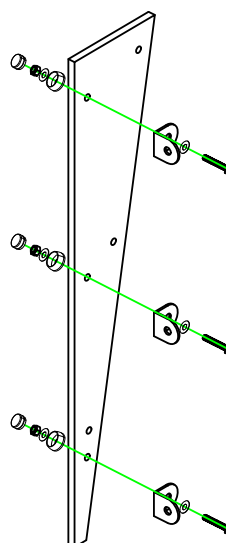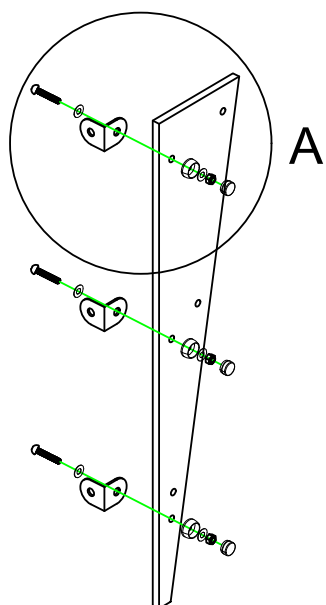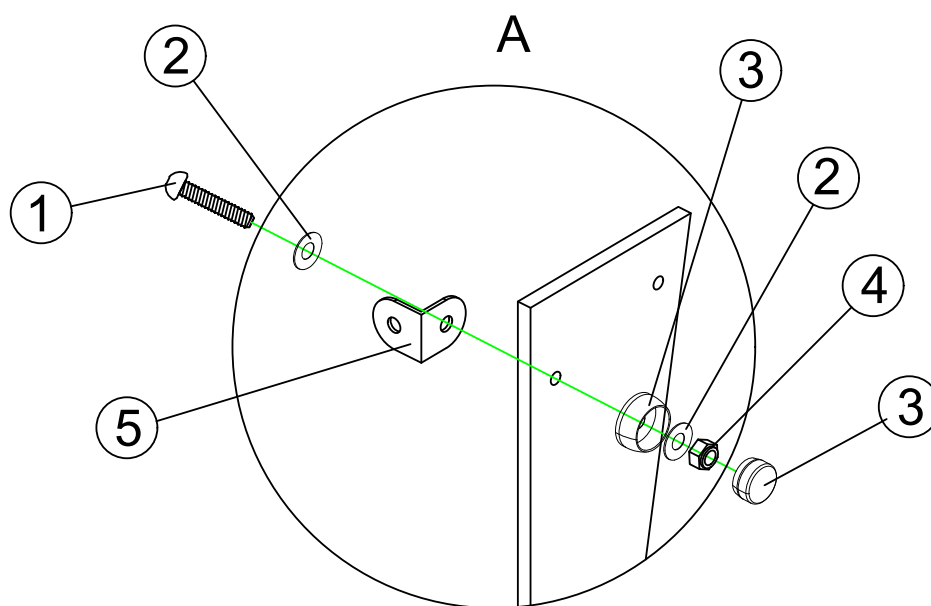

Installation Steps:


1:Align the 180° angle bracket with the connection holes of the base plate, and connect and fasten with the corresponding hardware.

66-WK004 WiseKidz - PE Bay Window Panel 3-7			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*30	4
2	FLAT WASHER	8.5/23.5*T1.5	8
3	LOCK NUT	M8	4
4	STAINLESS BRACKET		4

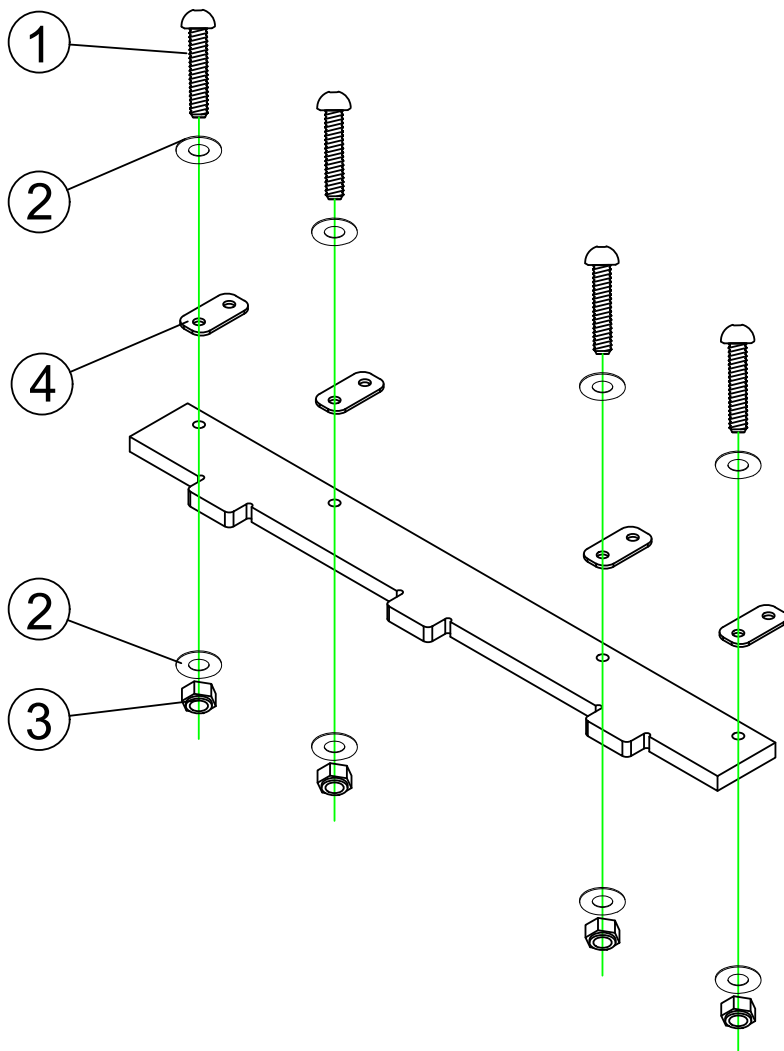

Installation Steps:

1:As shown in the diagram, insert the installed base plate into the corresponding hole of the panel.

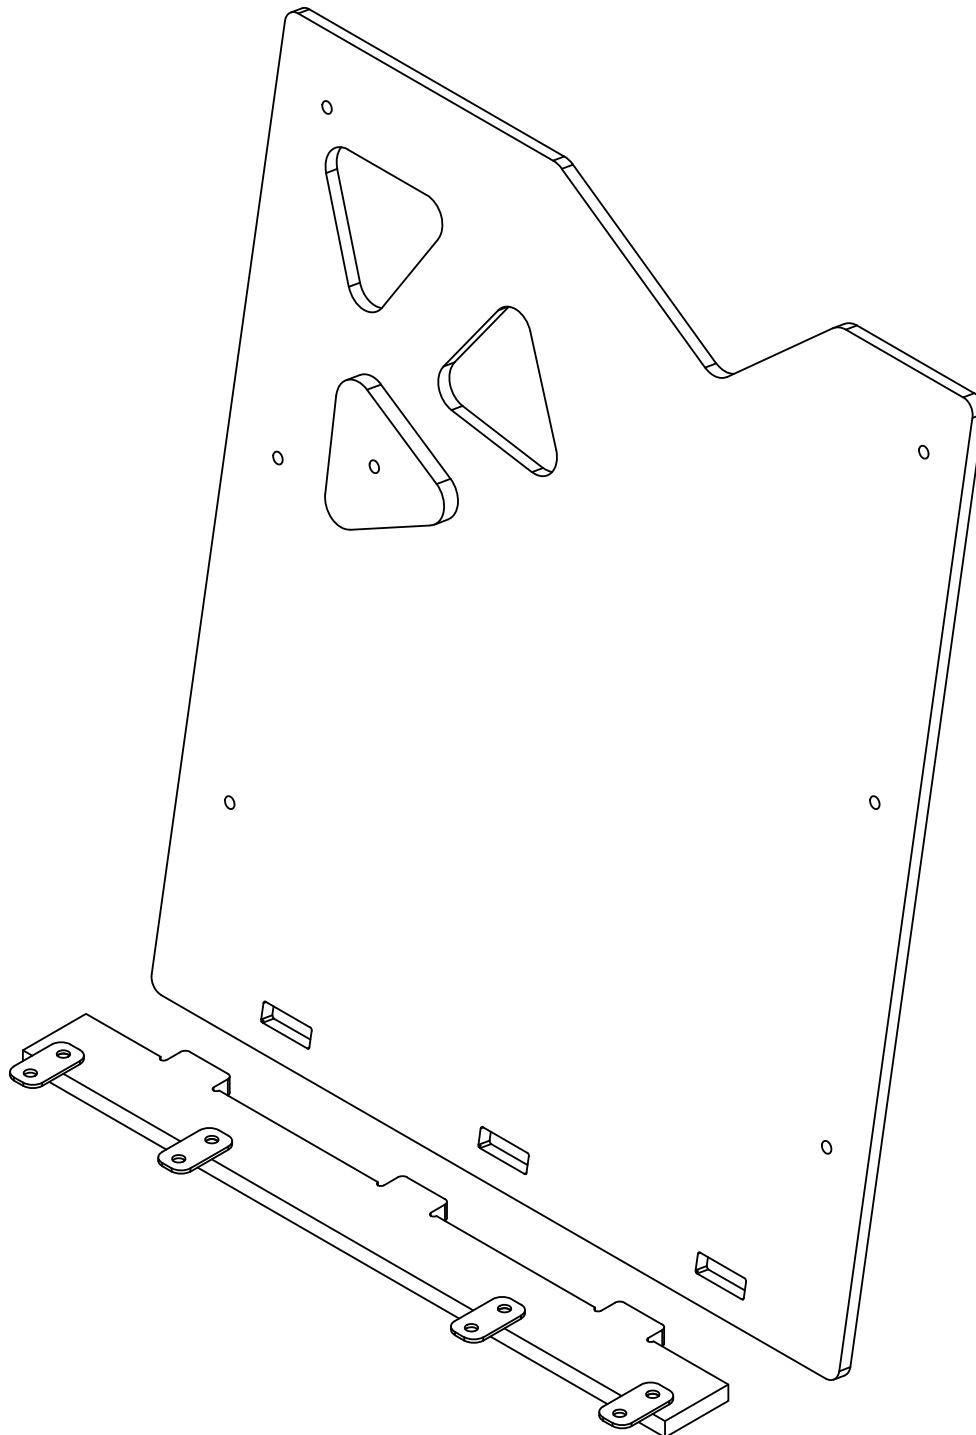


Installation Steps:

1:As shown in the diagram, align the connection holes of the panel and the side panel with a 90° angle bracket, then connect and tighten them with the corresponding hardware.

66-WK004 WiseKidz - PE Bay Window Panel 5-7

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	12
3	PLASTIC CAP	φ34 M10	6
4	LOCK NUT	M8	6

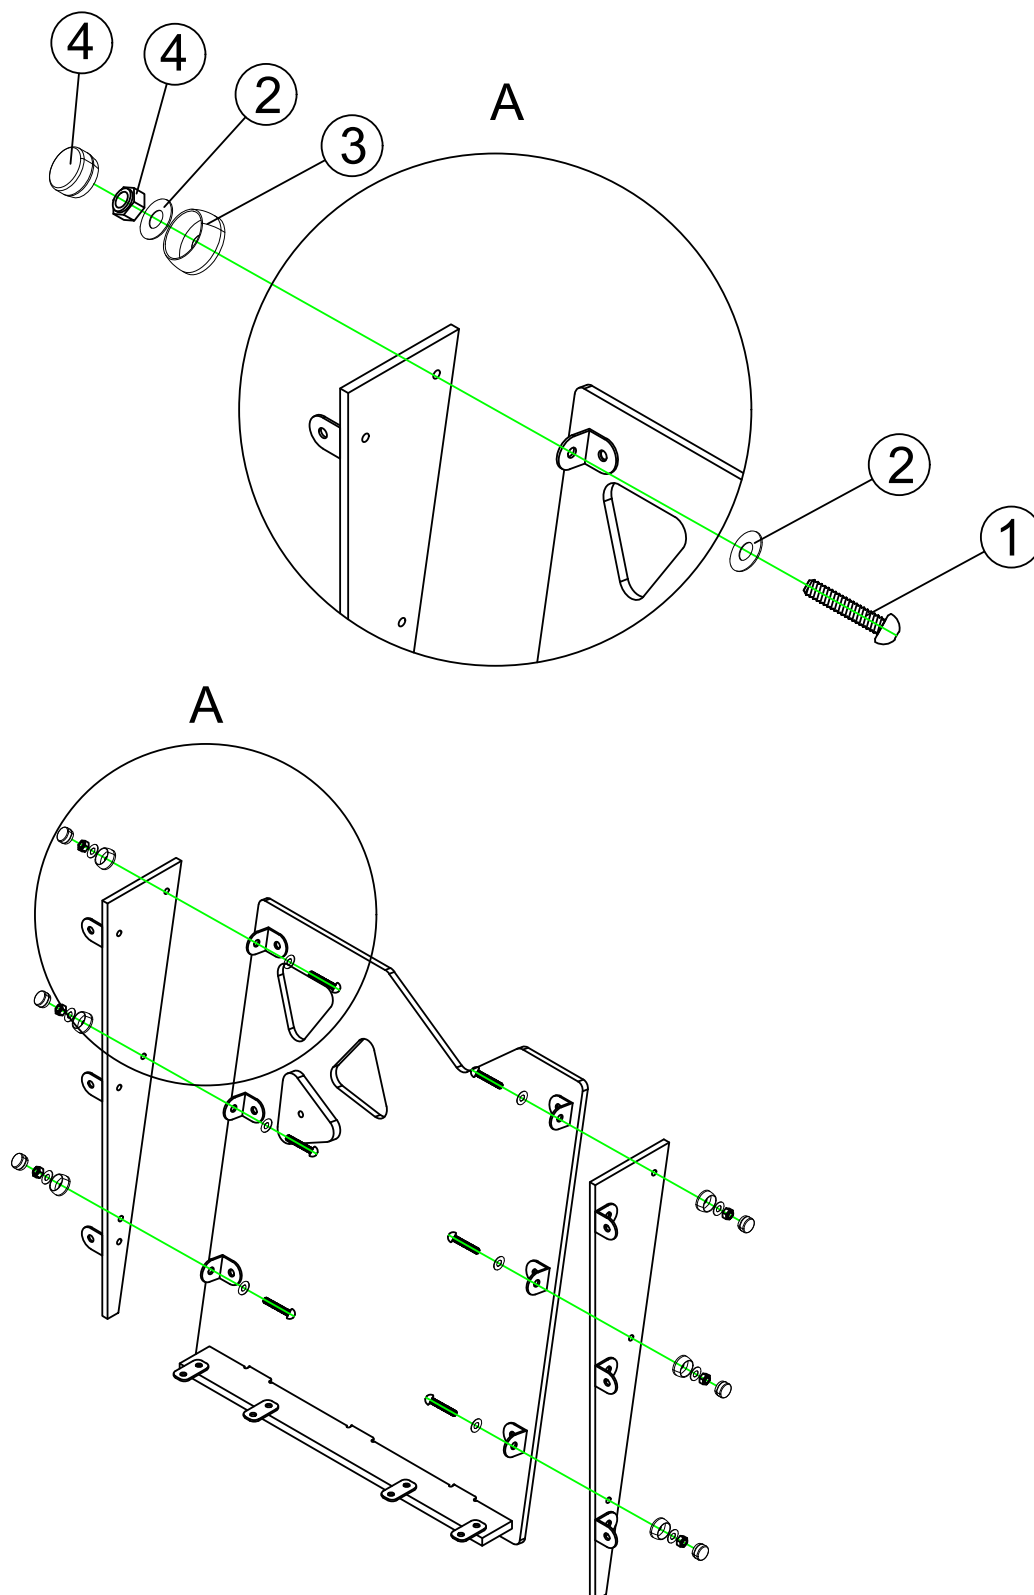


Installation Steps:

1: As shown in the diagram, align the connection holes of the panel and the side panel with a 90° angle bracket, then connect and tighten them with the corresponding hardware

66-WK004 WiseKidz - PE Bay Window Panel 6-7


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

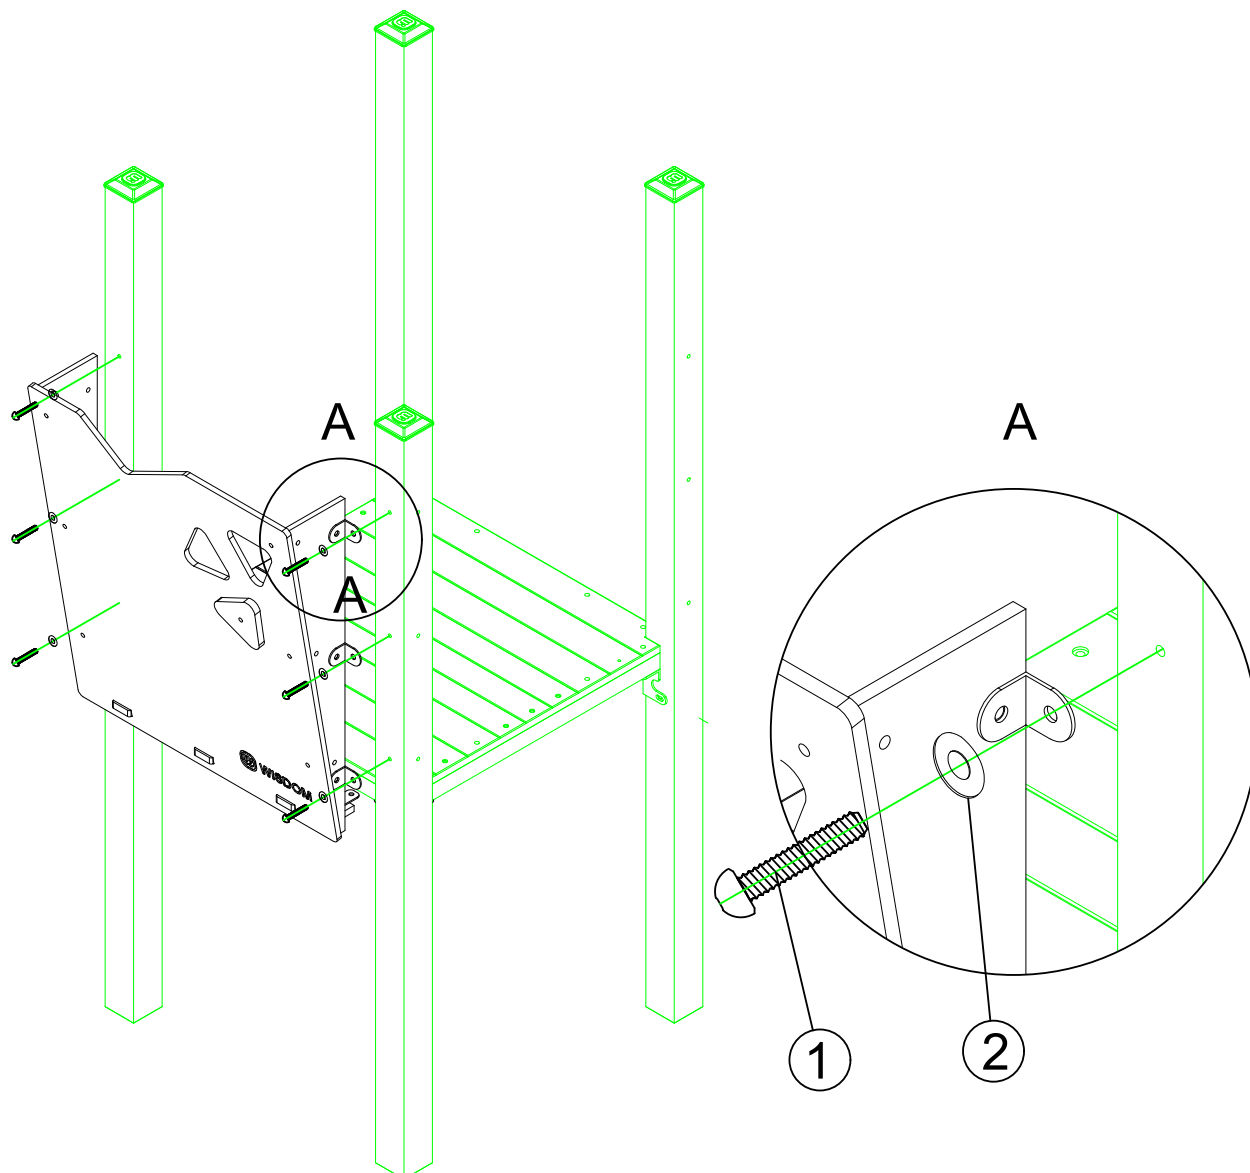

Installation Steps:

1:As shown in the diagram, align the connection holes of the panel's base plate with those of the deck, then connect and tighten them with the corresponding hardware.

66-WK004 WiseKidz - PE Bay Window Panel 7-7			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*80	2
2	FLAT WASHER	8.5/23.5*T1.5	8
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4
5	TAMPER RESISTANT TORX-BOLT	M8*75	2


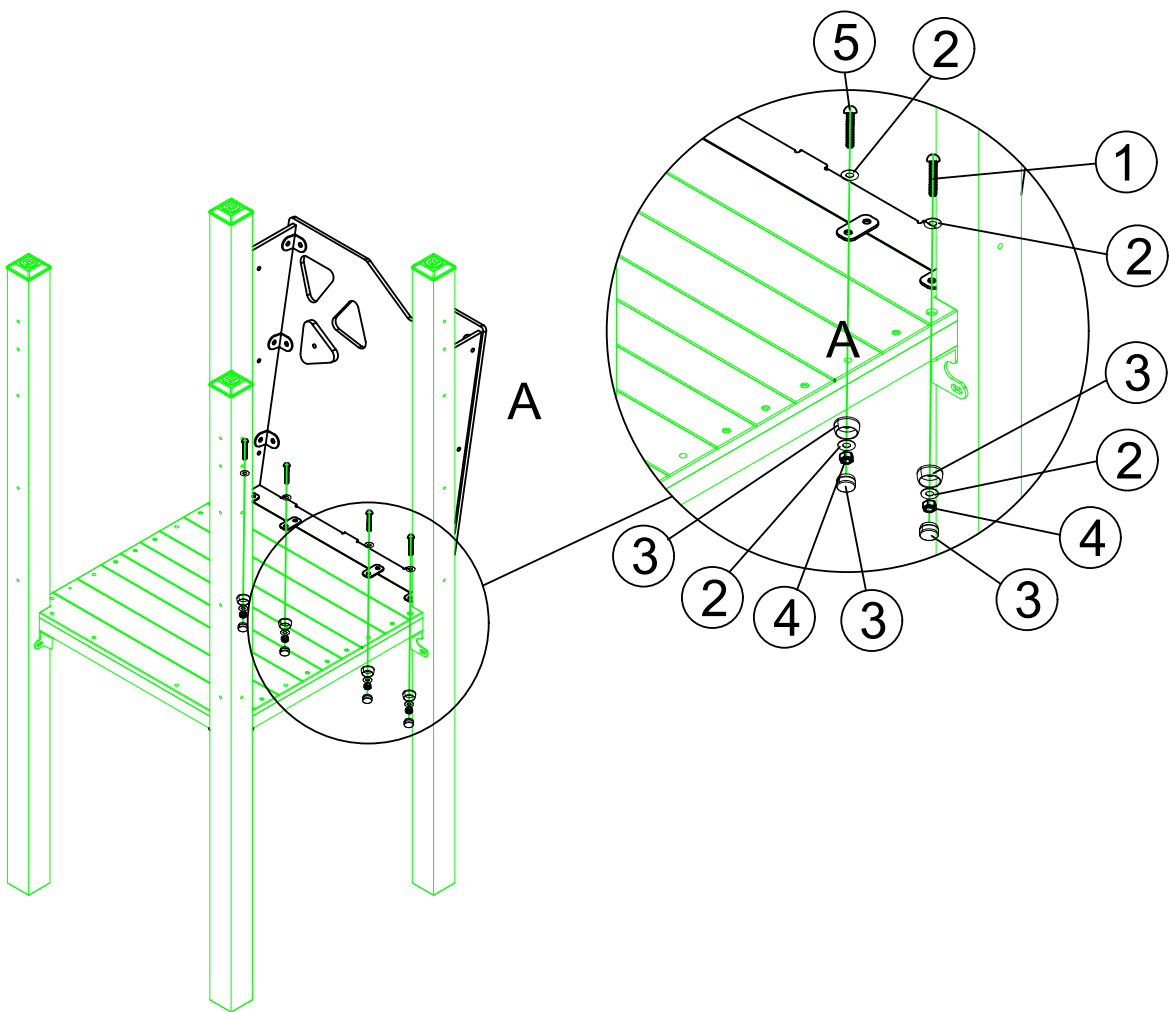


Installation Steps:

1: As shown in the figure, align the holes of the two side panels with those of the top panel, connect and fasten them with corresponding hardware.

66-WK001 WiseKidz - PE Single Slide Hood 1-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	4
2	FLAT WASHER	8.5/23.5*T1.5	8
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4

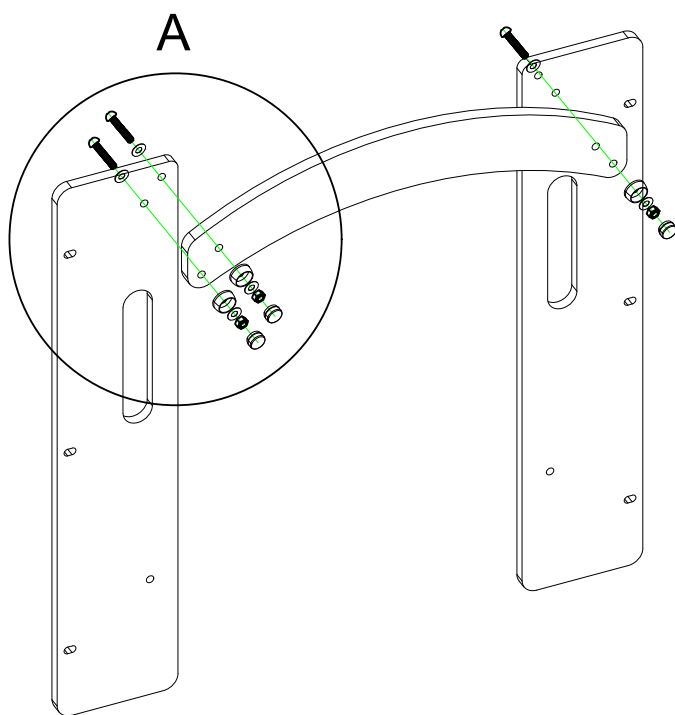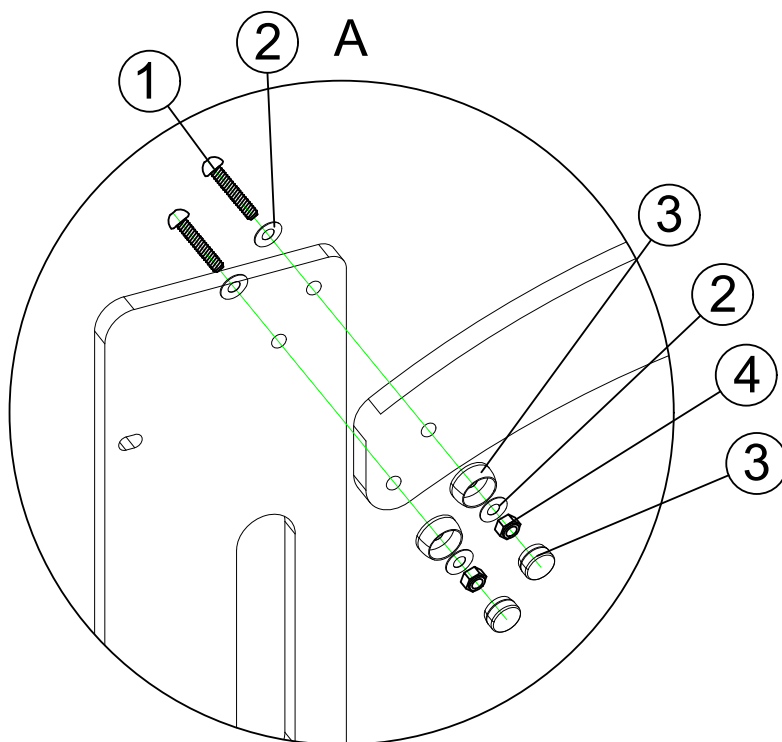


Installation Steps:

1: As shown in the figure, align the stainless steel connector with the connection holes of the deck, use corresponding hardware to connect and fasten them.

66-WK001 WiseKidz - PE Single Slide Hood 2-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*75	2
2	FLAT WASHER	8.5/23.5*T1.5	4
3	PLASTIC CAP	φ34 M10	2
4	LOCK NUT	M8	2

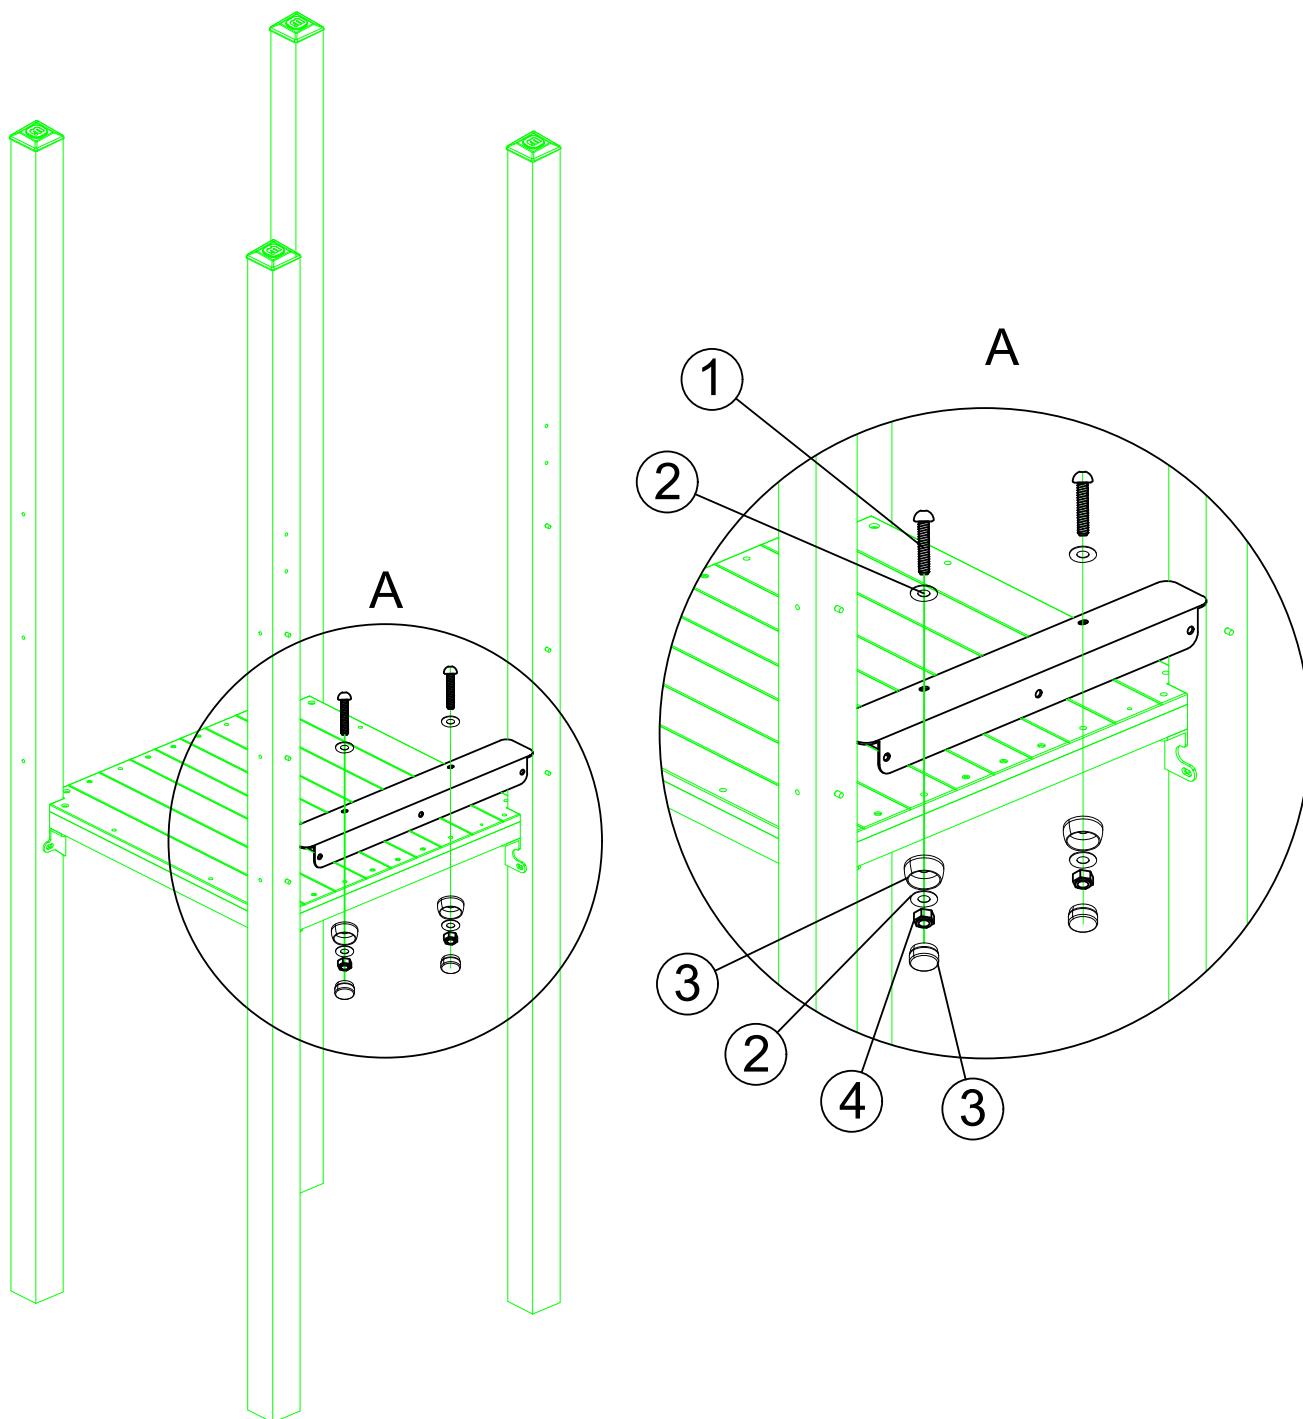


Installation Steps:

1: As shown in the figure, align the panel with the embedded holes of the post, and use corresponding hardware to connect and fasten them.

66-WK001 WiseKidz - PE Single Slide Hood 3-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

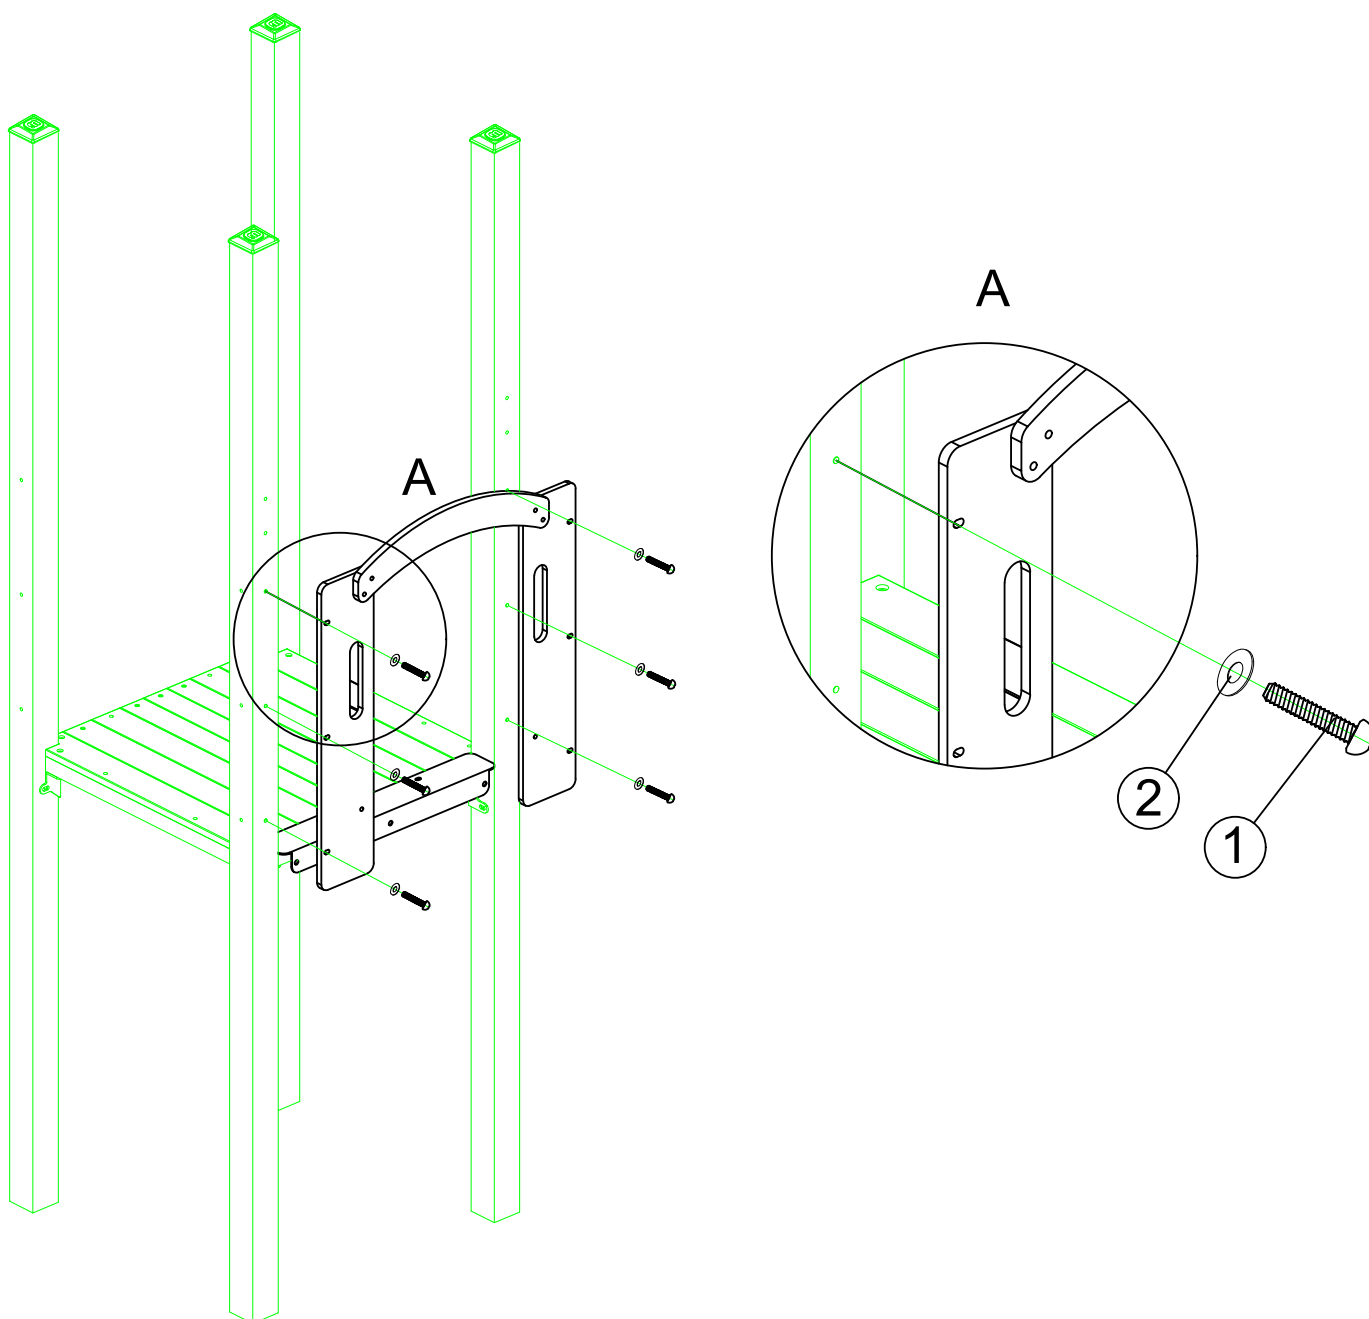


Installation Steps:

1: As shown in the figure, when installing the slide, align the connection holes of the slide with those of the panel, and use corresponding hardware to connect and fasten them.


66-WK001 WiseKidz - PE Single Slide Hood 4-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*45	2
2	FLAT WASHER	8.5/23.5*T1.5	9
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4
5	TAMPER RESISTANT TORX-BOLT	M8*35	2
6	TAMPER RESISTANT TORX-BOLT	M8*25	1

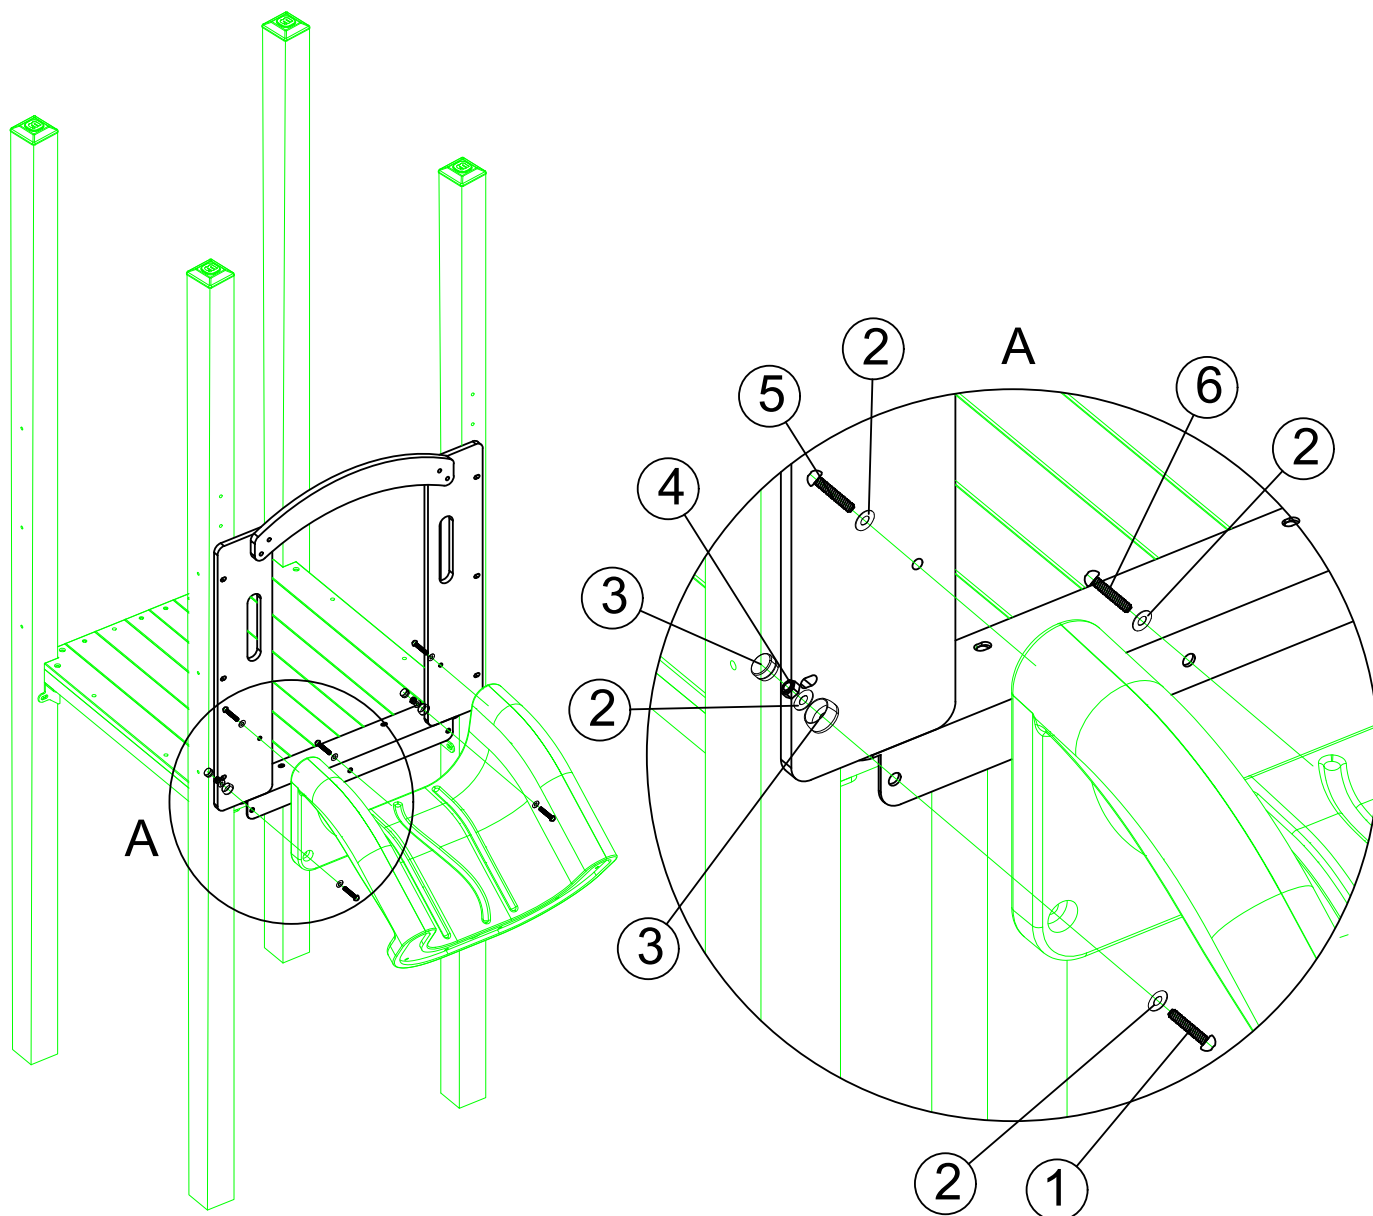


Installation Steps:

65-WKP001A WiseKidz - 90cm Single Slide

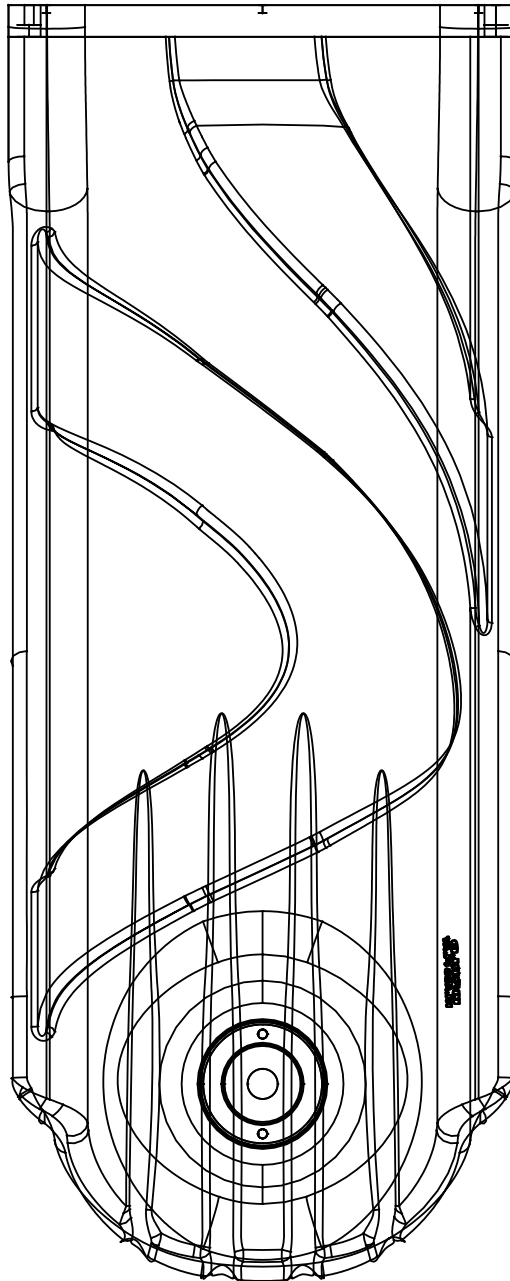

Installation Steps:

65-WKP002A WiseKidz - 120cm Single Slide

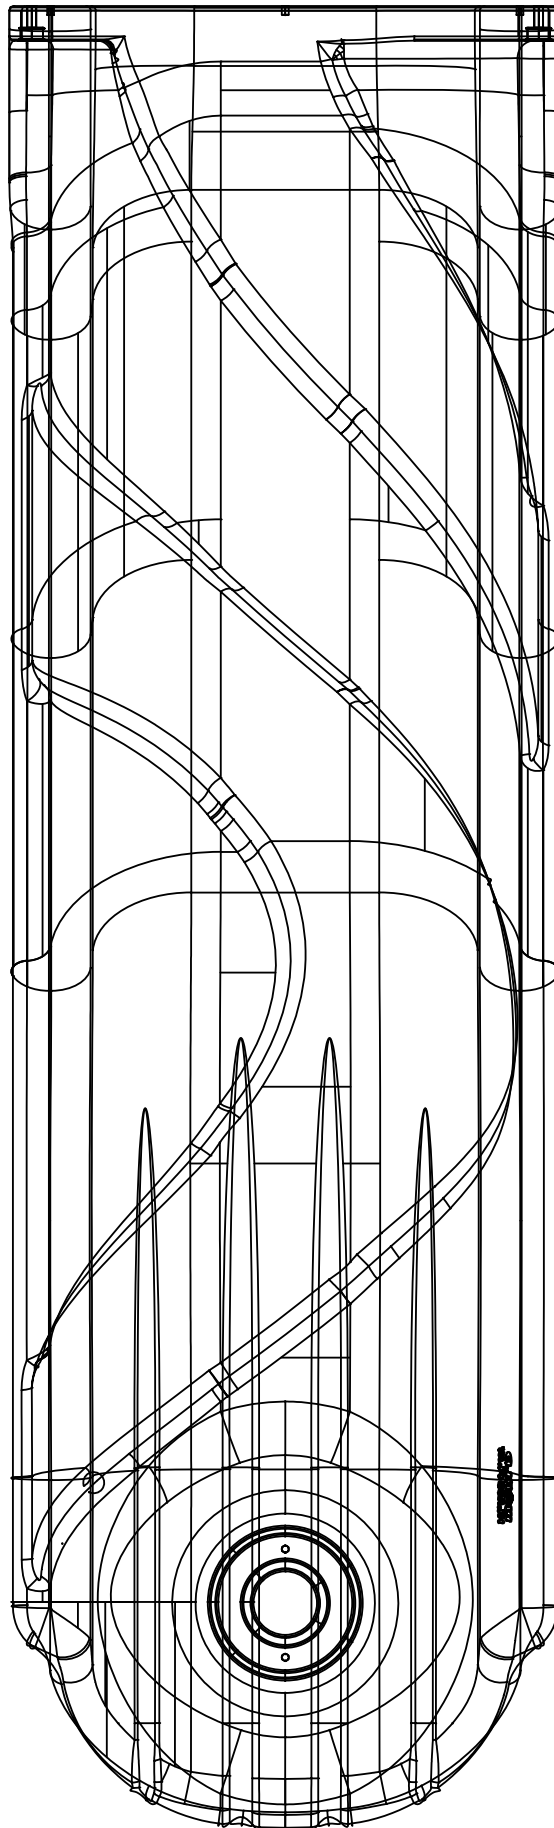


Installation steps:

1:Align the inground footer with the holes on single slide.

2:Insert corresponding hardware and tighten.

70-21001 Single Slide Inground Footer


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*20	2
2	FLAT WASHER	8.5/23.5*T1.5	2

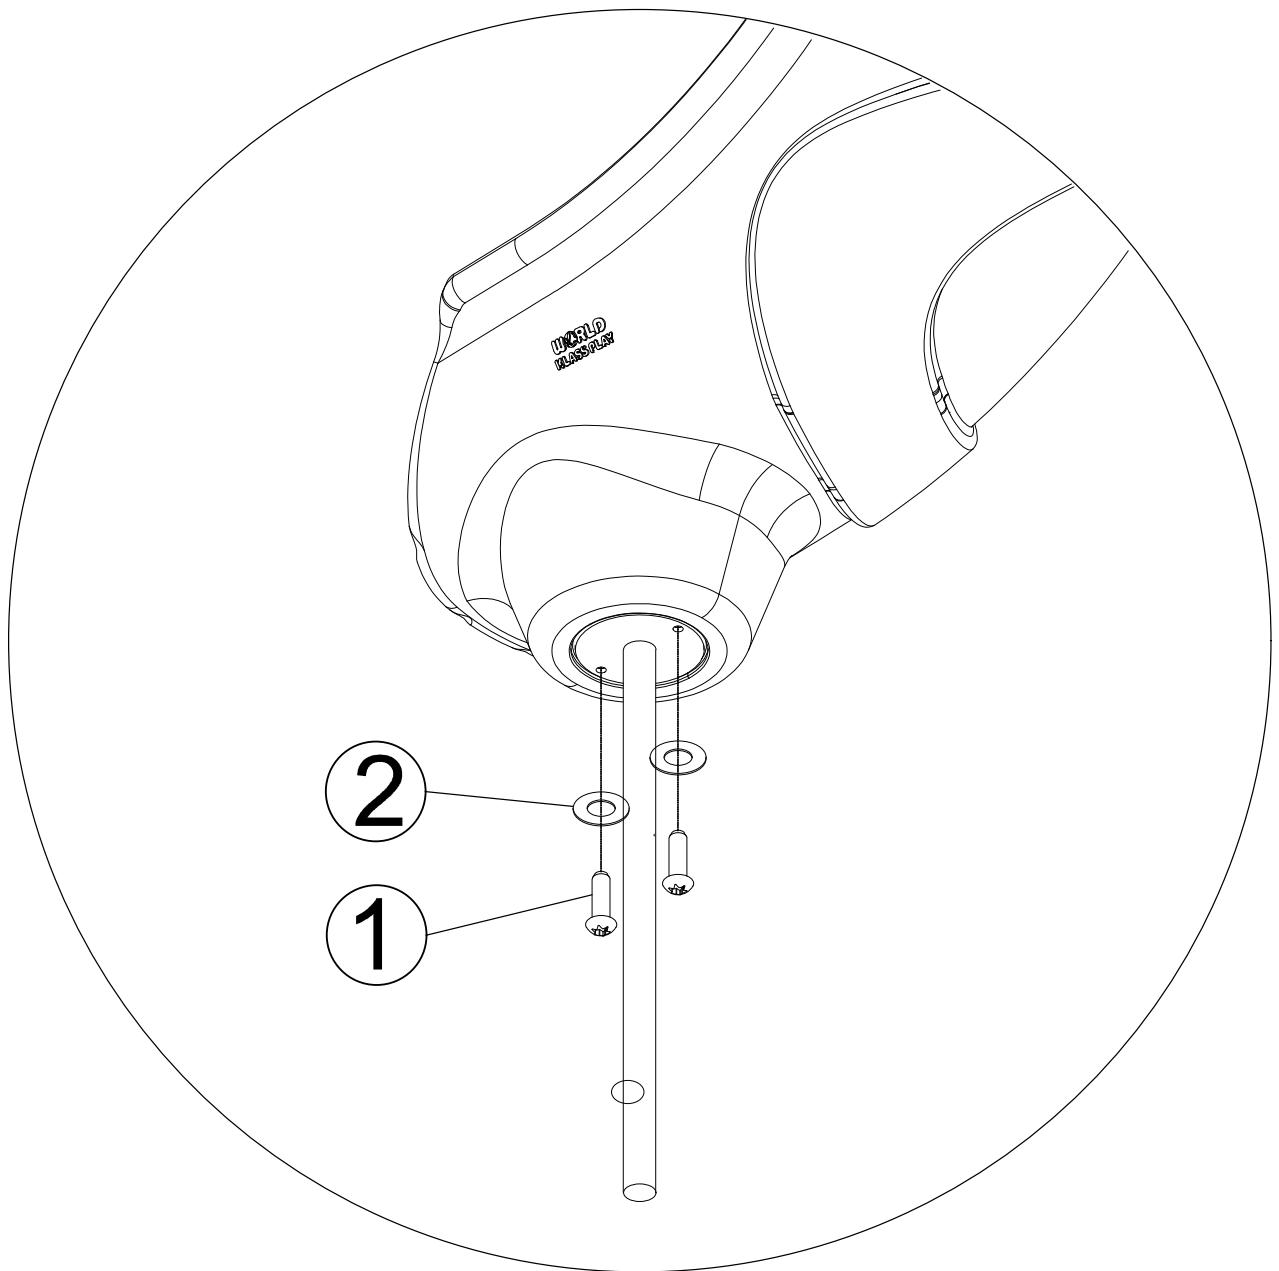

Installation Steps:

1: As shown in the figure, place the decorative panel in the corresponding position and use corresponding hardware to connect and fasten it.

72-WK001 WiseKidz - Post Topper			
Number	Name	Model	Quantity
1	Self-tapping Screw	4*35	3

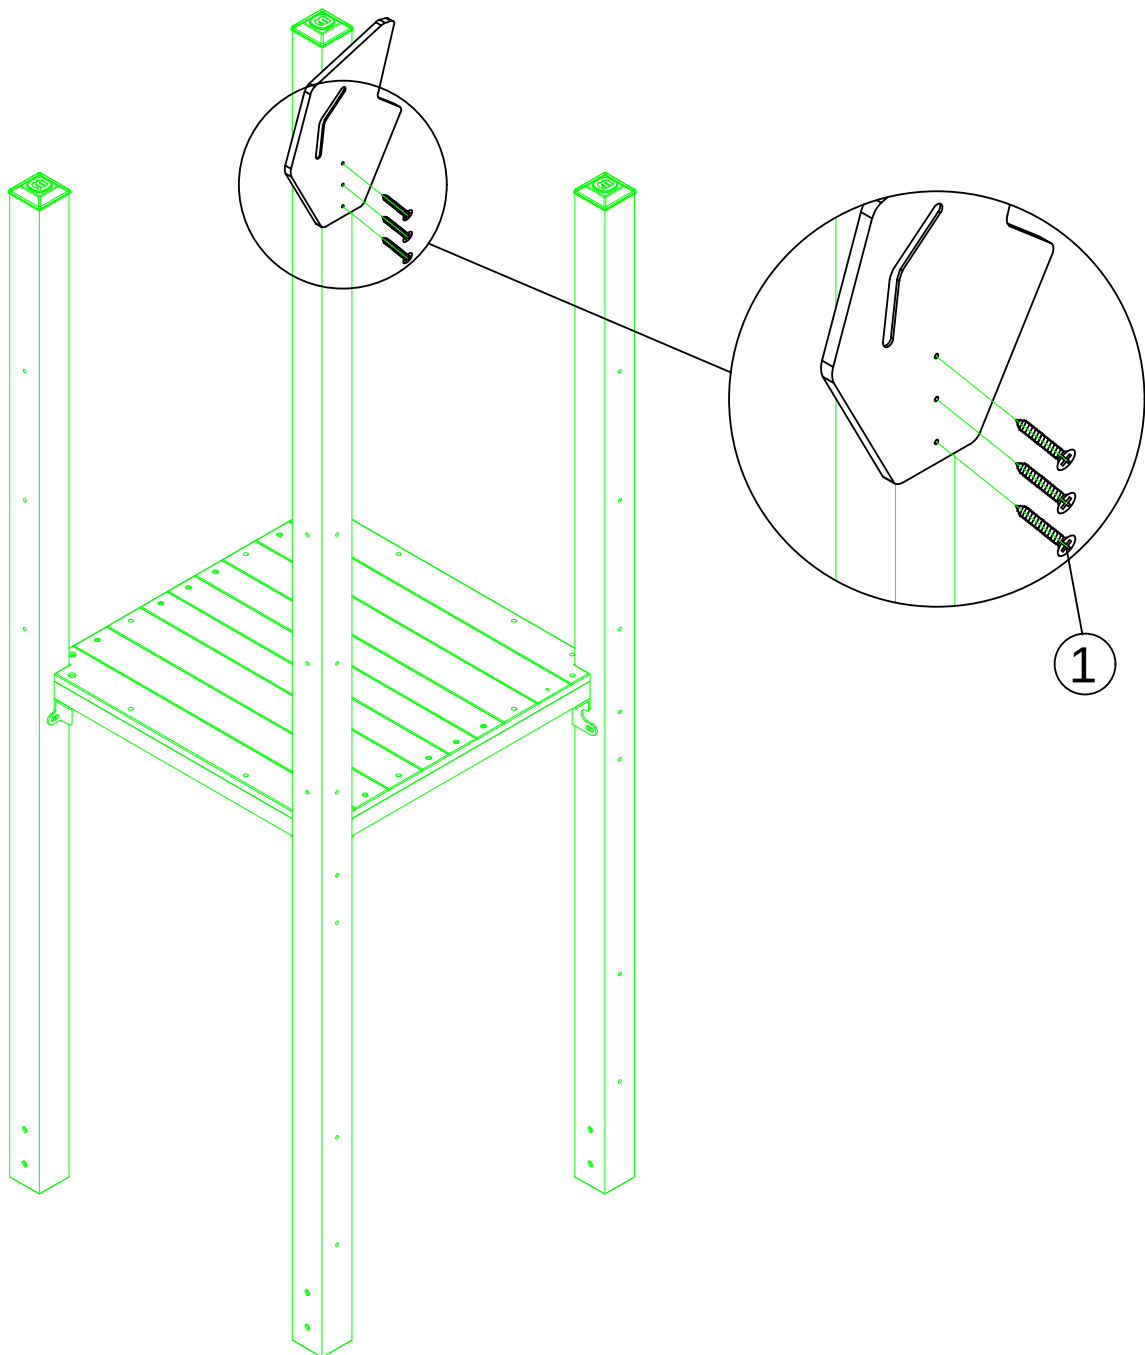


Installation Steps:

1: As shown in the figure, insert the casing into the post and use corresponding hardware to connect and fasten it.

69-WK001 WiseKidz - PE Gable Roof 1-3

Number	Name	Model	Quantity
1	Self-tapping Screw	M4*20	8

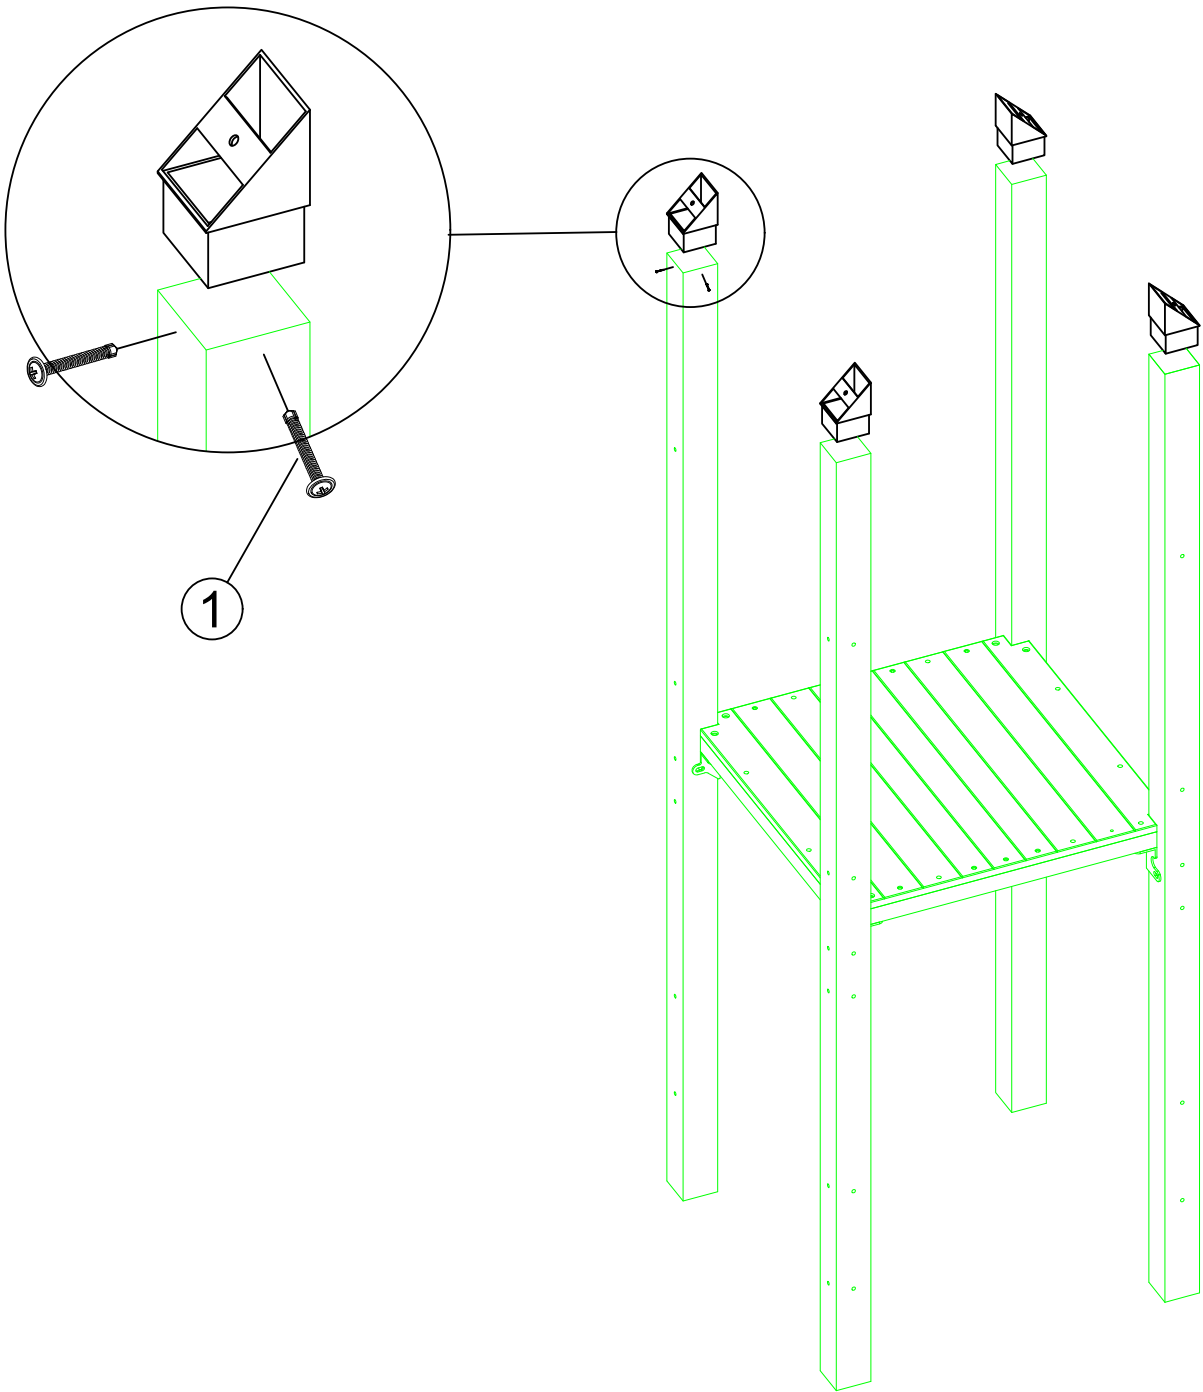


Installation Steps:

1: As shown in the figure, use corner braces to connect the PE boards. Insert corresponding hardware and tighten.

69-WK001 WiseKidz - PE Gable Roof 2-3


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*30	14
2	FLAT WASHER	8.5/23.5*T1.5	28
3	LOCK NUT	M8	14

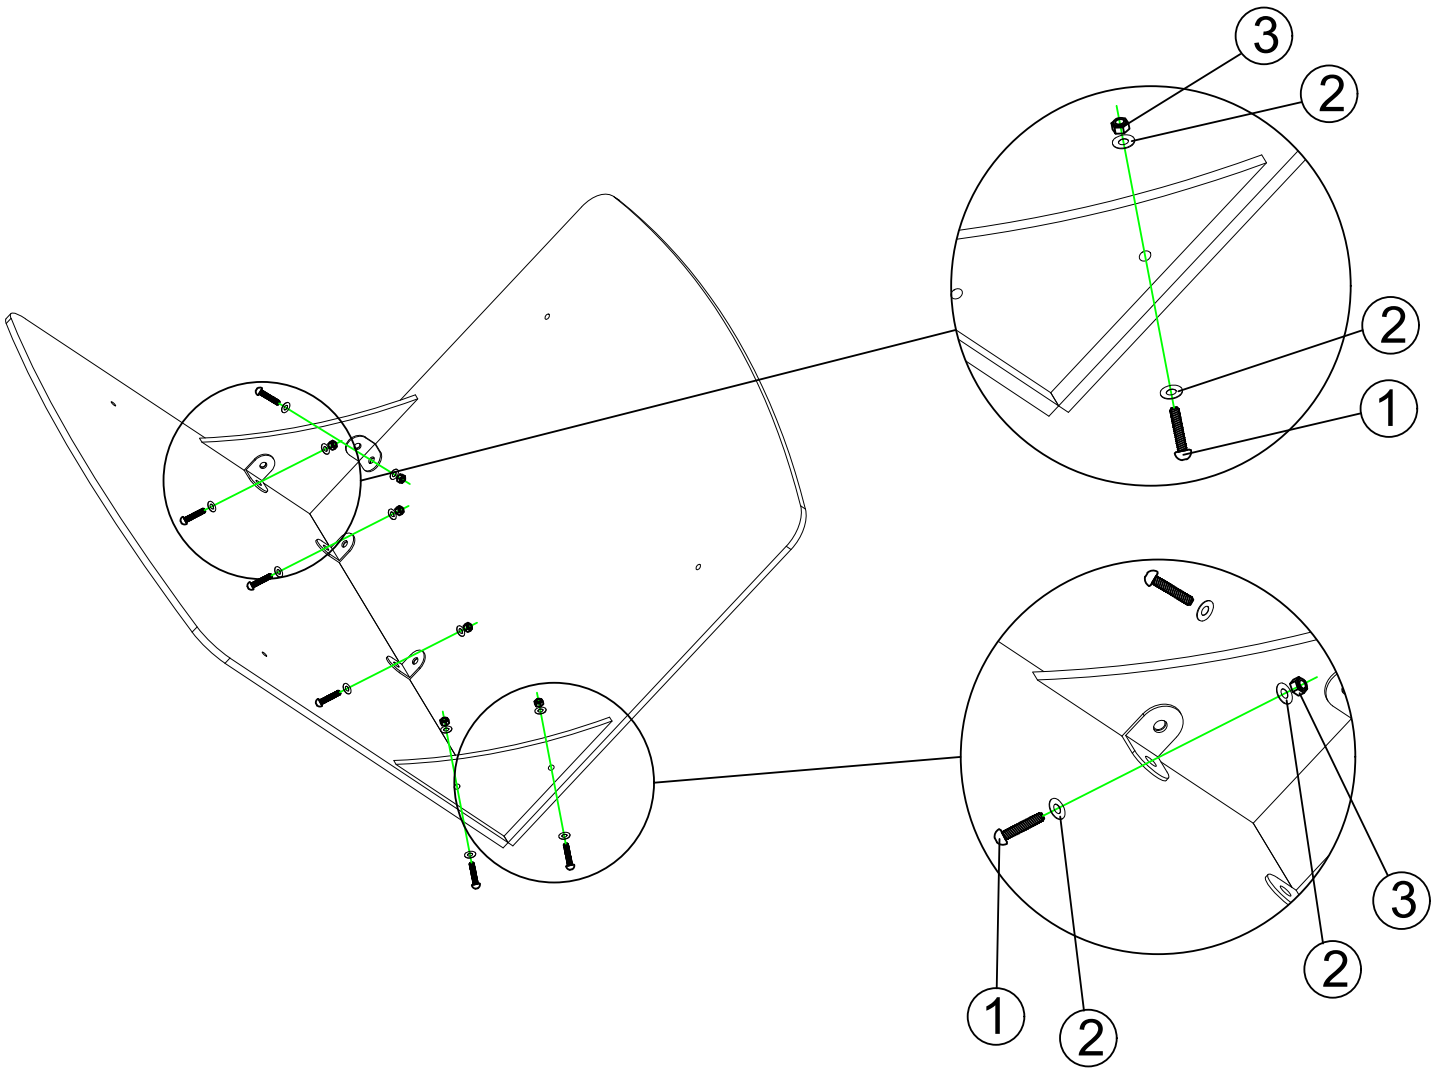

Installation Steps:

1: As shown in the figure, connect and fasten the installed roof to the post sleeve with corresponding hardware.

69-WK001 WiseKidz - PE Gable Roof 3-3			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*30	4
2	FLAT WASHER	8.5/23.5*T1.5	4

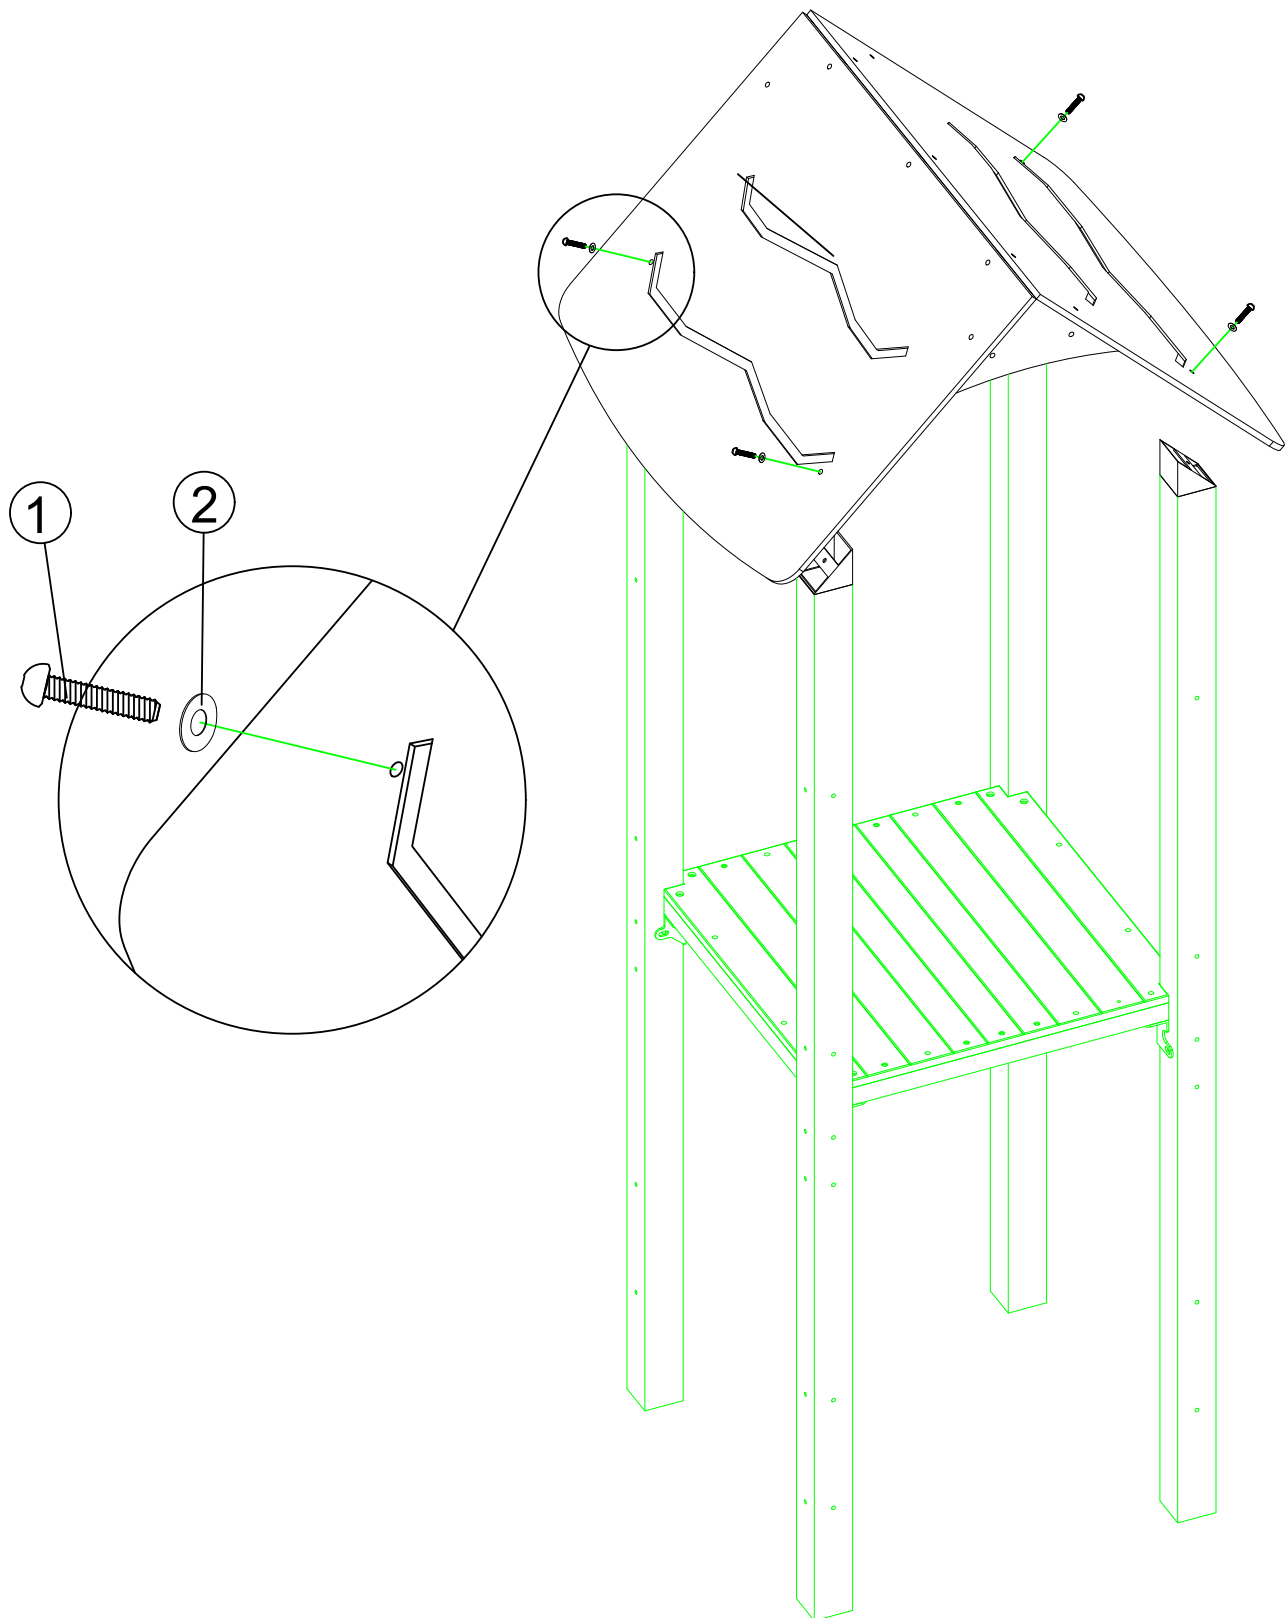

Inspection record

Carry out the inspections at the specified intervals and document the results.

Interval	Check point	YES / NO	Action	Signature
Daily inspection	Screws, bolts and fasteners are firmly tightened.			
	The equipment stands on a level surface; no hazards are present.			
	The equipment is free of dirt and moisture.			
	Moving parts and connections are undamaged and securely fastened.			
	No signs of damage or wear.			
Monthly inspection (in addition to the daily inspection)	Screws are free of rust and damage.			
	All parts are securely connected.			
	Information and compliance labels are intact.			
Annual inspection (in addition to the daily and monthly inspections)	No extensive corrosion; replace affected parts if necessary.			
	No cracks or damage to connecting parts; replace if necessary.			
	No excessive discolouration of components.			
	Screws and connecting elements are in working order, undamaged and not worn.			
	Information labels are legible.			
	The play area under the equipment is safe and level.			

Date of inspection: _____

Carried out by: _____



Thank you for your trust!

If you have any questions about assembly, maintenance or spare parts,
we are happy to help.

WISDOM Education Europe GmbH

schönherr.fabrik · Schönherrstraße 8 · 09113 Chemnitz · Germany
Phone: +49 (0) 37360 488 999 · E-mail: hello@wisdomeurope.eu
www.wisdomeurope.eu