

ASSEMBLY INSTRUCTIONS

Playground equipment · Item no. W-A014N

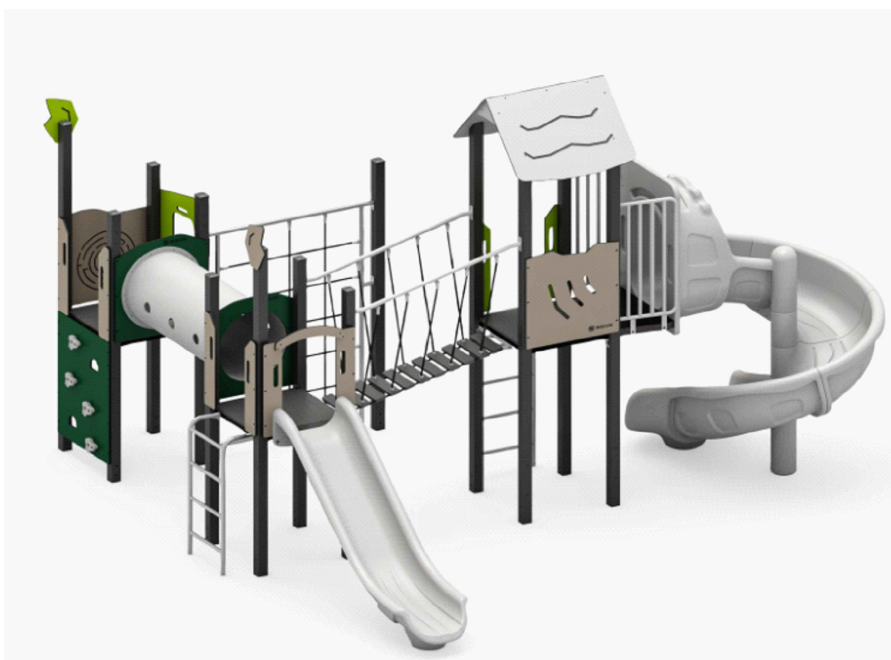

Test standard:	EN 1176-1, EN 1176-3
Overall dimensions:	555 × 531 × 353 cm
Weight:	478 kg (net) / 470 kg (gross)
Age group:	3 to 14 years · max. 2 children at a time

WISDOM Education Europe GmbH

schönherr.fabrik · Schönherrstraße 8 · 09113 Chemnitz · Germany
Phone: +49 (0) 37360 488 999 · E-mail: hello@wisdomeurope.eu
www.wisdomeurope.eu

Product information

Description:	Playground equipment (WiseKidz Play Tower (Natural))
Item no.:	W-A014N
Imported into the EU by:	WISDOM Education Europe GmbH, schönherr.fabrik, Schönherrstraße 8, 09113 Chemnitz, Germany
Manufacturer:	ATA School Supplies Co., Ltd.
Manufacturer address:	Building 4, Lane 2777, Baoan Road, Malu Town, Jiading District, Shanghai, China
Test standard:	EN 1176-1, EN 1176-3
Overall dimensions:	555 × 531 × 353 cm
Weight:	478 kg (net) / 470 kg (gross)
Minimum space:	805.3 × 881 cm

Assembly notes

1. Ensure the area is safe and free of hazards prior to assembly. The minimum space required is 805.3 × 881 cm.
2. A minimum of two adults is required for assembly.
3. The product and materials are intended for indoor or outdoor use under supervision.
4. Before assembly, check the number of parts against the parts list (hardware packages of the individual assembly steps).
5. When assembling, ensure the ground is impact-attenuating or protected by soft material (e.g. cardboard or a blanket) to avoid scratching the equipment.
6. Tighten all bolts firmly after assembly.
7. Remove all assembly materials and tools from the play area before use.
8. Keep children away from the product as long as it is not fully assembled, as well as during disassembly or maintenance work.
9. The product can be installed in two ways: surface mounting on concrete with expansion bolts, or inground installation (set in concrete). Both options are shown in these instructions.

Safety and usage instructions

1. Read the instructions and warning labels carefully before use.
2. Inspect the equipment and play area for potential hazards before each use.
3. Maximum number of simultaneous users: 2.
4. Age group: 3 to 14 years.
5. Never leave children unattended. Constant adult supervision is required.
6. Ensure the surroundings are safe before use. Do not use the equipment in bad weather.
7. Anchoring notes: check monthly that all fixings are tight - the expansion bolts for surface mounting, and the firm seating of the equipment in its foundation for inground installation. Retighten or replace loose connections in good time.
8. Do not climb beyond the intended surfaces. Use the slide only seated, feet first.
9. If material is damaged and needs repair, contact the manufacturer or importer for repair or replacement.
10. The ground must be level (horizontal) during assembly and remain level throughout the entire period of use.

Cleaning and maintenance

1. Clean with a damp cloth.
2. Use only neutral cleaning agents.
3. Inspect the product regularly.
4. Carry out inspections according to the inspection schedule at the end of these instructions.
5. Complete the inspection record after each inspection.



W-A014N




Wisdom Education Europe GmbH
Drosselweg 10, 09526 Olbernhau,
Germany

www.wisdomeurope.eu
Test standard: EN 1176-1, EN 1176-3
Item Code: W-A014N
Year of manufacture: 2025

This nameplate shall be installed at any lower position on the panel.





[cm]

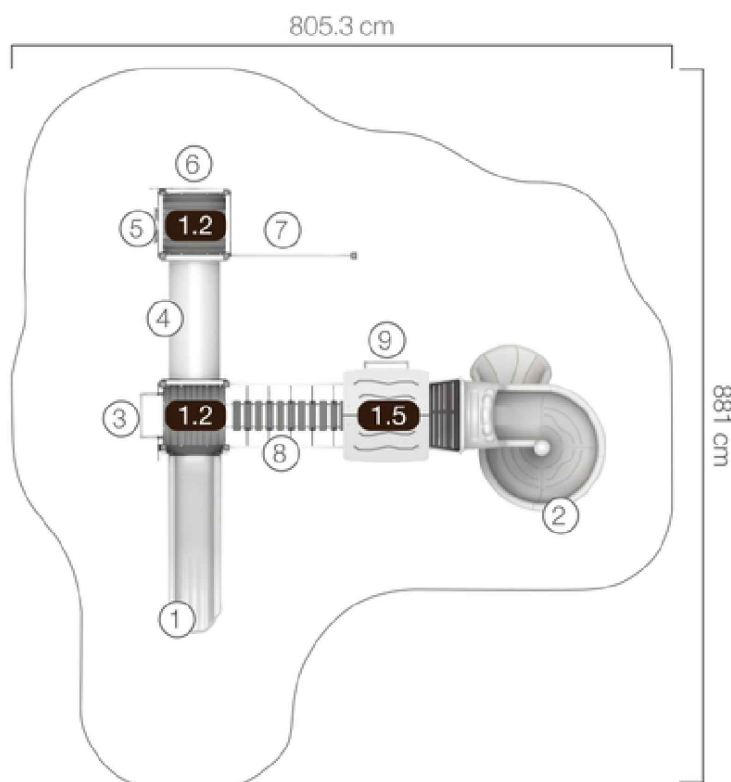

Activities: 9


- | | | |
|-------------------------|---------------------------------|-------------------------------|
| ① 120cm Single Slide | ② 120cm Single Slide | ③ 120cm Stainless Rung Ladder |
| ④ Crawl Tunnel | ⑤ 120cm PE Upright Rock Climber | ⑥ PE Maze Panel |
| ⑦ Stainless Net Climber | ⑧ Inclined Step Board Bridge | ⑨ 150cm Stainless Rung Ladder |

[cm]

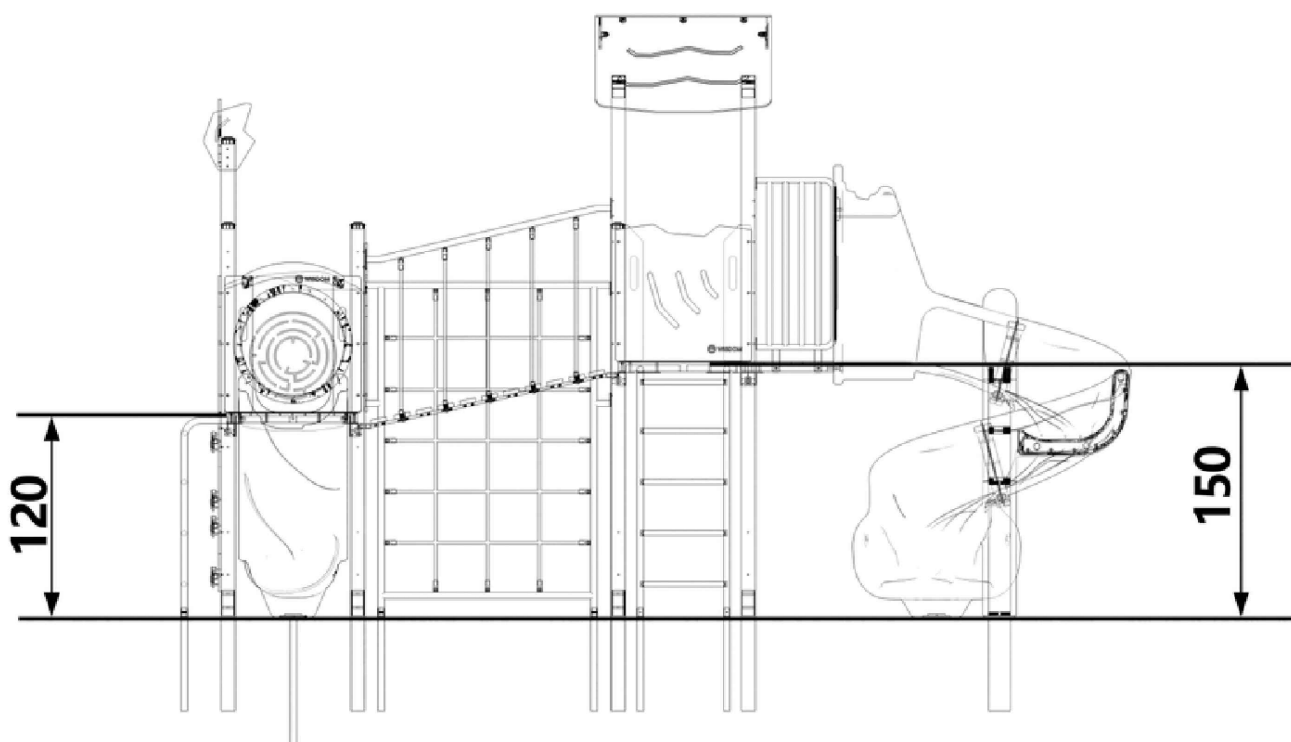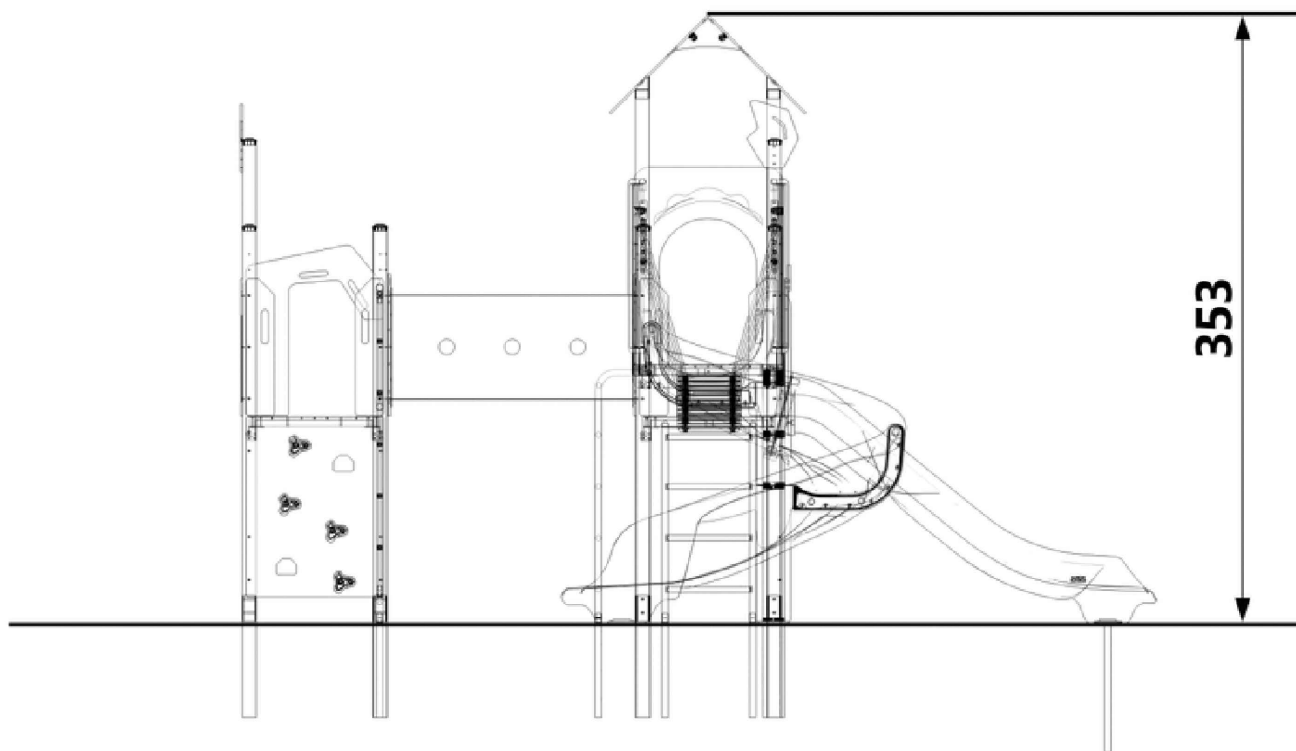


[cm]

Site Layout

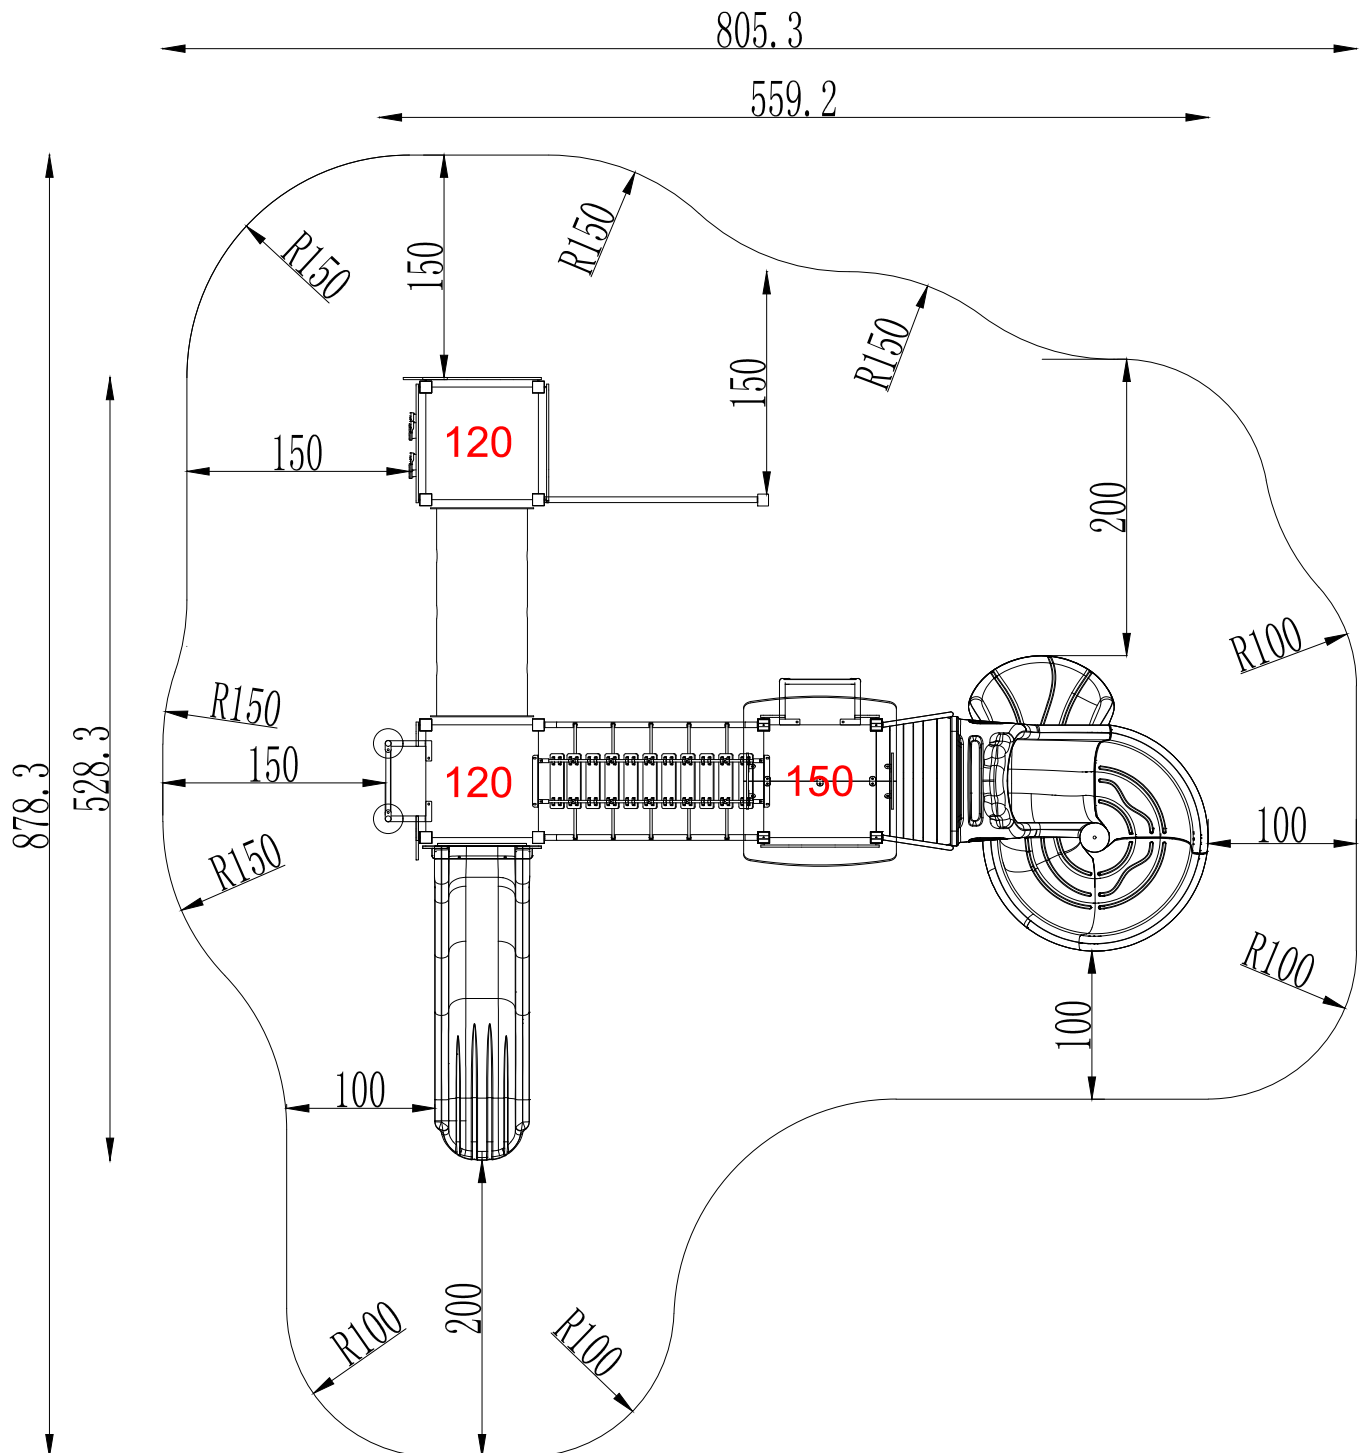


[cm]

Footing Diagram

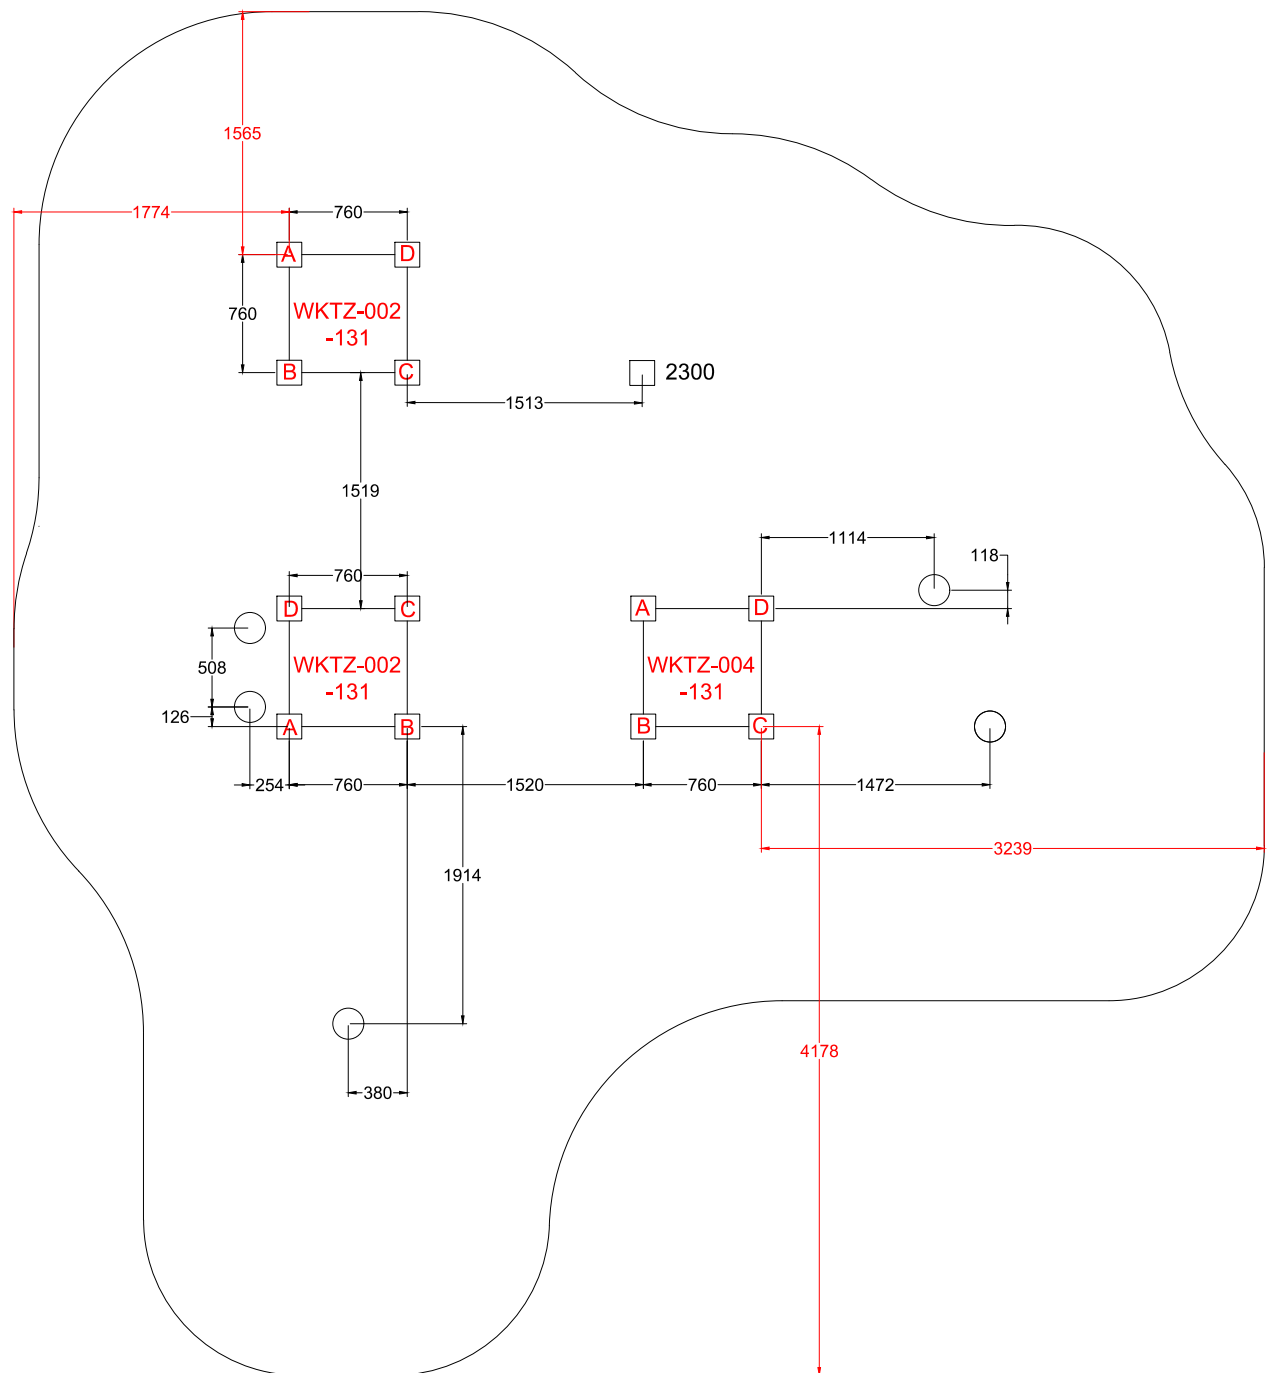


[mm]

Surface Mounted Installation

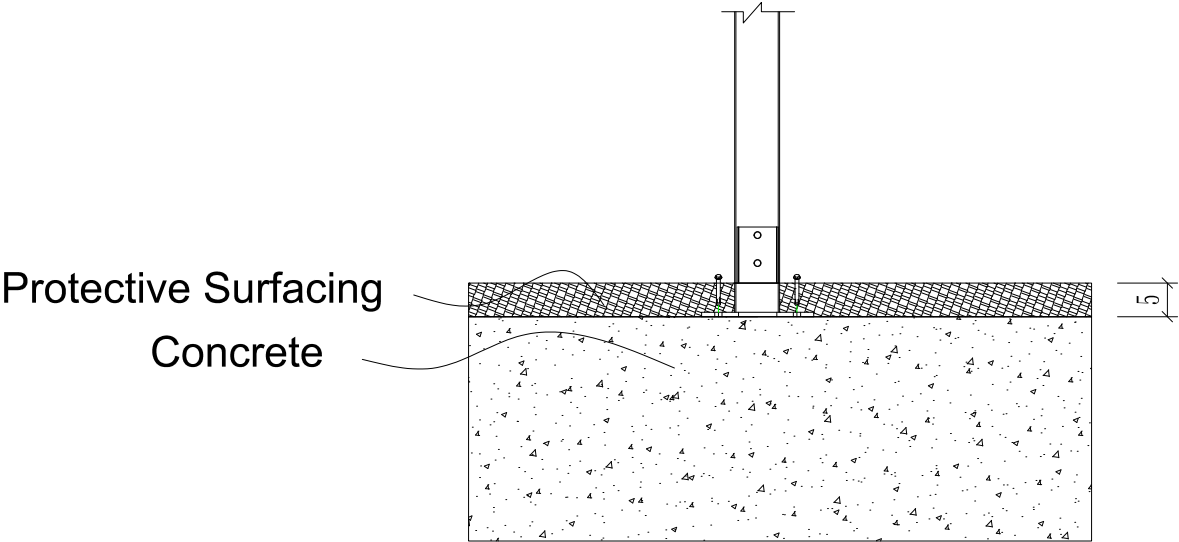

Ingroud Installation

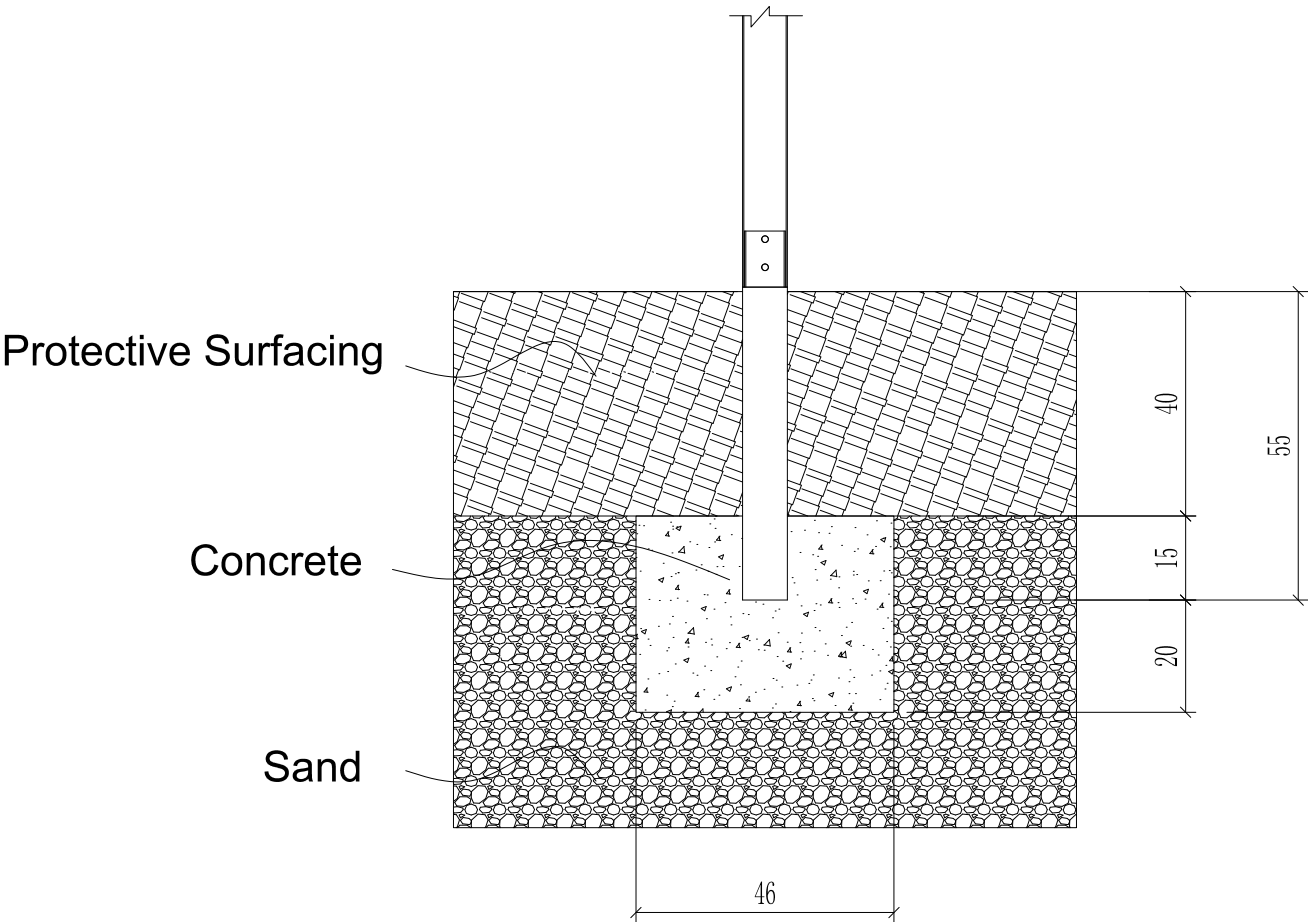


[cm]

No.	Item Code	Description	Picture	Qty	
1	35-210017H55-111	127 *H2020mm 150cm Spiral Slide Middle Axle Inground Footer H55cm (Brown)		1	
2	35-WKM230-001-131	80*80*H2292mm SHS Steel Post (Midnight)		1	
3	63-WK008-110122	WiseKidz - 120cm PE Upright Rock Climber (Dark Green & Lime)		1	
4	63-WK011	WiseKidz - 120cm Stainless Rung Ladder		1	
5	63-WK012	WiseKidz - 150cm Stainless Rung Ladder		1	
6	63-WK017	WiseKidz - Stainless Net Climber		1	
7	64-WK001-131	WiseKidz - WPC Deck (Midnight)		3	
8	64-WK005-131	WiseKidz - Spiral Slide Deck (Midnight)		1	
9	65-21055-10	Spiral Slide 90° Turn Chute (Silver Gray)		2	
10	65-21056-10	Spiral Slide Exit Chute (Silver Gray)		1	
11	65-21057-10	Spiral Slide Hood (Silver Gray)		1	
12	65-WKP002A-10	WiseKidz - 120cm Single Slide (Silver Gray)		1	
13	66-WK001-113122	WiseKidz - PE Single Slide Hood (Tan & Lime)		1	
14	66-WK002-113122	WiseKidz - PE Climber Entry (Tan & Lime)		3	
15	66-WK003-113122	WiseKidz - PE Climber Side Entry (Tan & Lime)		1	

16	66-WK007-113122	WiseKidz - PE Safety Panel (Tan & Lime)		1	
17	66-WK008-110113	WiseKidz - PE Maze Panel (Dark Green & Tan)		1	
18	66-WK009-110113	WiseKidz - PE Crawl Tunnel Entry (Dark Green & Tan)		2	
19	66-WK030-10	WiseKidz - Spiral Slide Deck Metal Barrier (Silver Gray)		1	
20	67-WK001-10	Wise Kidz - ø600mm Crawl Tunnel L1410mm (Silver Gray)		1	
21	67-WK003-10	WiseKidz -300mm Inclined Step Board Bridge L1520mm (Silver Gray)		1	
22	69-WK001-10131	WiseKidz - PE Gable Roof (Silver Gray)		1	
23	70-21001-131	Single Slide Inground Footer (Midnight)		1	
24	70-WK002-V55-131	WiseKidz - Steel Post Inground Footer H55cm		13	
25	70-WK005-V55-10	WiseKidz - 38mm Post Inground Footer H55cm (Silver Gray)		6	
26	72-WK001-113122	WiseKidz - Post Topper (Tan & Lime)		2	
29	WKTZ-002-131	80*80*H2292mm(3pcs)+H2792mm(1pc) WiseKidz - Galvanized Steel Post Set 1200mm Deck w/o Roof (Midnight)		2	
30	WKTZ-004-131	80*80*H3092mm(4pcs) WiseKidz - Galvanized Steel Post Set 1500mm Deck w/Roof (Midnight)		1	

No.	Item Code	Description	Picture	Qty	
1	63-WK008WJB	WiseKidz - 120cm PE Upright Rock Climber - Hardware Package		1	
2	63-WK011WJB	WiseKidz - 120cm Stainless Rung Ladder - Hardware Package		1	
3	63-WK012WJB	WiseKidz - 150cm Stainless Rung Ladder - Hardware Package		1	
4	63-WK017WJB	WiseKidz - Stainless Net Climber - Hardware Package		1	
5	64-WK001WJB	WiseKidz - WPC Square Deck 760mm - Hardware Package		3	
6	64-WK005WJB	WiseKidz - Spiral Slide Deck (Midnight)- Hardware Package		1	
7	65-21055WJB	Spiral Slide 90°Turn Chute - Hardware Package		2	
8	65-21056WJB	Spiral Slide Exit Chute - Hardware Package		1	
9	65-21057WJB	Spiral Slide Hood - Hardware Package		1	
10	65-WKP002AWJB	WiseKidz - 120cm Single Slide - Hardware Package		1	
11	66-WK001WJB	WiseKidz - PE Single Slide Hood - Hardware Package		1	
12	66-WK002WJB	WiseKidz - PE Climber Entry - Hardware Package		3	
13	66-WK003WJB	WiseKidz - PE Climber Side Entry - Hardware Package		1	
14	66-WK007WJB	WiseKidz - PE Safety Panel - Hardware Package		1	
15	66-WK008WJB	WiseKidz - PE Maze Panel - Hardware Package		1	

16	66-WK009WJB	WiseKidz - PE Crawl Tunnel Entry - Hardware Package		2	
17	66-WK030WJB	WiseKidz - Spiral Slide Deck Metal Barrier (Silver Gray) - Hardware Package		1	
18	67-WK001WJB	WiseKidz - ϕ 600mm Crawl Tunnel L1410mm - Hardware Package		1	
19	67-WK003WJB	WiseKidz -300mm Inclined Step Board Bridge L1520mm - Hardware Package		1	
20	69-WK001WJB	WiseKidz - PE Gable Roof - Hardware Package		1	
21	70-21001WJB	Single Slide Inground Footer -Hardware Package		1	
22	70-WK002-V55WJB	WiseKidz - Steel Post Inground Footer H55cm - Hardware Package		13	
23	70-WK005-V55WJB	Wise Kidz - 38mm Post Inground Footer H55cm - Hardware Package		6	
24	72-WK001WJB	WiseKidz - Post Topper - Hardware Package		2	

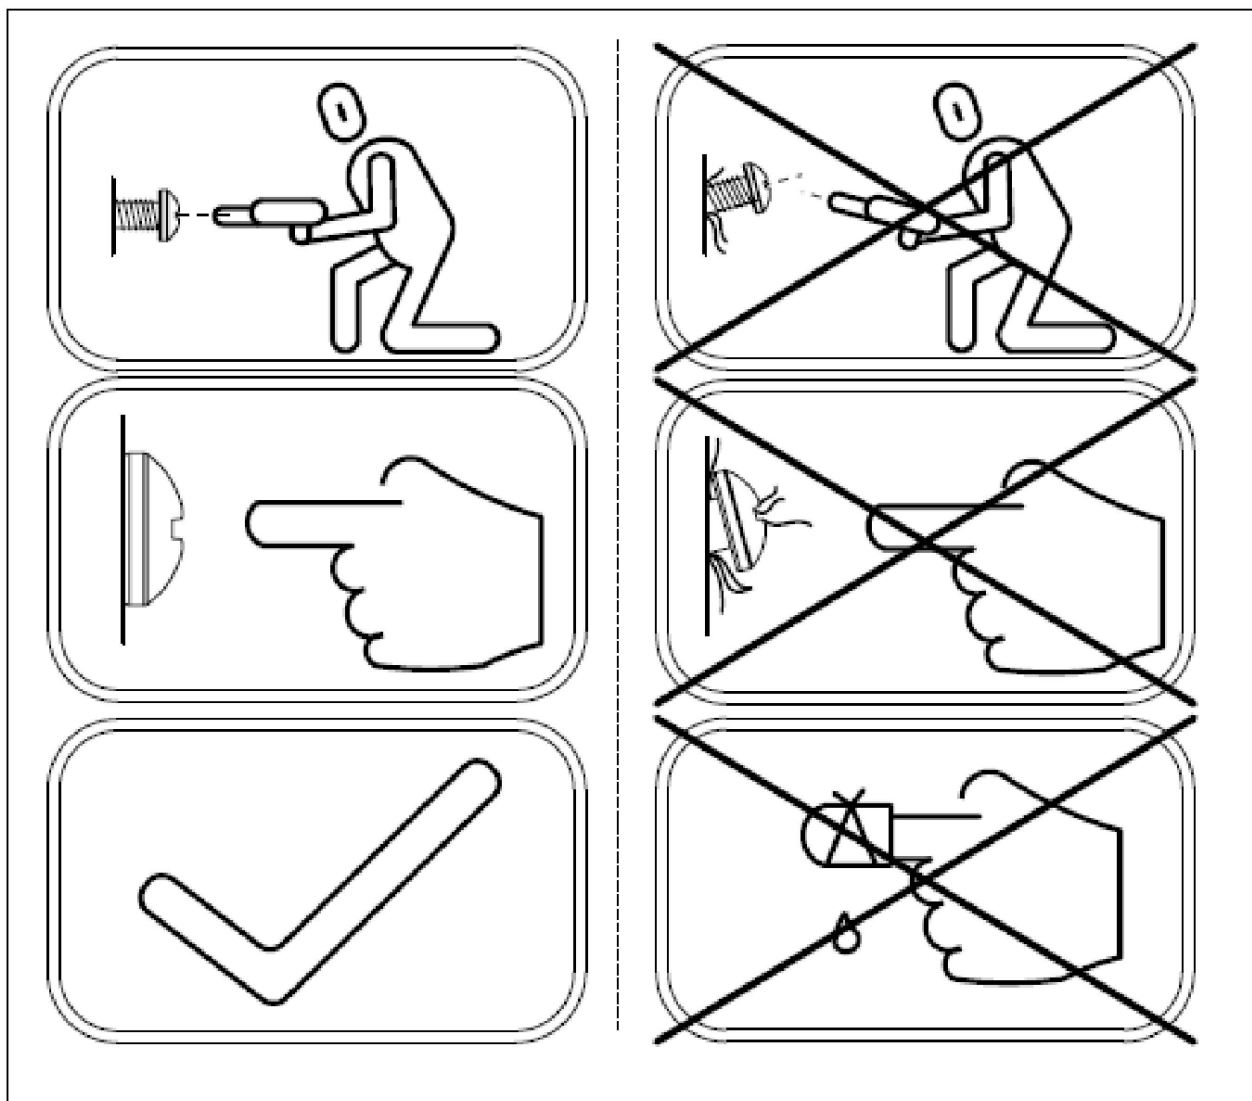

[cm]


Installation Steps:


1: As shown in the figure, connect the post to the surface mount plate, and connect and fasten them with the corresponding hardware.

2: Use expansion bolts to connect the installed post and surface mount plate to the ground.

70-WK002-V55 WiseKidz - Steel Post Inground Footer H55cm


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M10*120	2
2	FLAT WASHER	10.5/25*T1.5	4
3	LOCK NUT	M10	2
4	PLASTIC CAP	φ34 M10	2

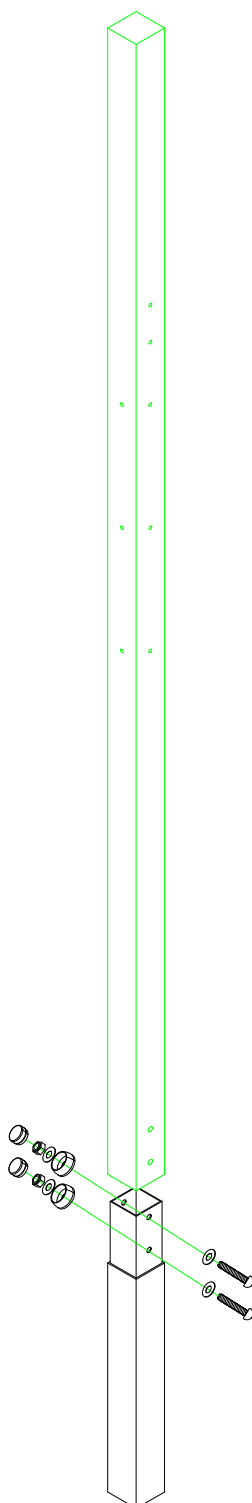

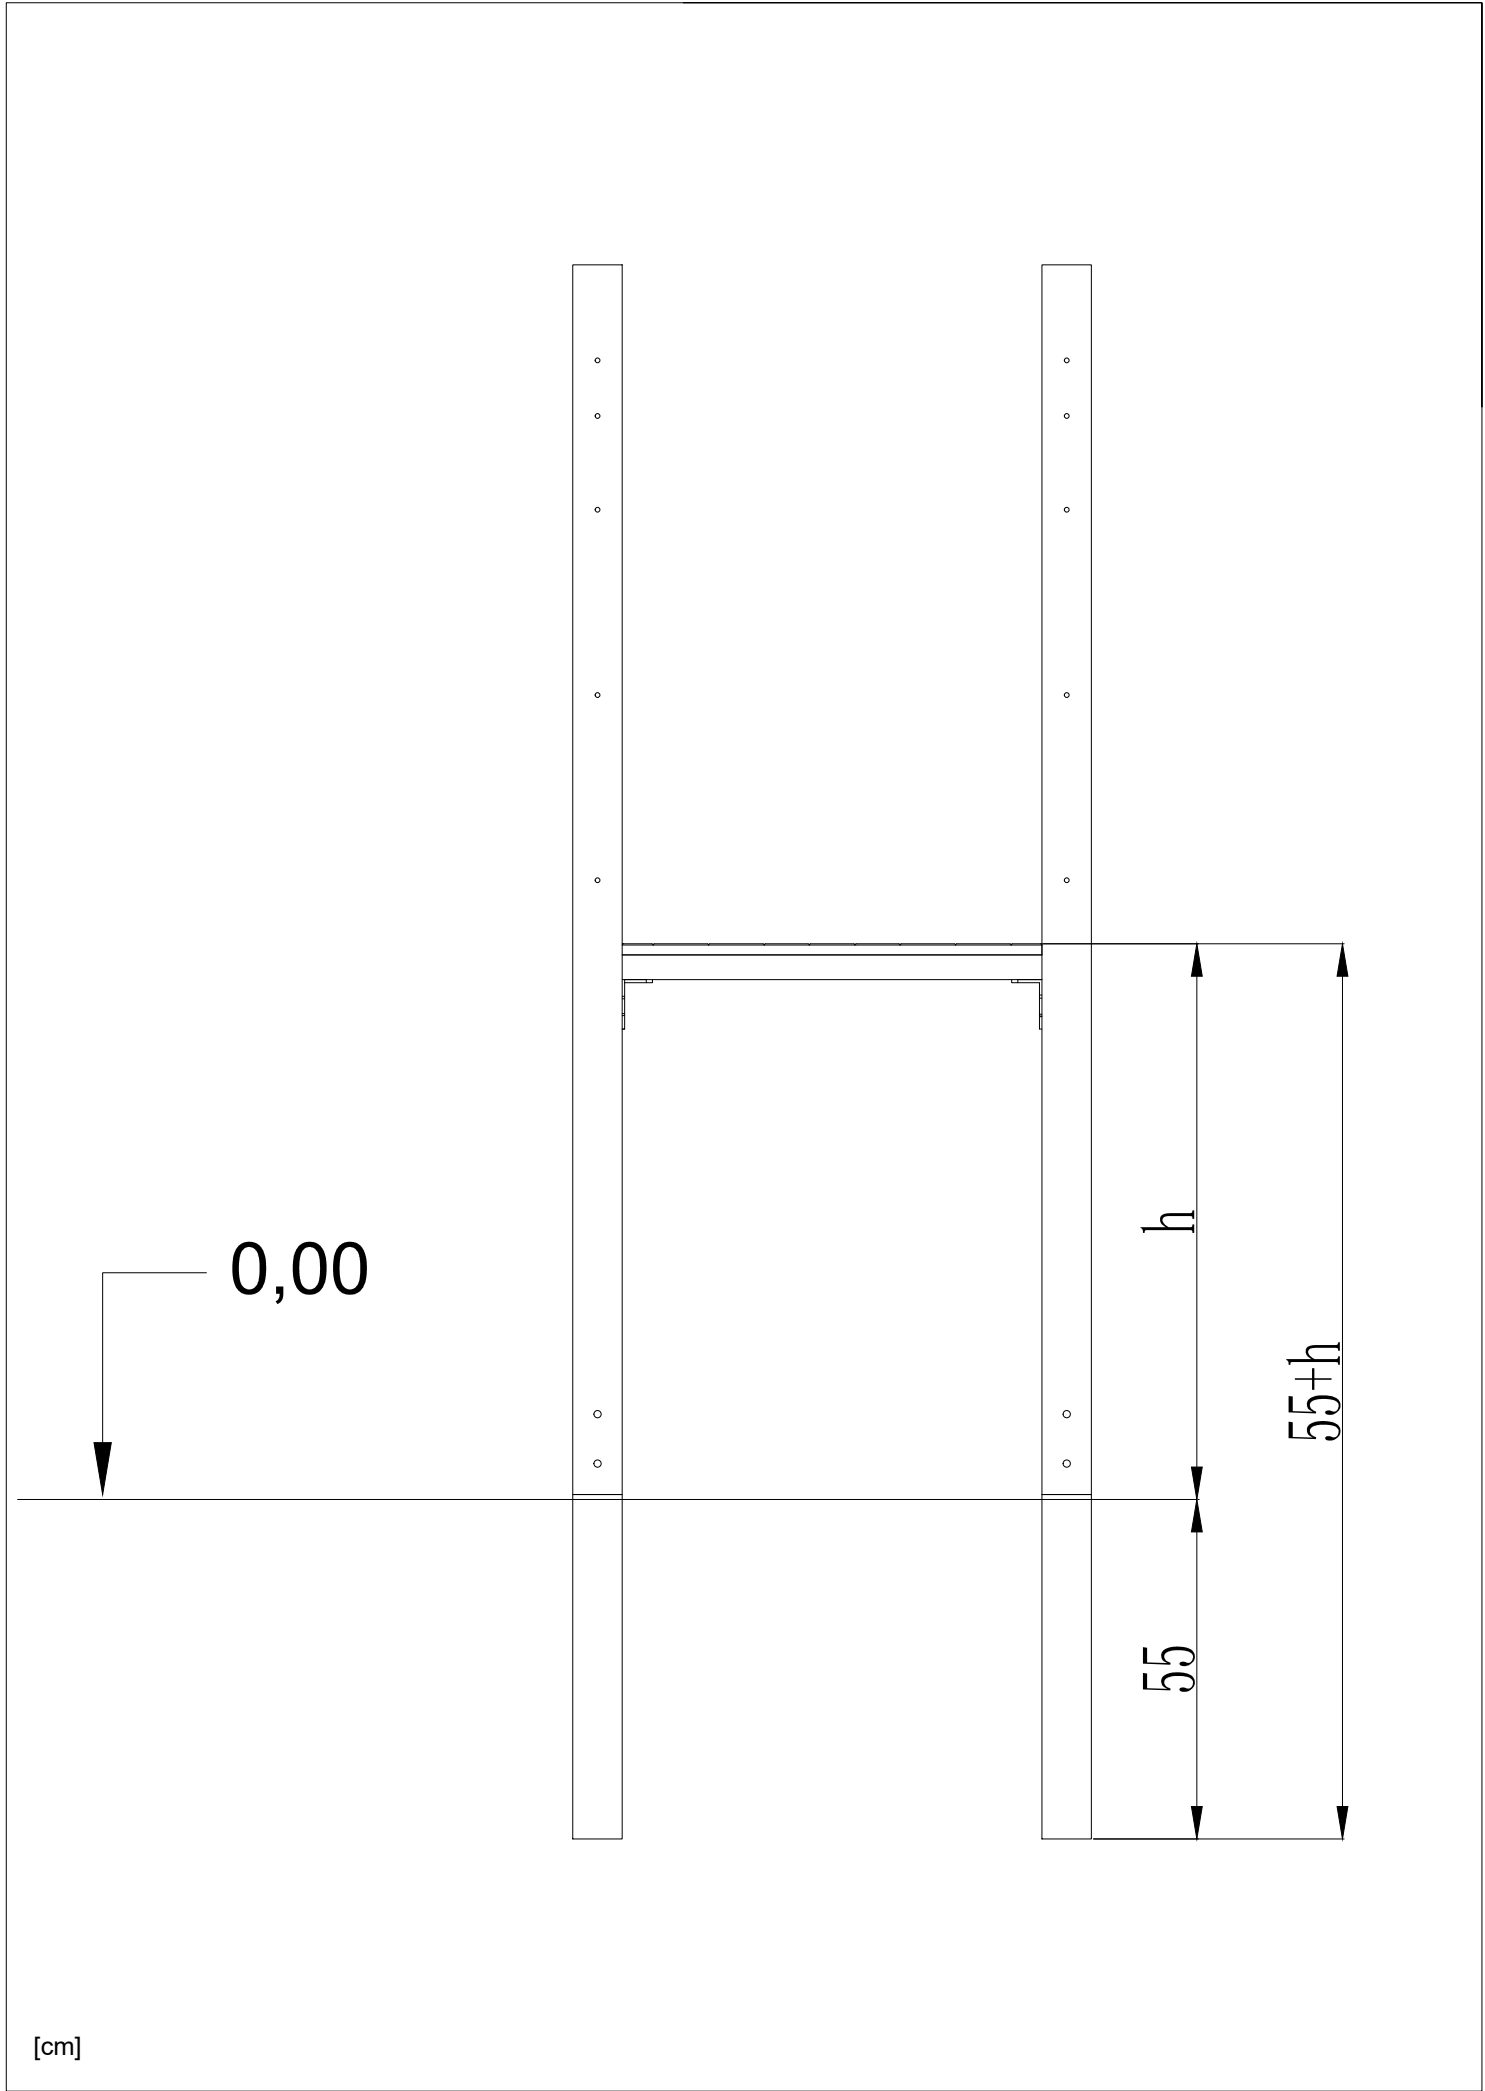

Post Position Diagram

64-WK001 WiseKidz - WPC Deck

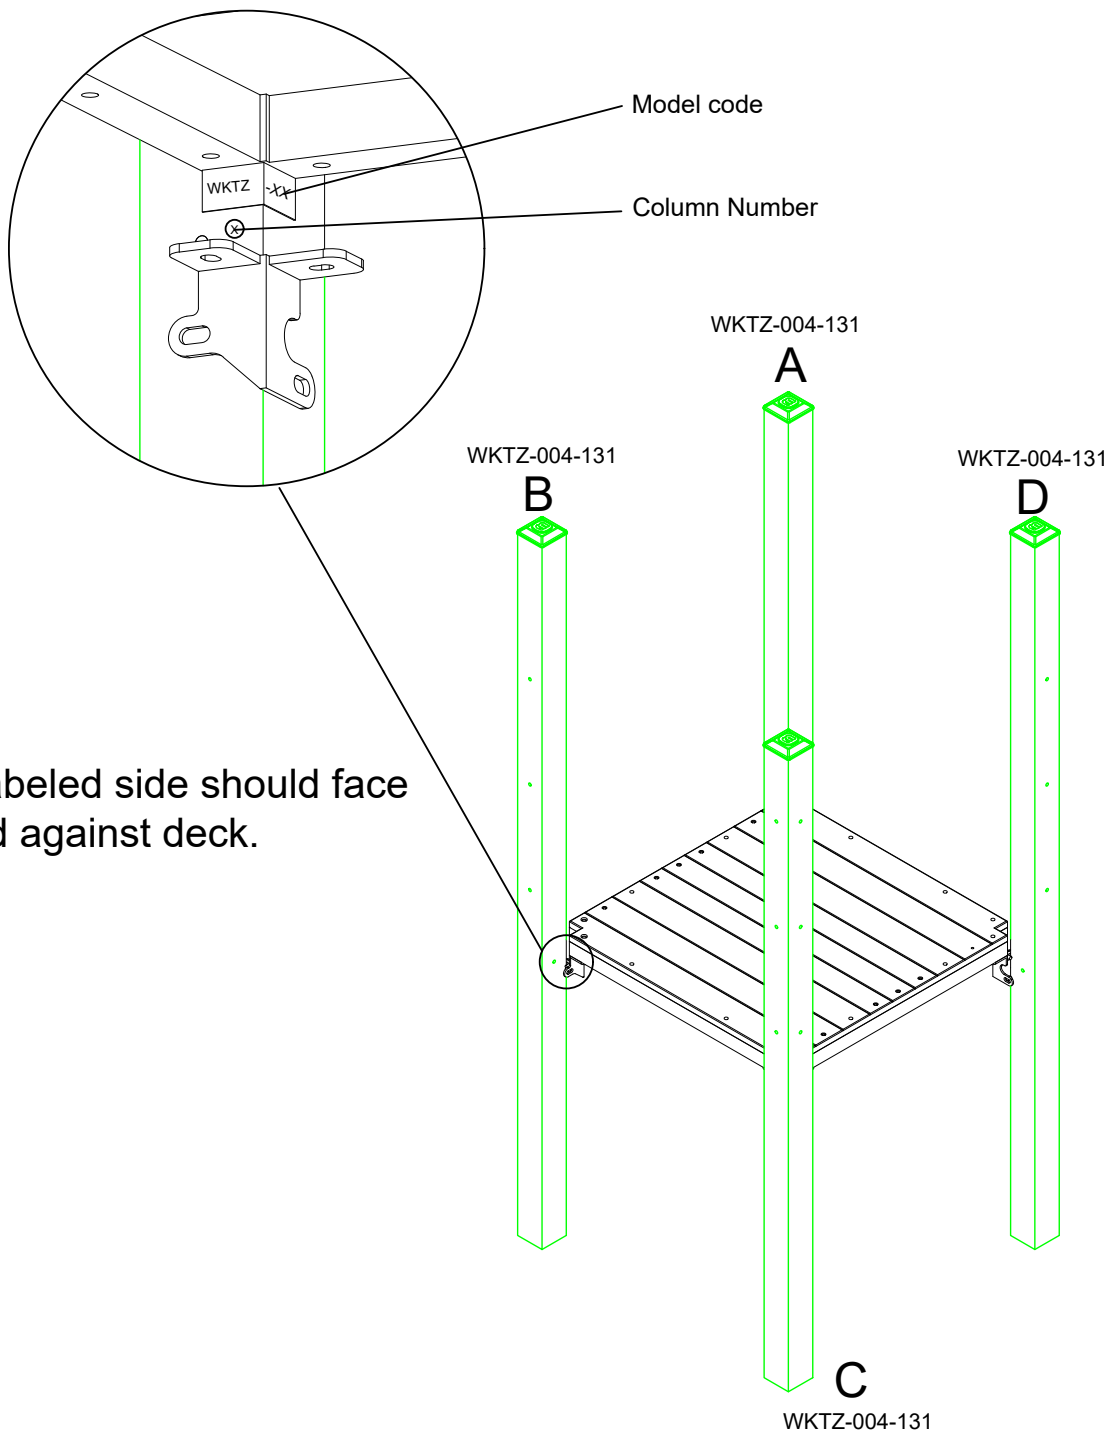


Installation Steps:

1: Use custom corner braces to align the connection holes of the deck and the post, then use corresponding hardware to connect and fasten them.

64-WK001 WiseKidz - WPC Deck

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*70	8
2	FLAT WASHER	8.5/23.5*T1.5	8
3	LOCK NUT	M8	8
4	PLASTIC CAP	Ø10*34	8
5	TAMPER RESISTANT TORX-BOLT	M8*25	8

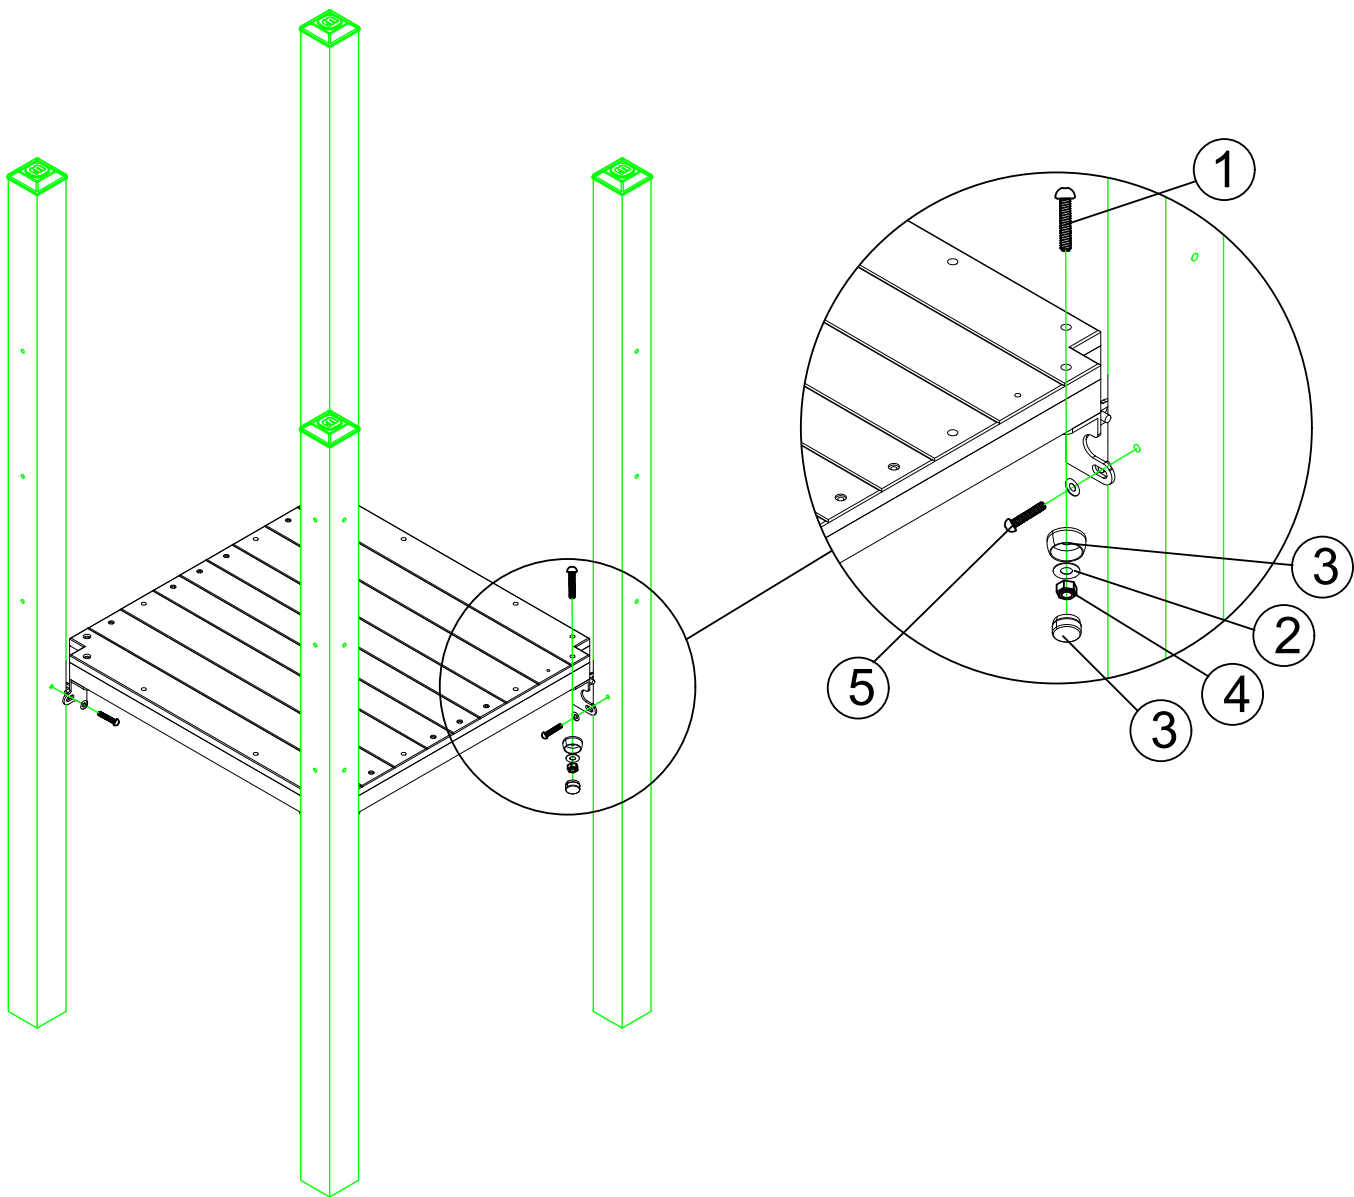


Installation Steps:

1: Align the connection holes of the panel and the crawl tunnel, then use corresponding hardware to connect and fasten them.

67-WK001 Wise Kidz - 600mm Crawl Tunnel L1410mm

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	20
2	FLAT WASHER	8.5/23.5*T1.5	40
3	LOCK NUT	M8	20
4	PLASTIC CAP	Ø34 M10	20

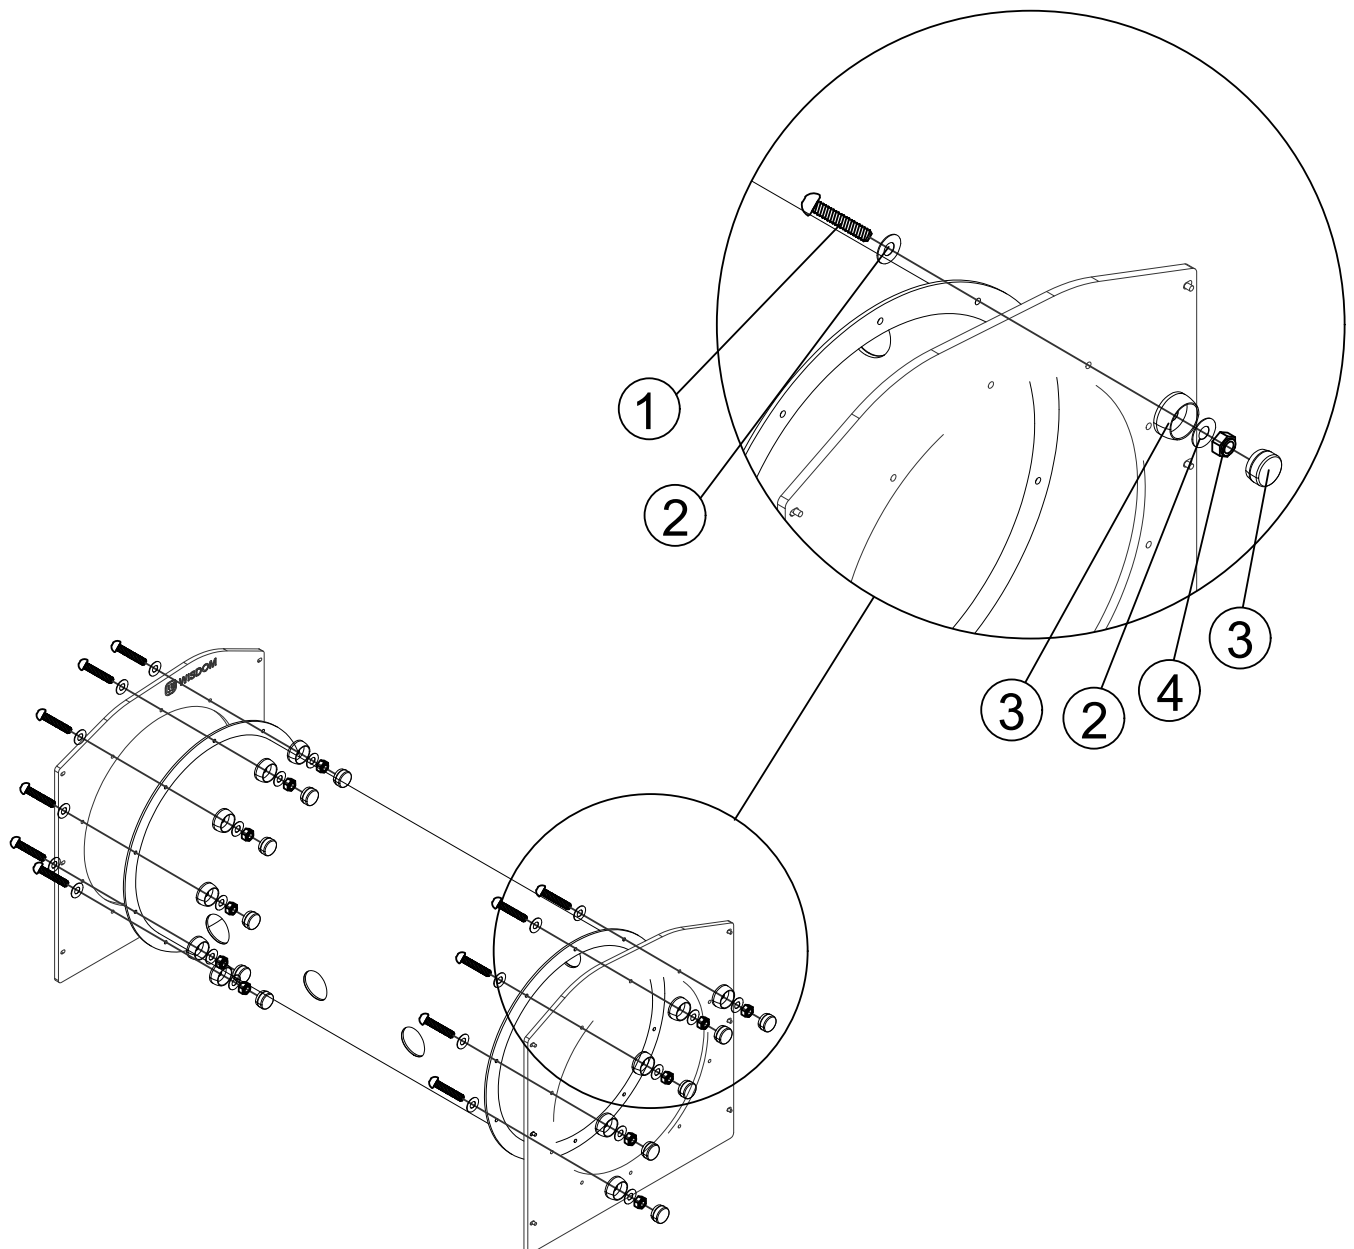


Installation Steps:

1:As shown in the figure align the handrail with the embedded holes of the post and use corresponding hardware to connect and tighten them.

2:As shown in the figure place the L shaped corner brace of the pedal bridge below the deck align the corresponding holes and use corresponding hardware to connect and tighten.

W003 Wiseid-300mm Inclined Step Board Bridge L1520mm


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*80	□
2	FLAT WASHER	8.5/23.5*T1.5	1□
3	LOCK NUT	M8	□
□	PLASTIC CAP	3 M10	□
5	TAMPER RESISTANT TORX-BOLT	M8*30	8

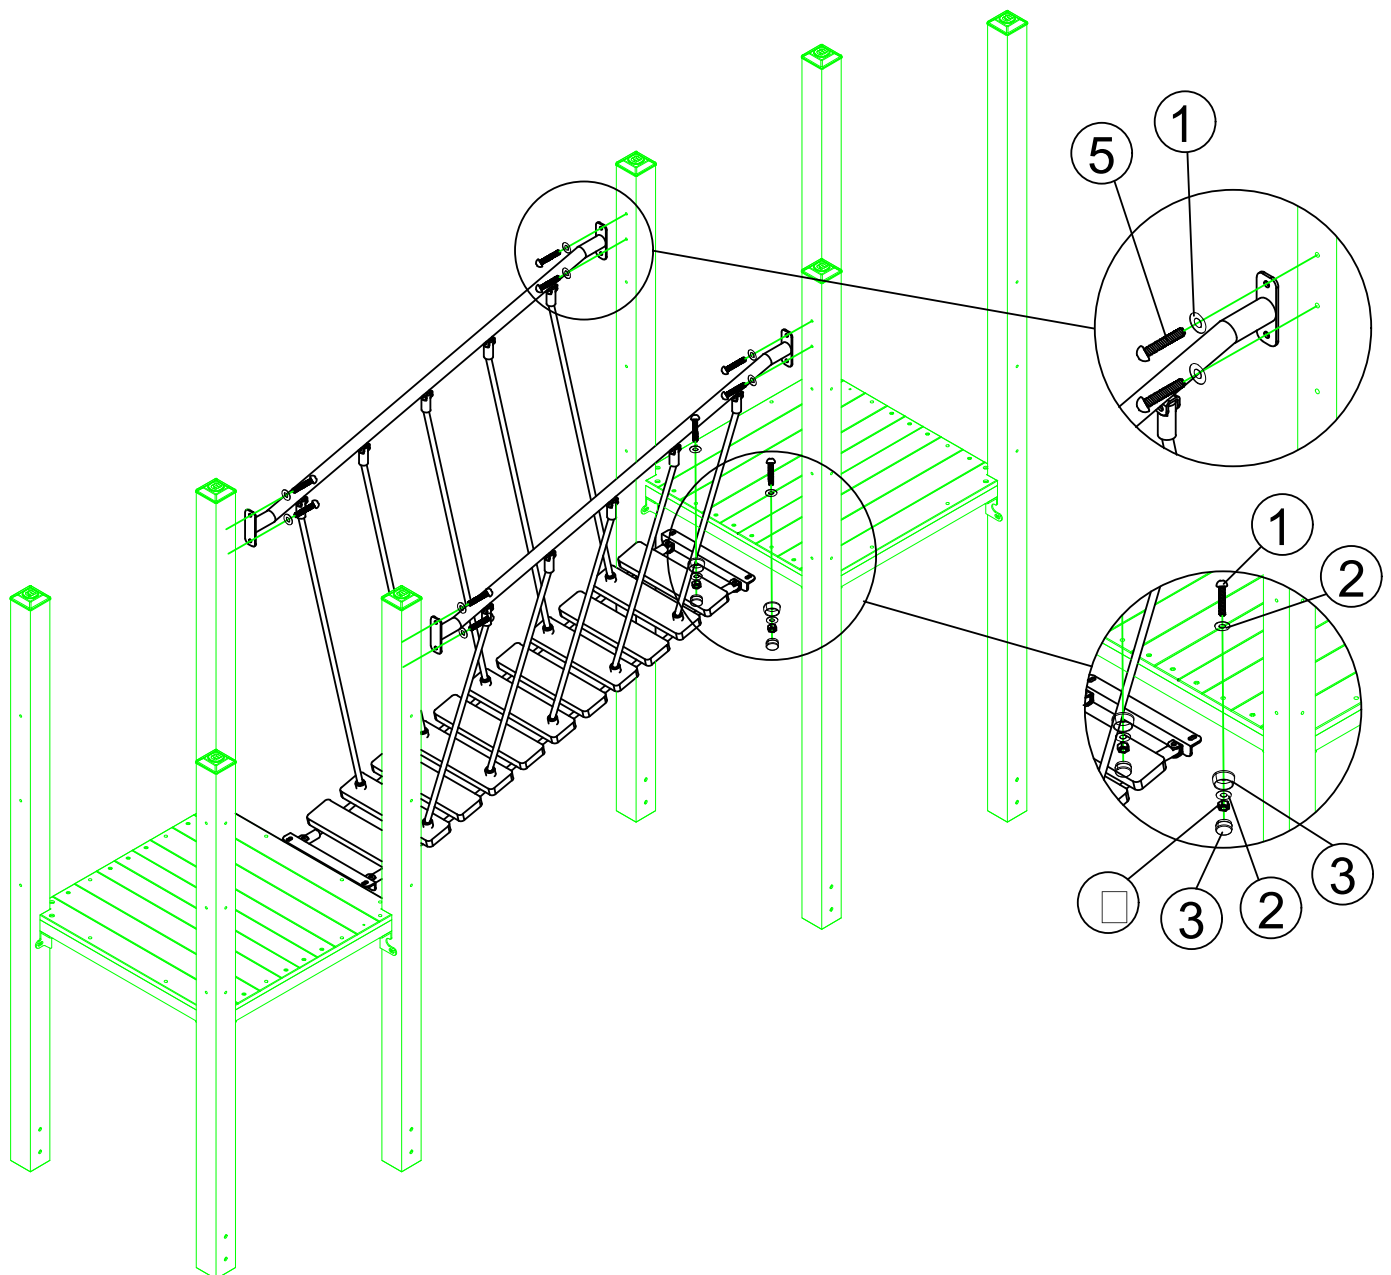

Installation Steps:

1: Use custom corner braces to align the connection holes of the deck and the post, then use corresponding hardware to connect and fasten them.


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*75	4
2	FLAT WASHER	8.5/23.5*T1.5	10
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4
5	TAMPER RESISTANT TORX-BOLT	M8*25	2

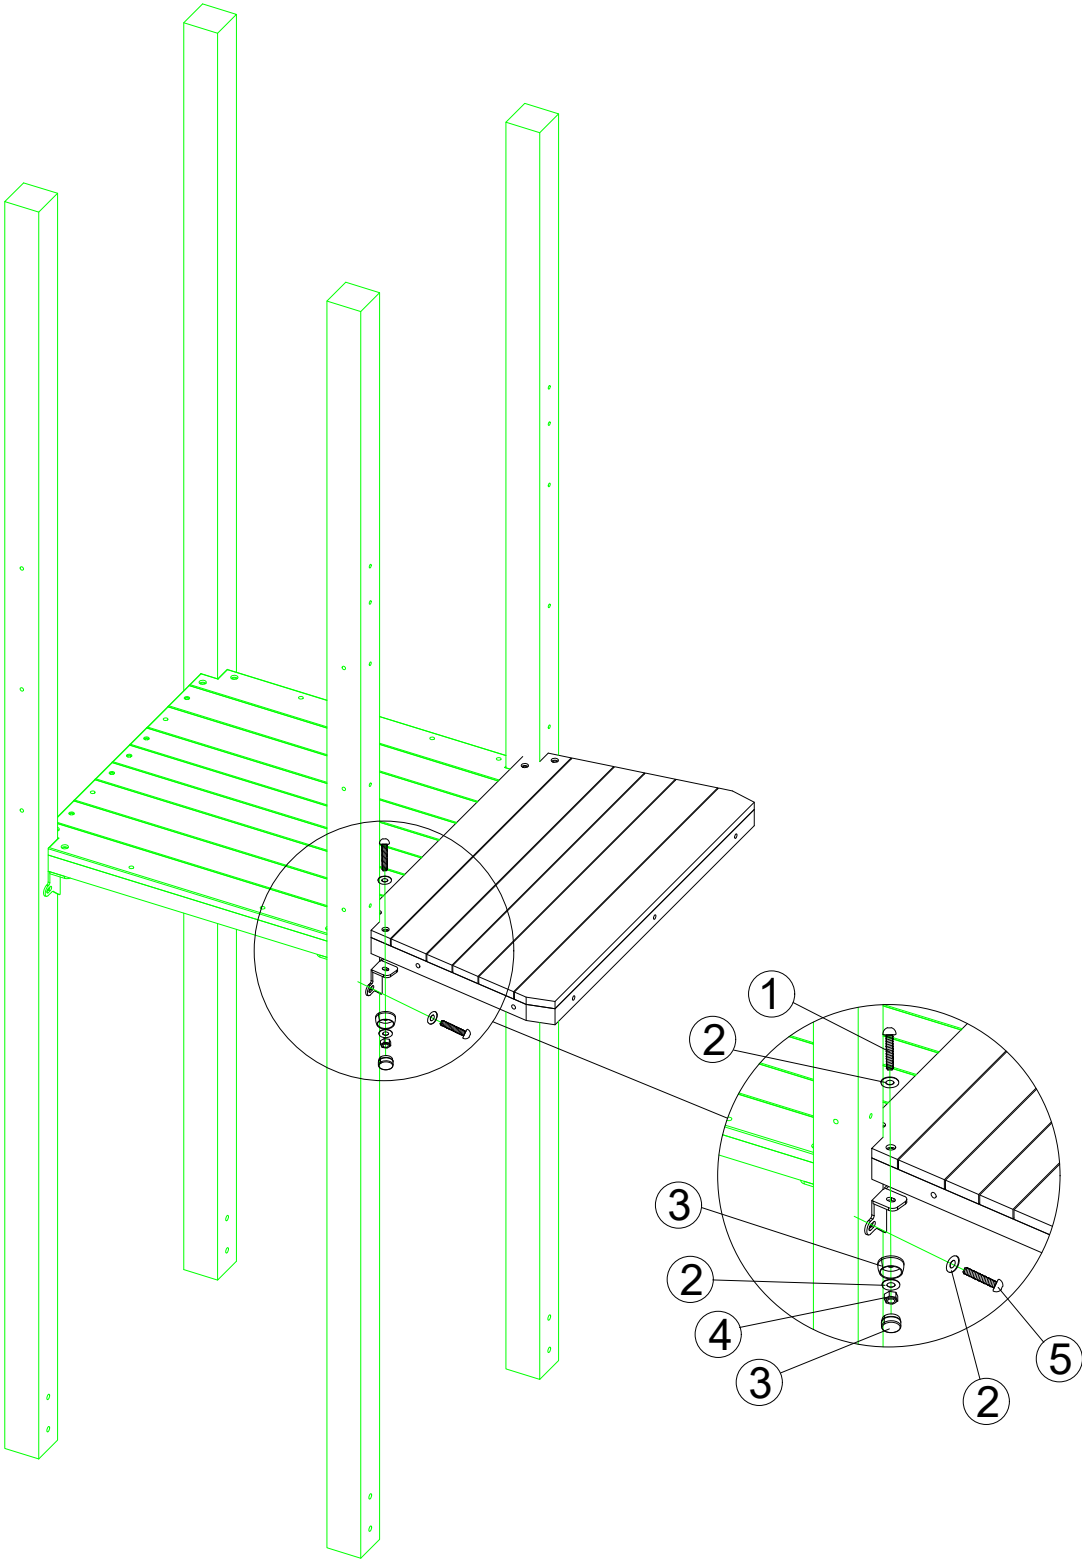

Installation Steps:

1: Align the holes of the railing with those on the post and platform, then use corresponding hardware to fasten.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*25	4
2	FLAT WASHER	8.5/23.5*T1.5	12
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4
5	TAMPER RESISTANT TORX-BOLT	M8*60	4

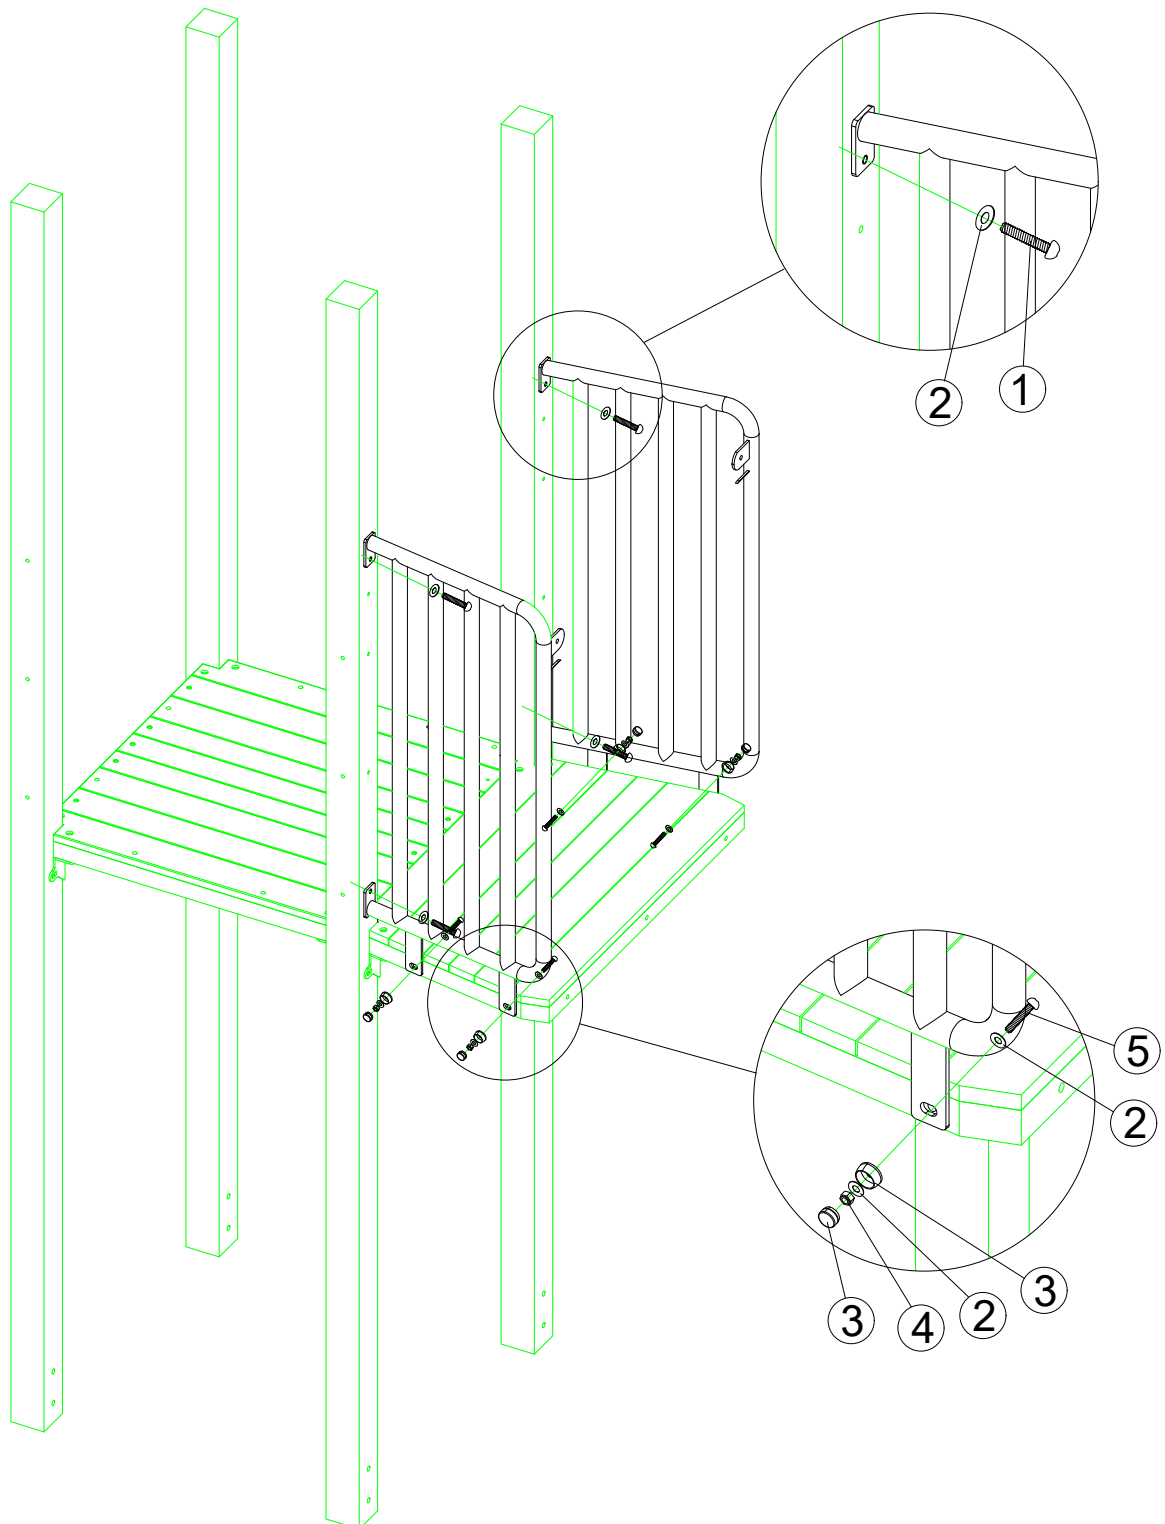


Installation Steps:

1: Align the connecting iron with the corresponding holes on the spiral slide hood.


2: Insert corresponding hardware and tighten.

65-21057 Spiral Slide Hood			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*65	2
2	FLAT WASHER	8.5/23.5*T1.5	9
3	LOCK NUT	M8	4
4	TAMPER RESISTANT TORX-BOLT	M8*55	2
5	TAMPER RESISTANT TORX-BOLT	M10*20	1

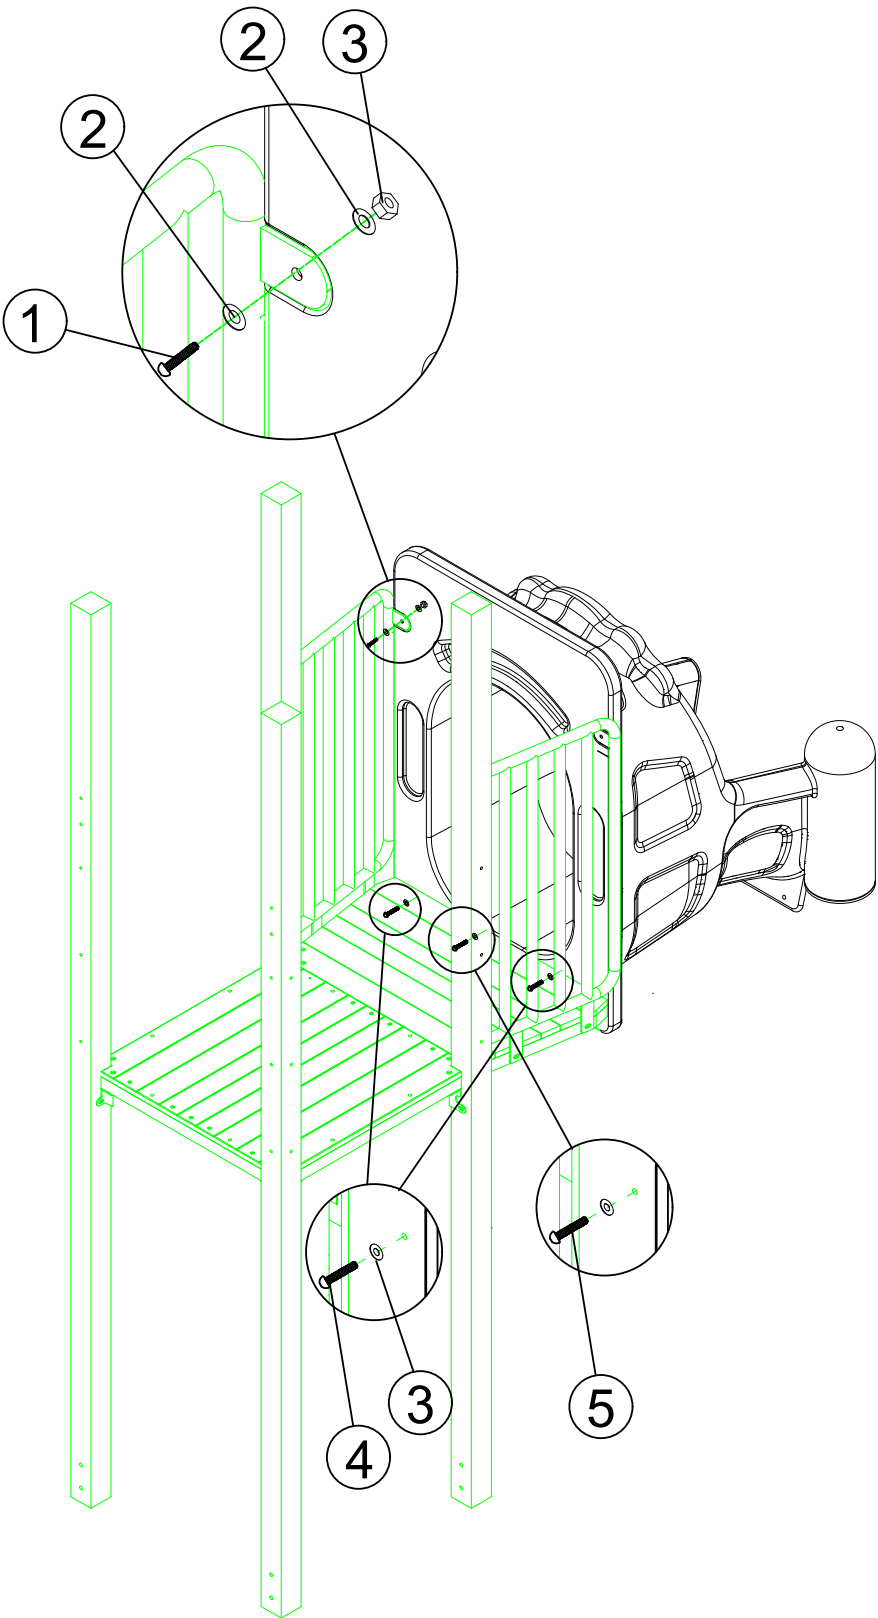


Installation steps:

35-210017H55 127 *H2020mm 150cm Spiral Slide
Middle Axle Inground Footer H55cm

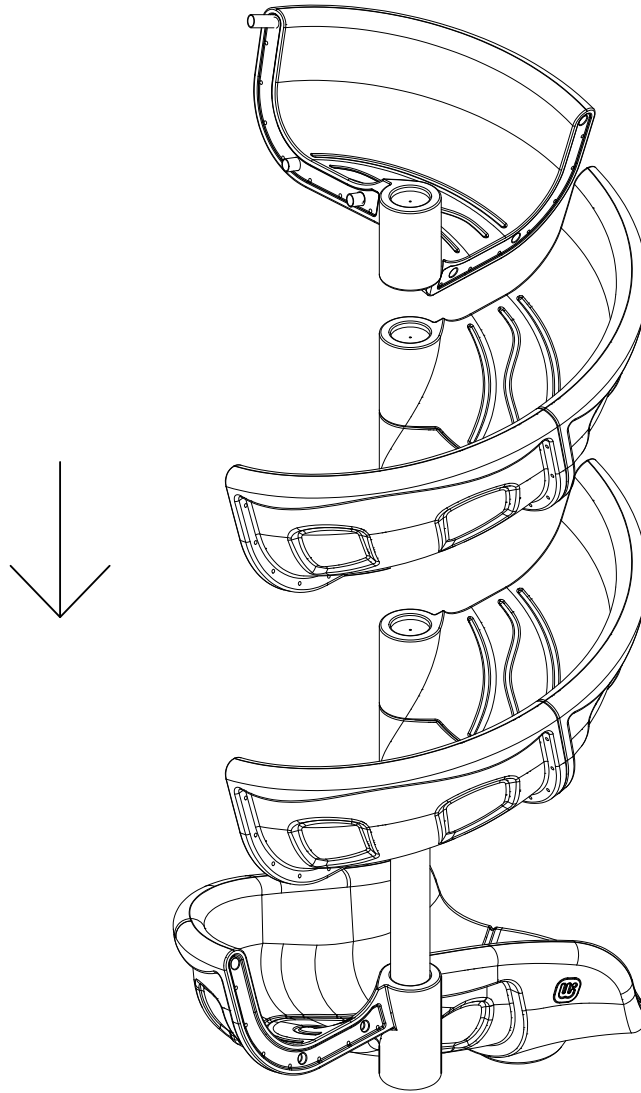


The lower section of the post is for inground mount, and the upper section goes through each chute of Spiral Slide to complete the installation.

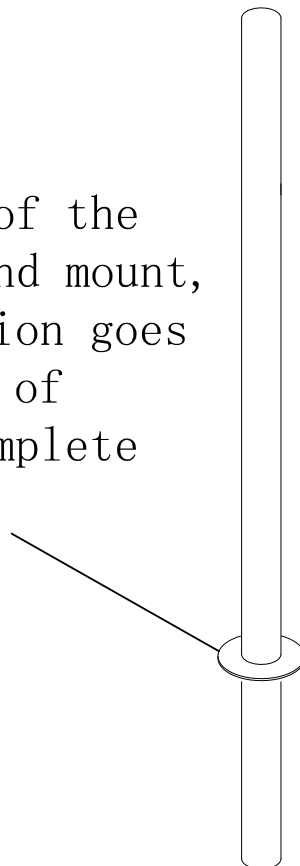

Installation steps:

- 1: Insert positioning tube
- 2: Confirm the location of sectional slide, as shown in the diagram.
- 3: Align the sectional slide with corresponding holes on the slide.
- 4: Insert the corresponding hardware and tighten.


65-21055 Spiral Slide 90° Turn Chute			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M10*95	7
2	FLAT WASHER	10.5/25*T1.5	14
3	PLASTIC CAP	φ34*M10	7
4	LOCK NUT	M10	7

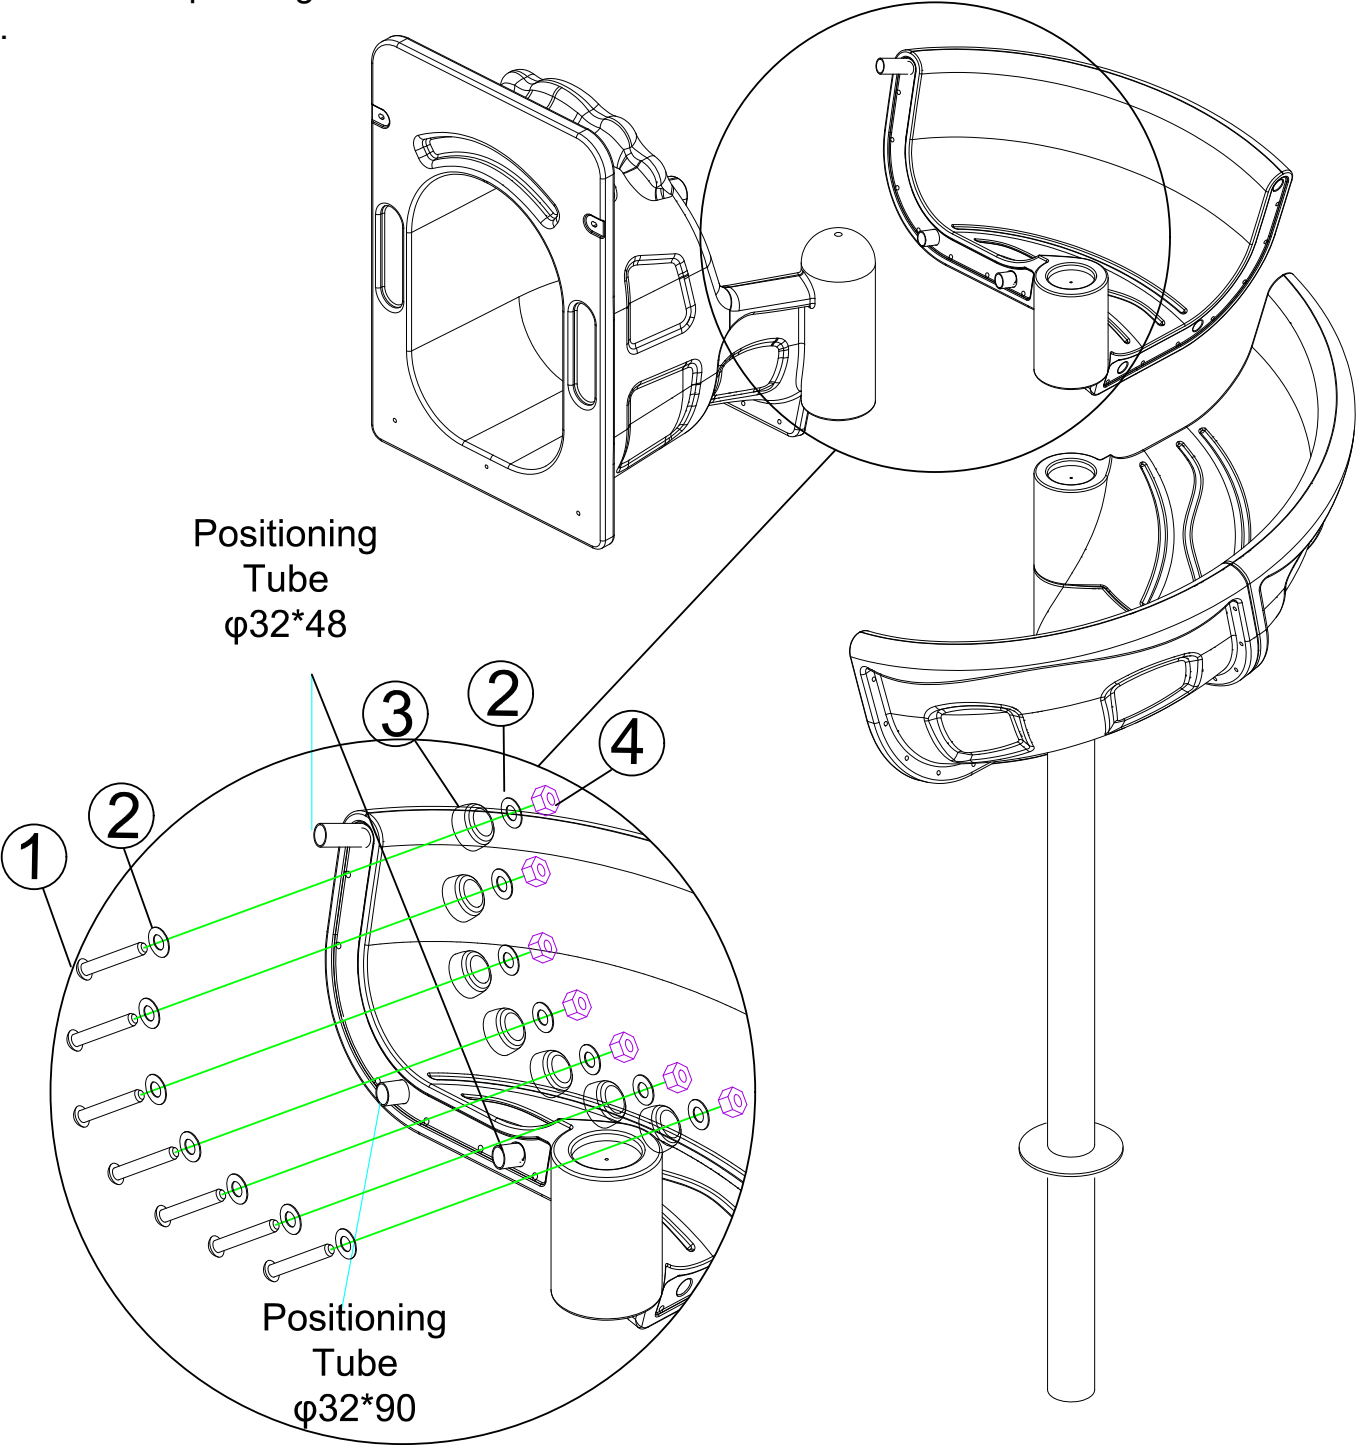

Installation steps:

- 1: Insert positioning tube
- 2: Confirm the location of sectional slide as shown in the diagram.
- 3: Align the sectional slide with corresponding holes on the slide.
- 4: Insert the corresponding hardware and tighten.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M10*95	7
2	FLAT WASHER	10.5/25*T1.5	14
3	PLASTIC CAP	φ34*M10	7
4	LOCK NUT	M10	7


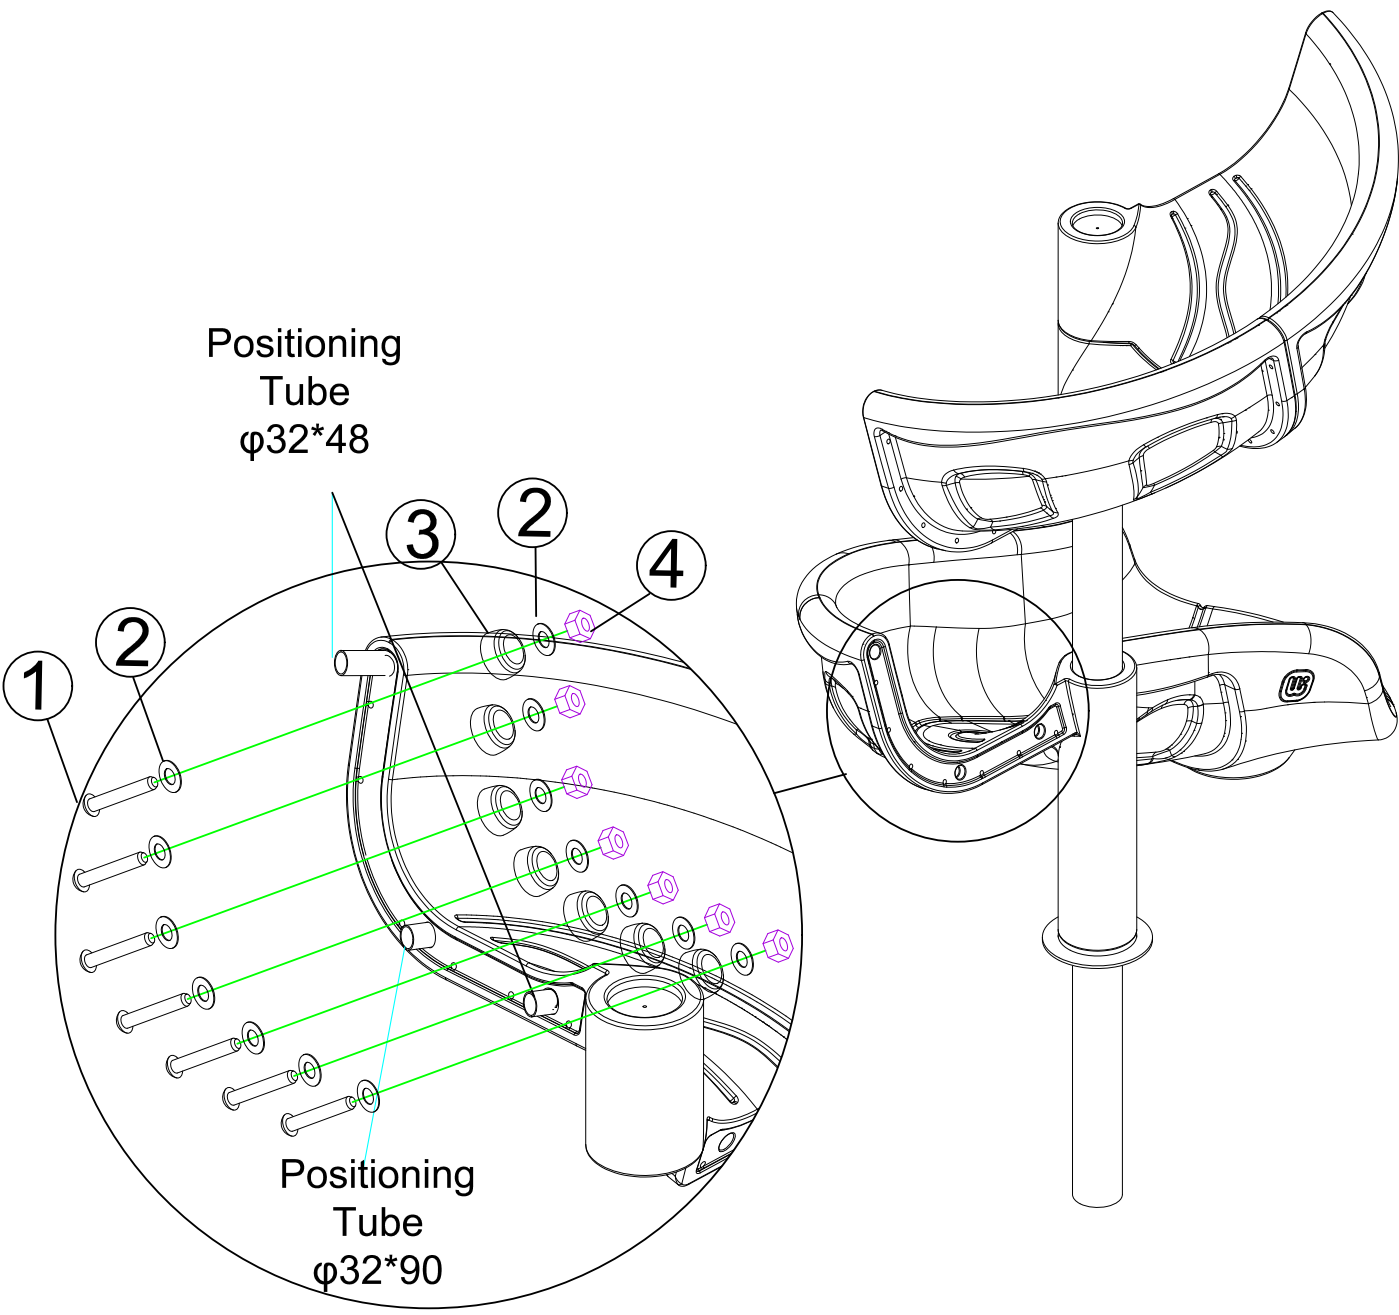


Installation Steps:

1: Align the connection holes of the panel with those of the post, then connect and tighten them with the corresponding hardware.

66-WK009 WiseKidz - PE Crawl Tunnel Entry

Number	Name	Model	Quantity
1	STAINLESS STEEL HEX HEAD SELF-TAPPING SCREW	M8*70	6
2	FLAT WASHER	8.5/23.5*T1.5	6

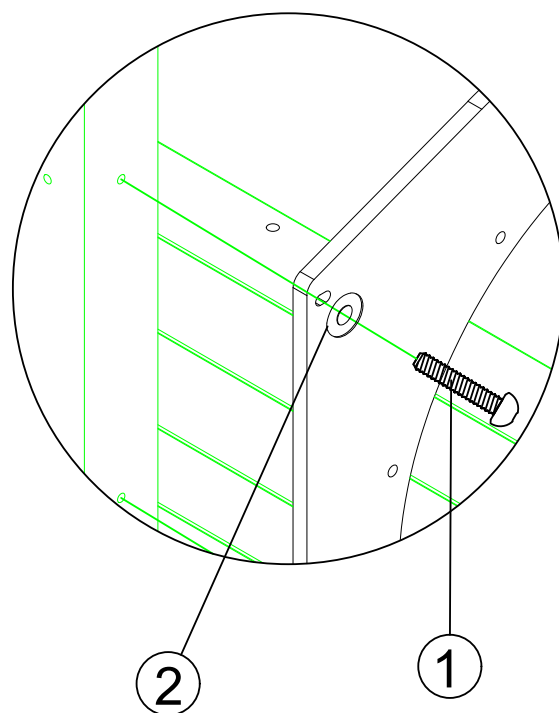
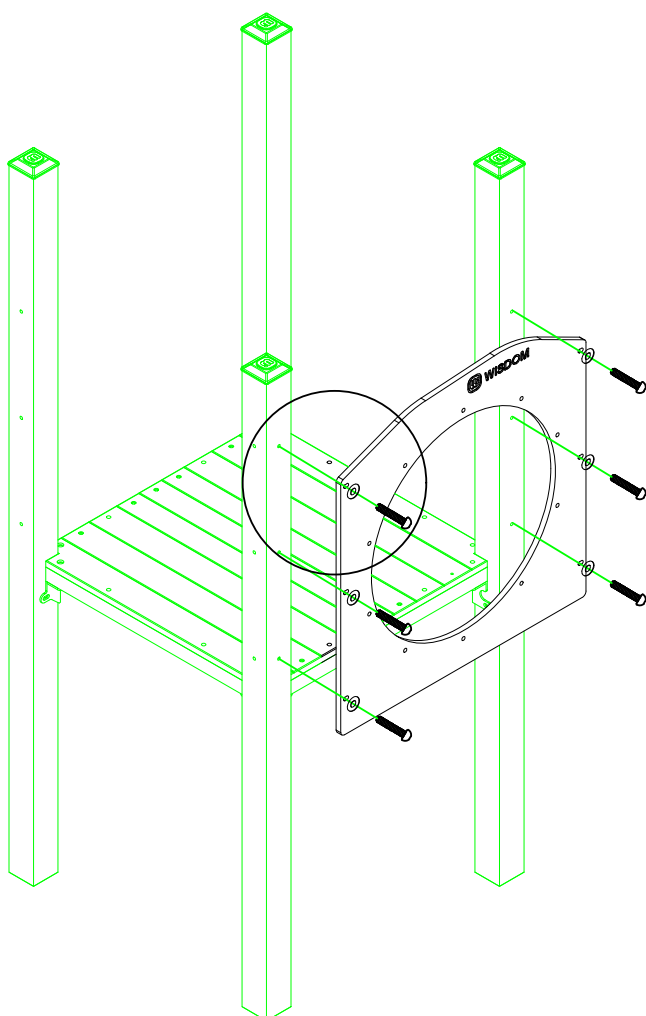


Installation Steps:

1: As shown in the figure, align the panel with the embedded holes of the post, and use corresponding hardware to connect and fasten them.

66-WK002 WiseKidz - PE Climber Entry

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

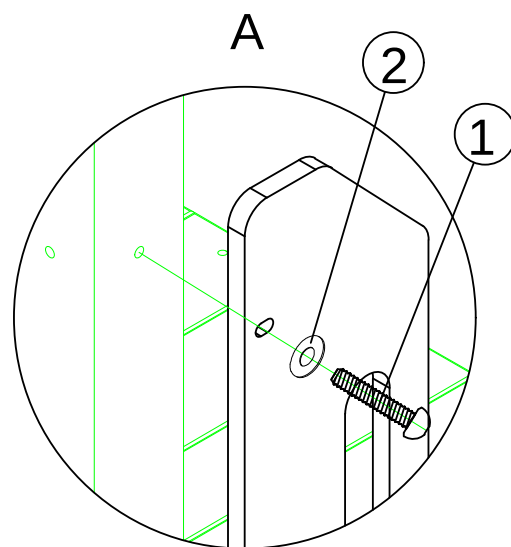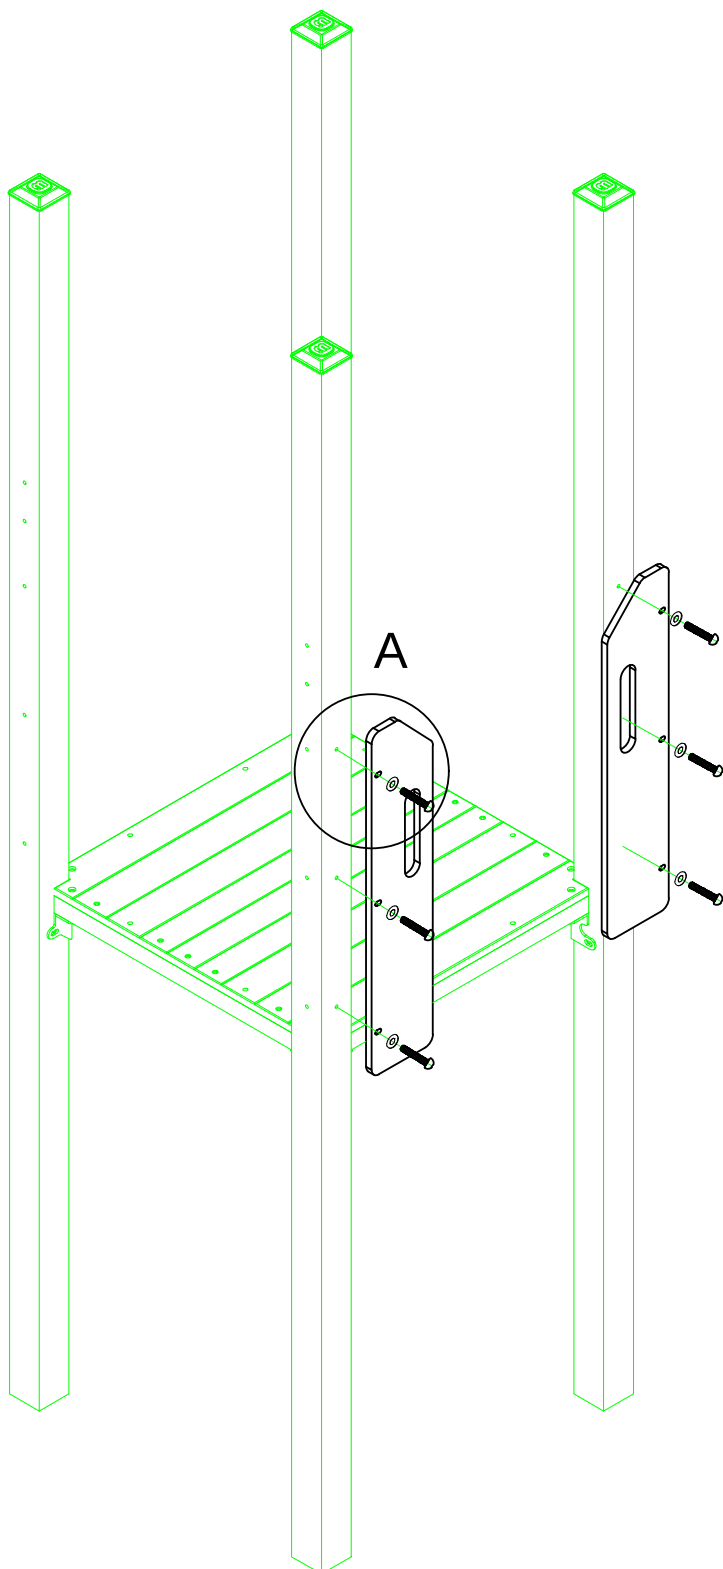


Installation Steps:

1: As shown: First, find stainless net climbing arc. Align the connection holes on one side of the panel with those of the iron sheet on stainless net climbing arc, then align with connection holes. Connect and fasten with the corresponding hardware.

66-WK003 WiseKidz - PE Climber Side Entry



Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	4
2	FLAT WASHER	8.5/23.5*T1.5	4

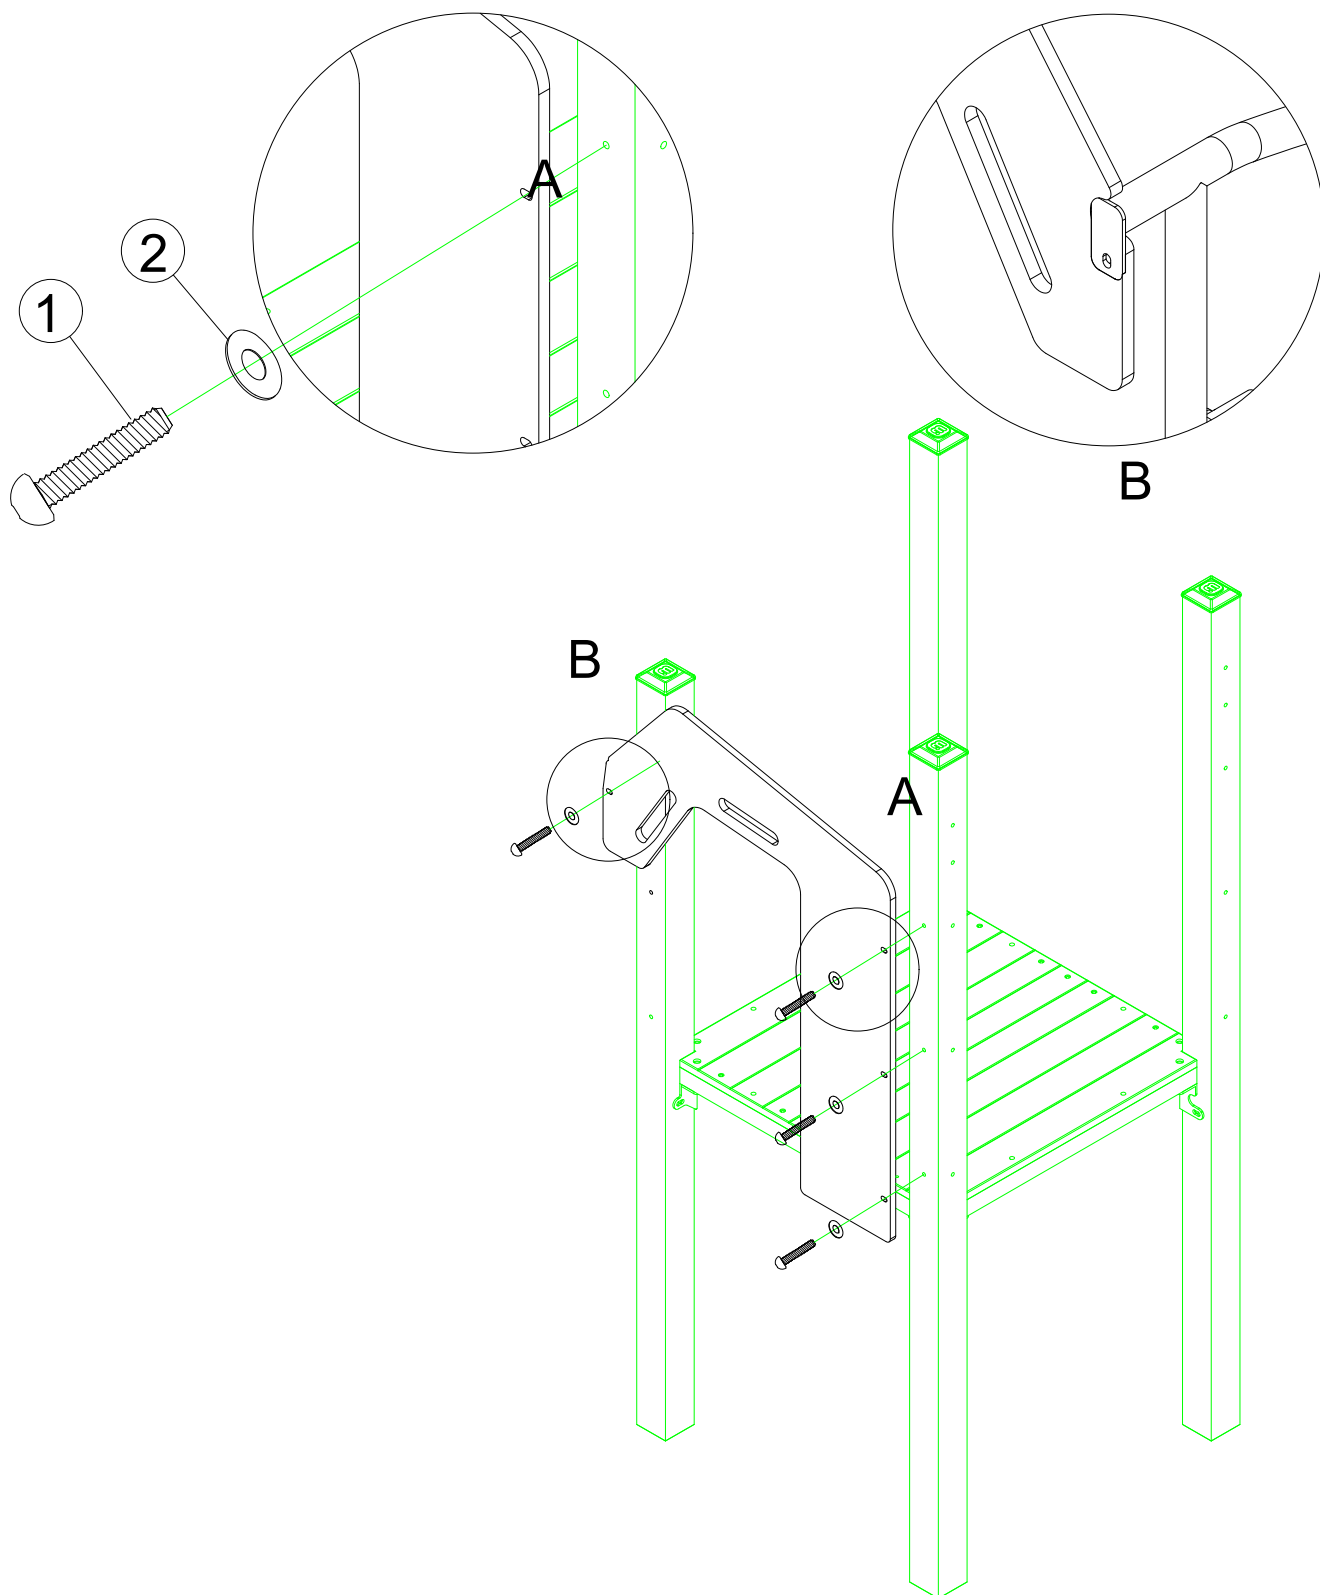

Installation Steps:

1:Align the connection holes of the panel with those of the post, then connect and tighten them with the corresponding hardware.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

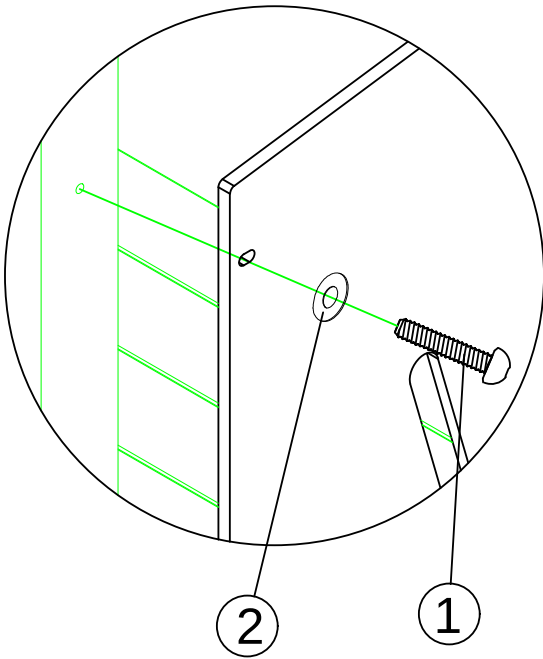
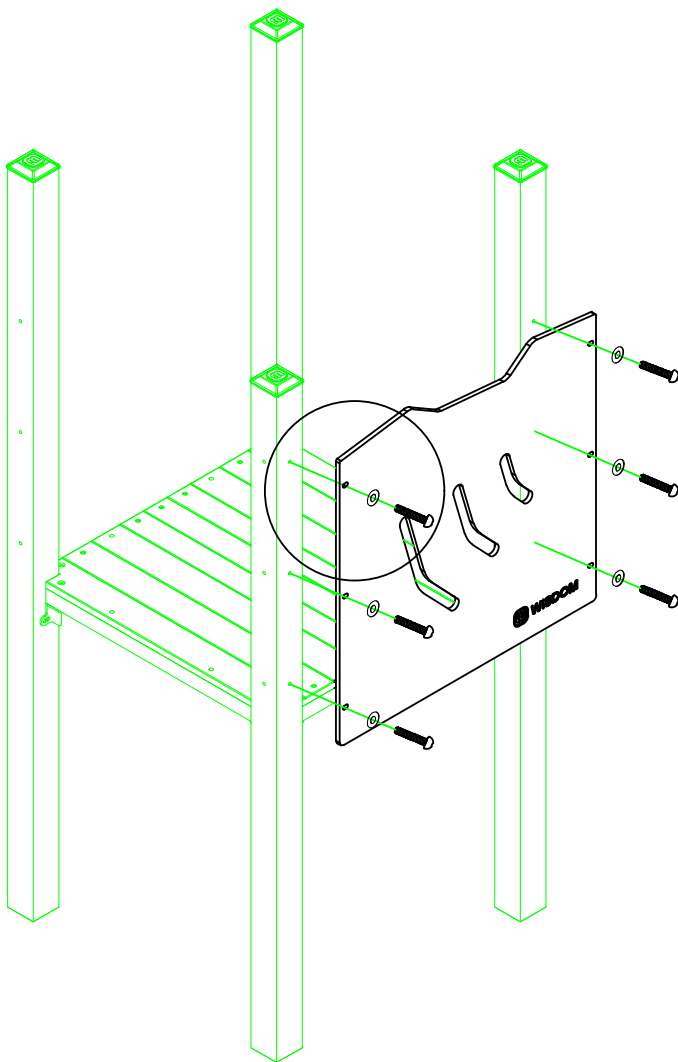


Installation Steps:

1: Align the connection holes of the panel with those of the post, then connect and tighten them with the corresponding hardware.

66-WK008 WiseKidz - PE Maze Panel

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

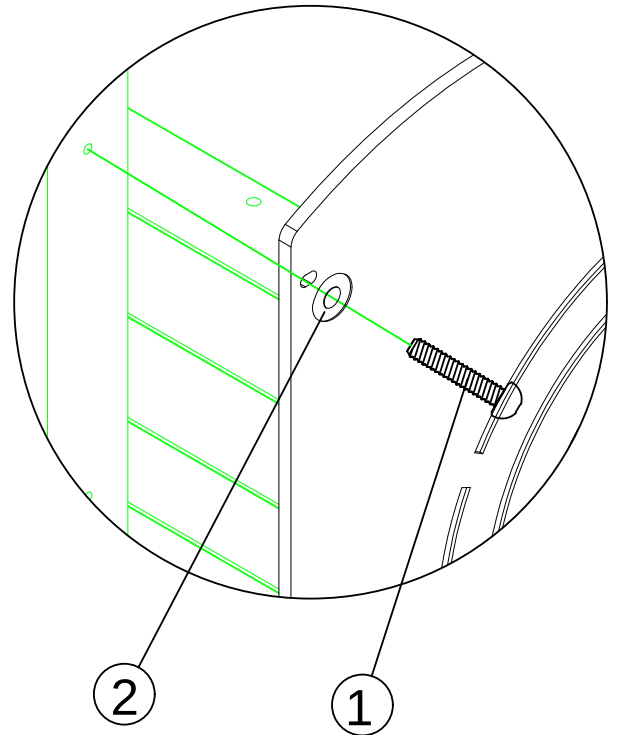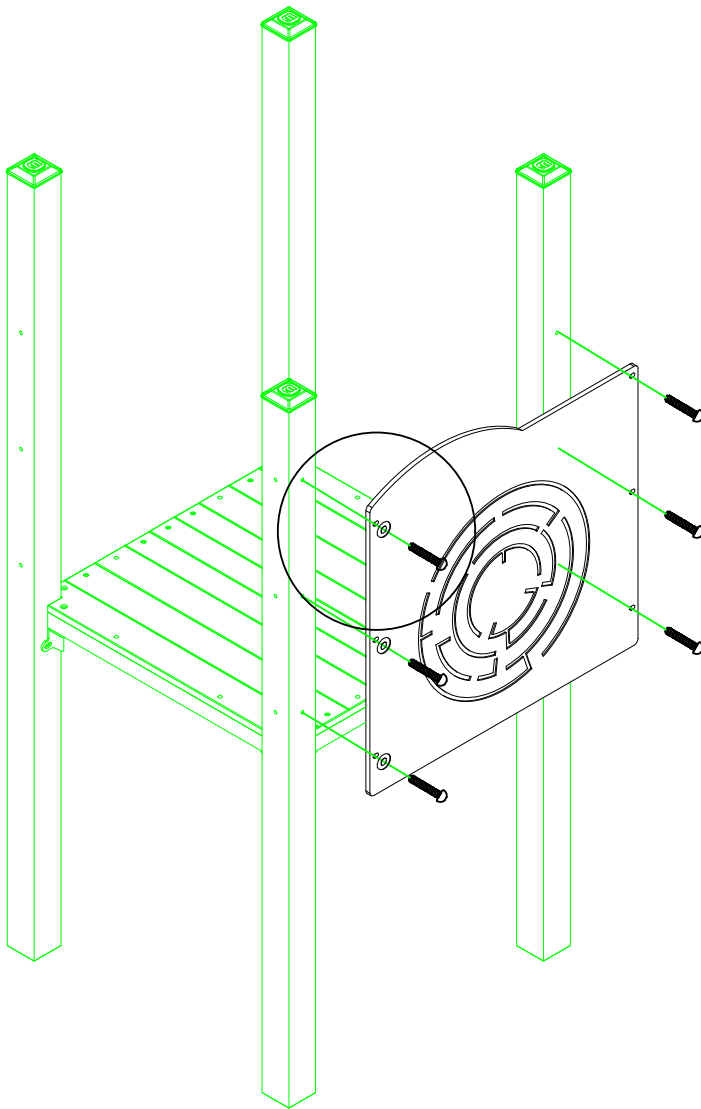


Installation Steps:

1: Align PE vertical climber with post predrilled holes and secure with corresponding hardware.

3-W 008 Wise id - 120cm PE pright Roc Climber

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	8
2	FLAT WASHER	8.5/23.5*T1.5	8

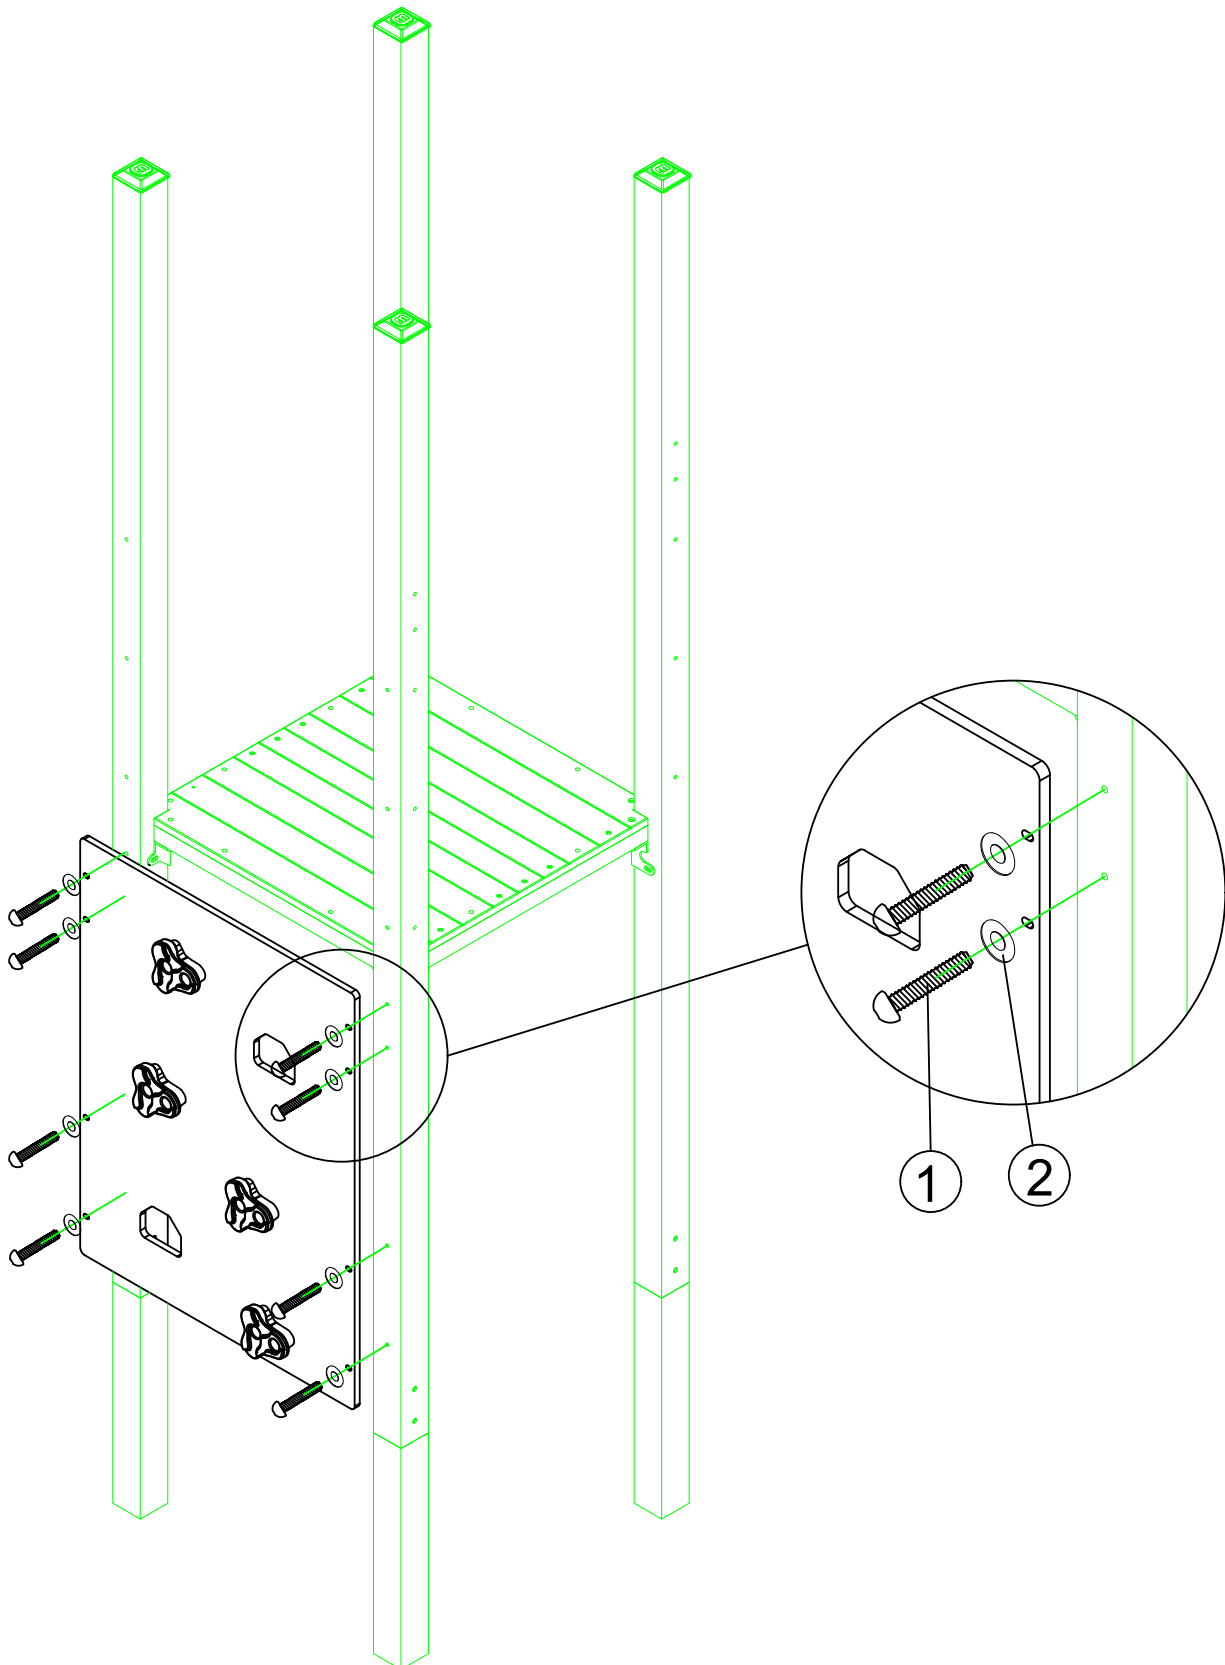


Installation Steps:

1. As shown figure, fix the inground footer with the climber by using corresponding hardware

63-WK017 WiseKidz - 120cm Stainless Upright Net Climber 1-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	SPRING WASHER	M8*2.5	4
3	LOCK NUT	M8	2

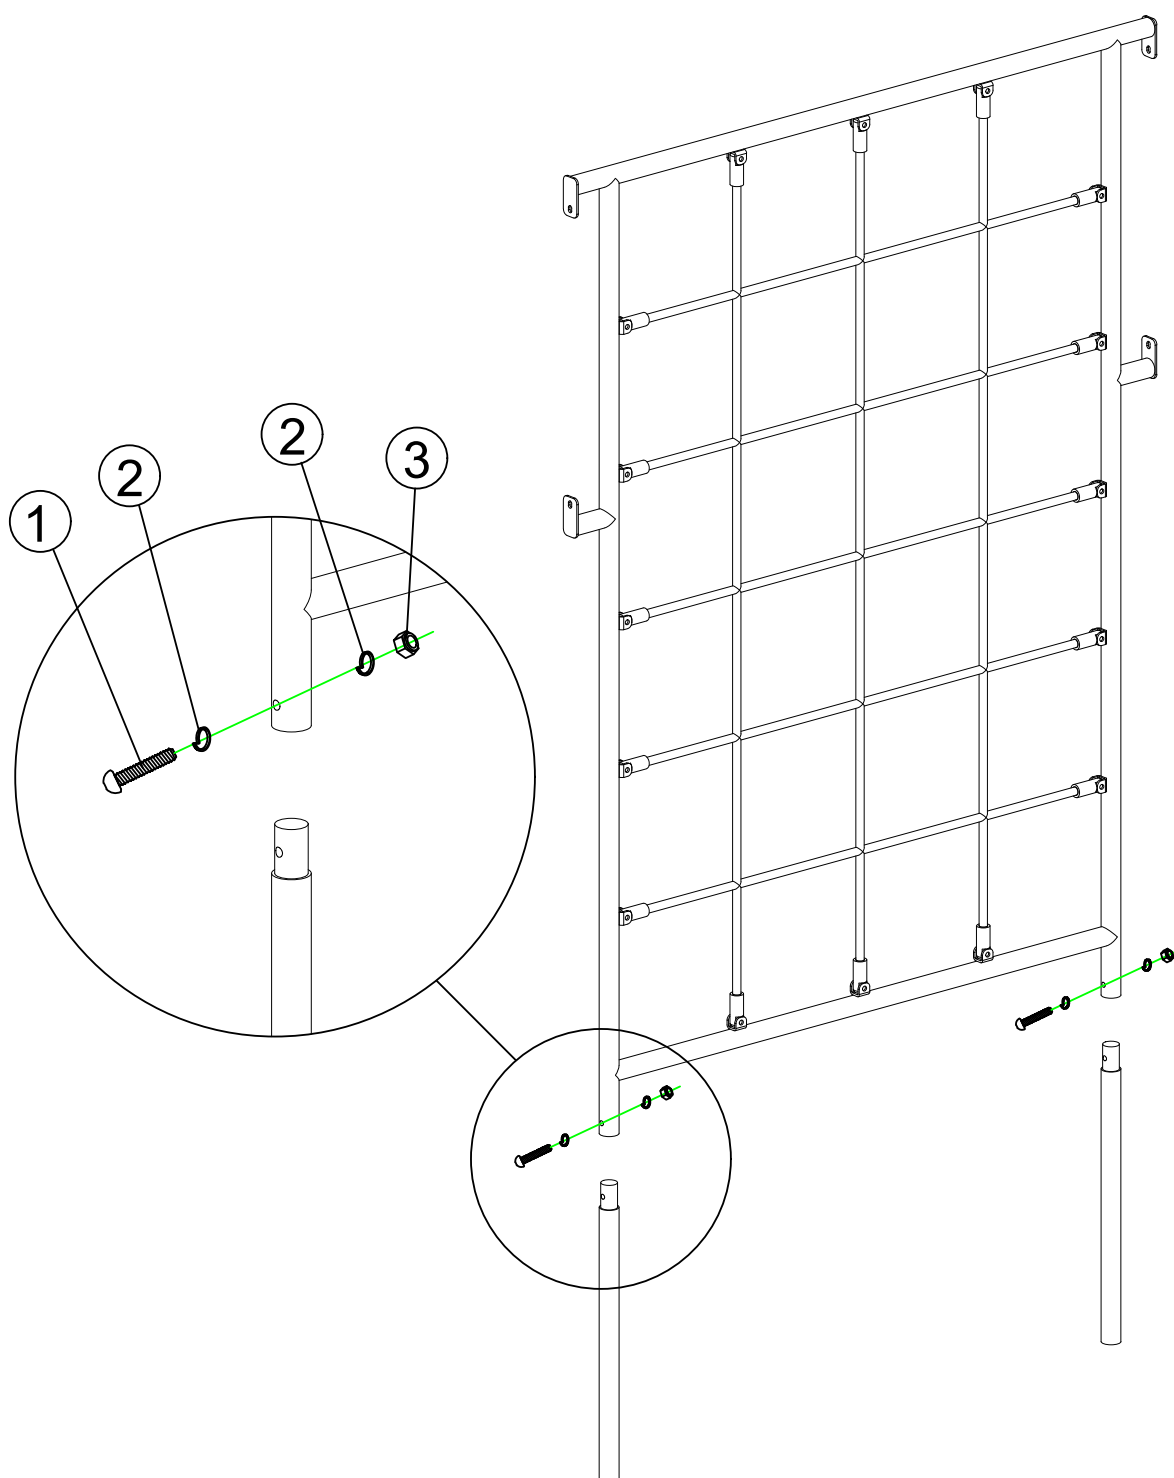


Installation Steps:

1.As shown figure, fix the climber with the posts by using corresponding hardware.

63-WK017 WiseKidz - 120cm Stainless Upright Net Climber 2-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	4
2	FLAT WASHER	8.5/23.5*T1.5	4

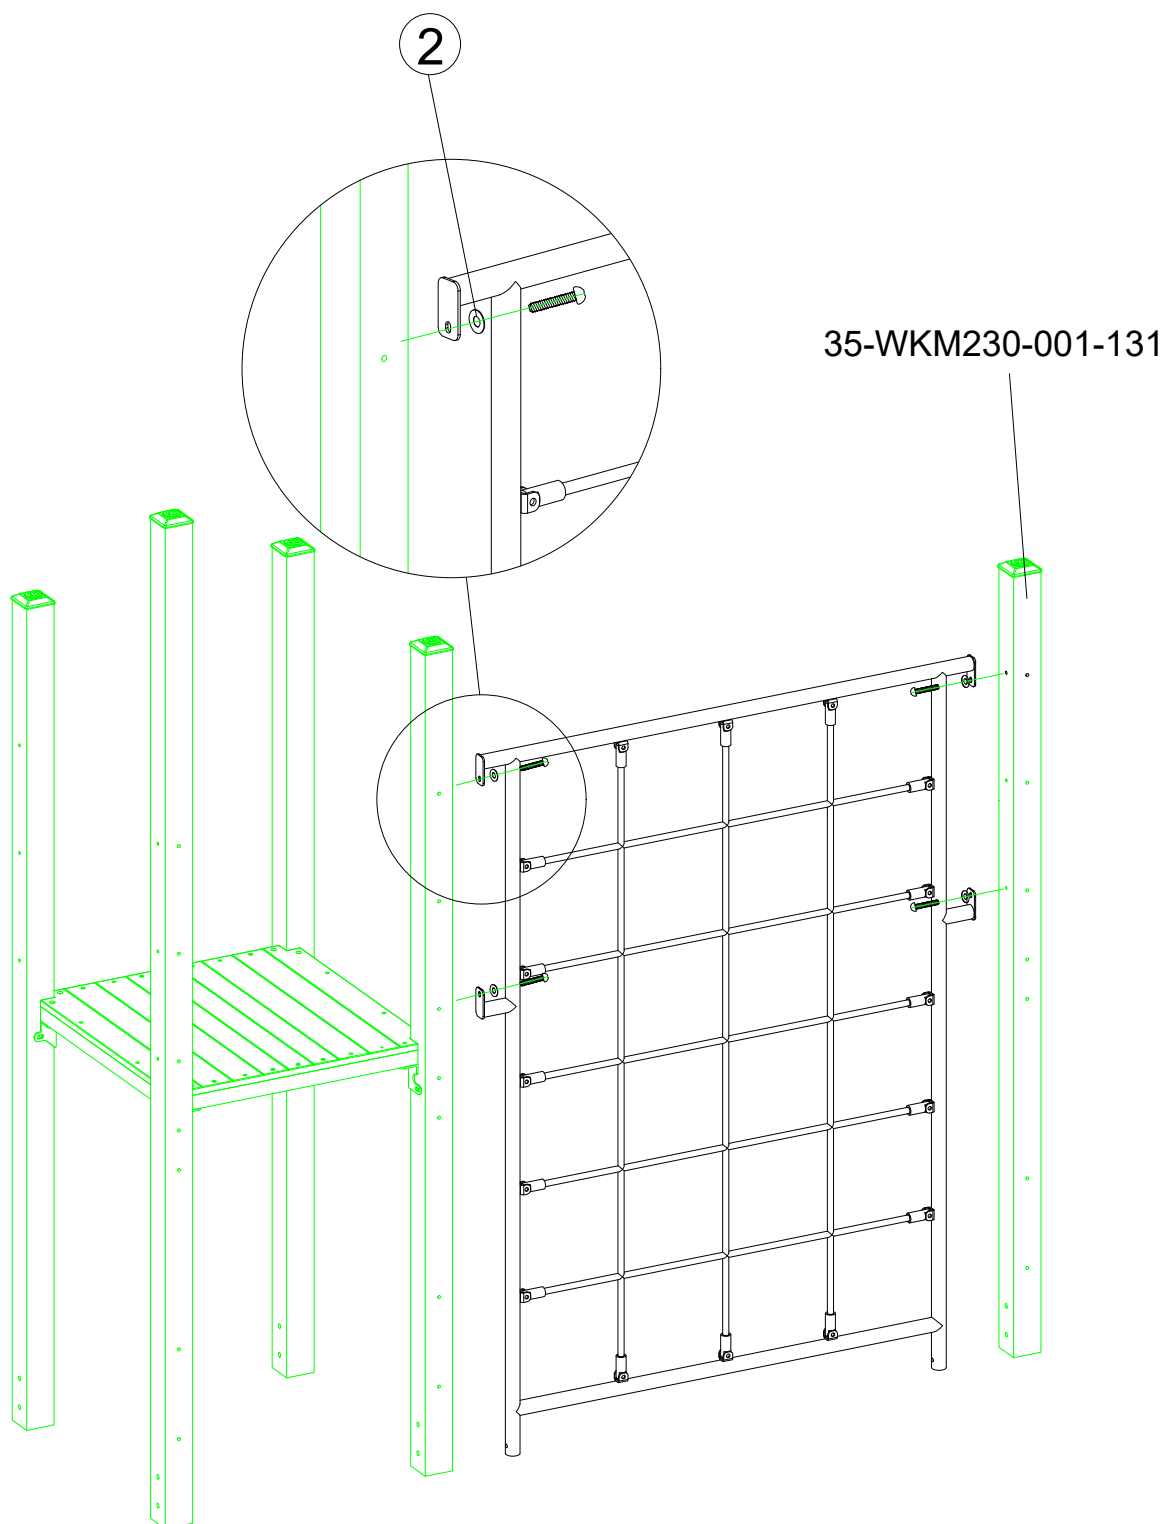


Installation Steps:

1: Insert inground footer into climber sleeve and secure with corresponding hardware.

2: Use expansion bolts to secure the buried anchor to the ground.

3-W 011 Wise id - 120cm Stainless Rung Ladder 1-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	SPRING WASHER	M8*2.5	
3	LOCK NUT	M8	2

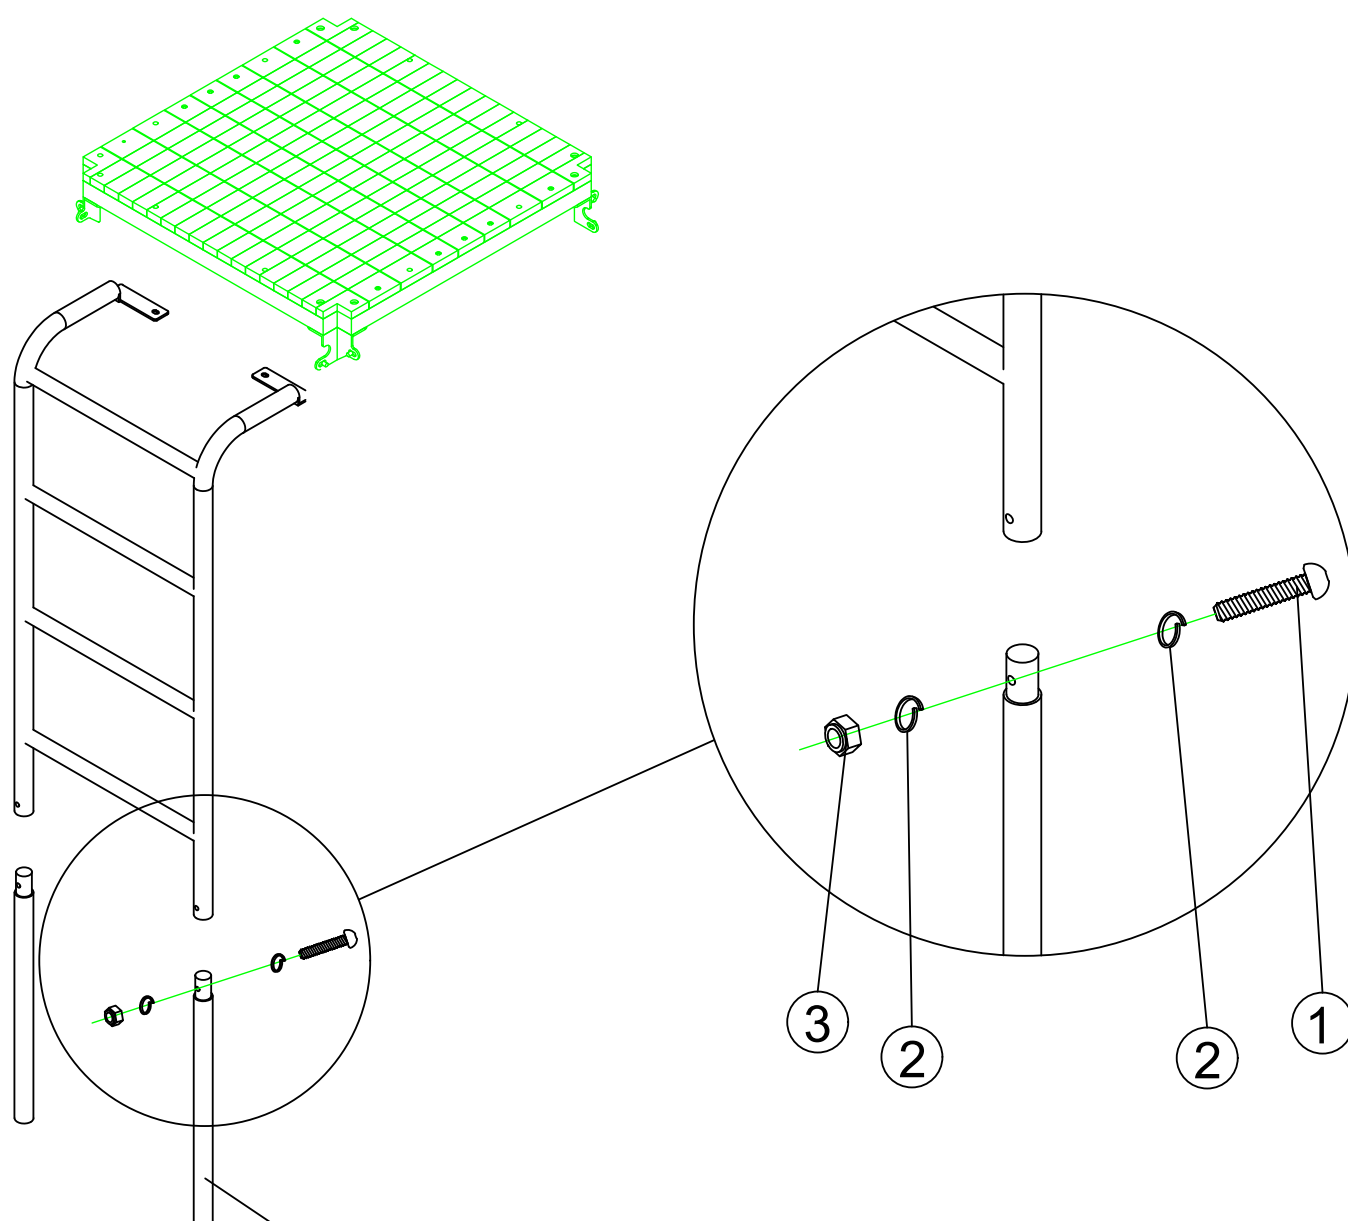


0-W 005- 55

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	FLAT WASHER	8.5/23.5*T1.5	
3	LOC N T	M8	2
	PLASTIC CAP	3 M10	2

Installation Steps:

1:Remove the screws from the corresponding holes on the deck before install the rung ladder.

2:Place the ladder climber below the deck and align the connection holes then secure with corresponding hardware.

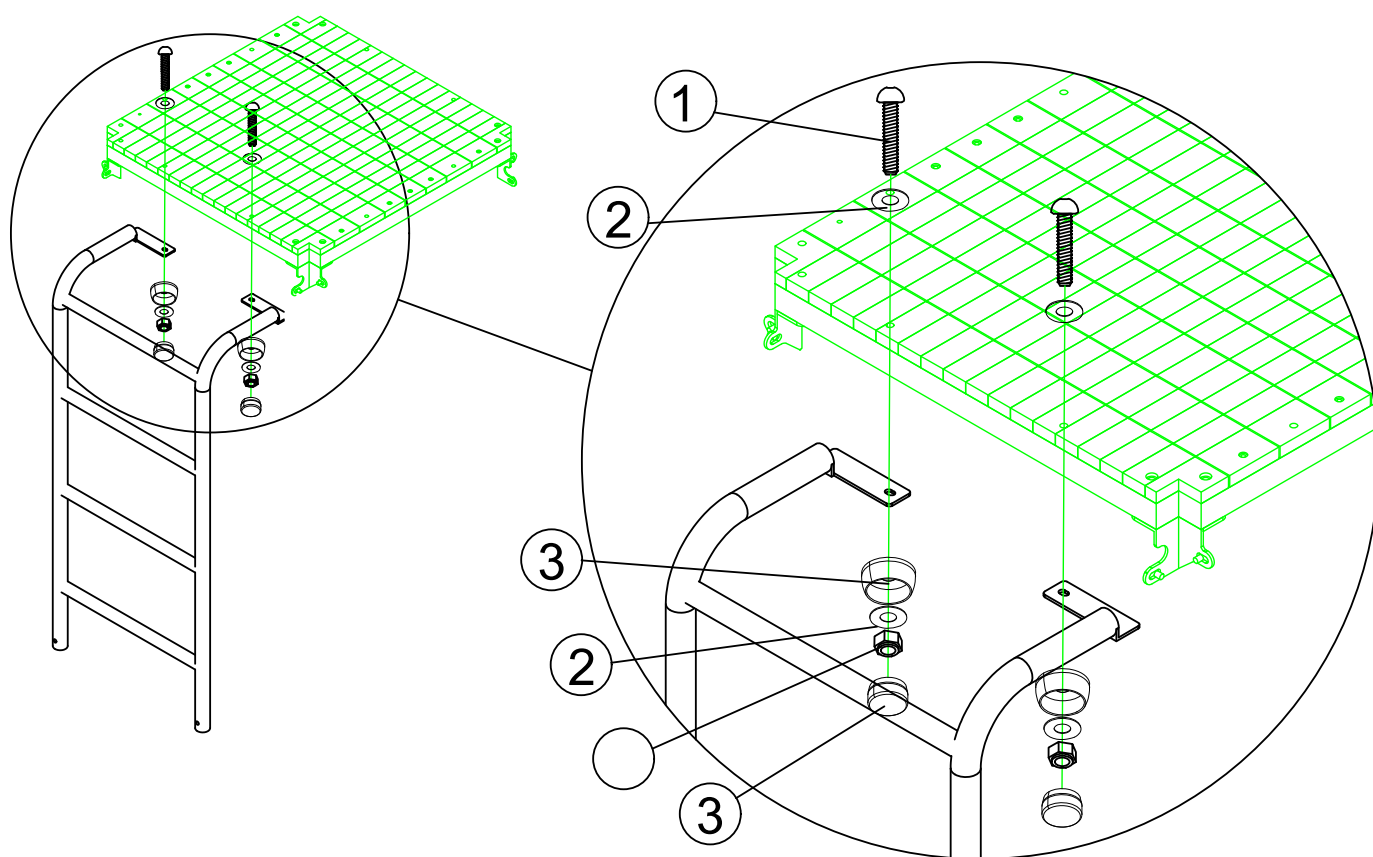


Installation Steps:

1: Insert inground footer into climber sleeve and secure with corresponding hardware.

3-W 012 Wise id - 150cm Stainless Rung Ladder 1-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	2
2	SPRING WASHER	M8*2.5	
3	LOC N T	M8	2

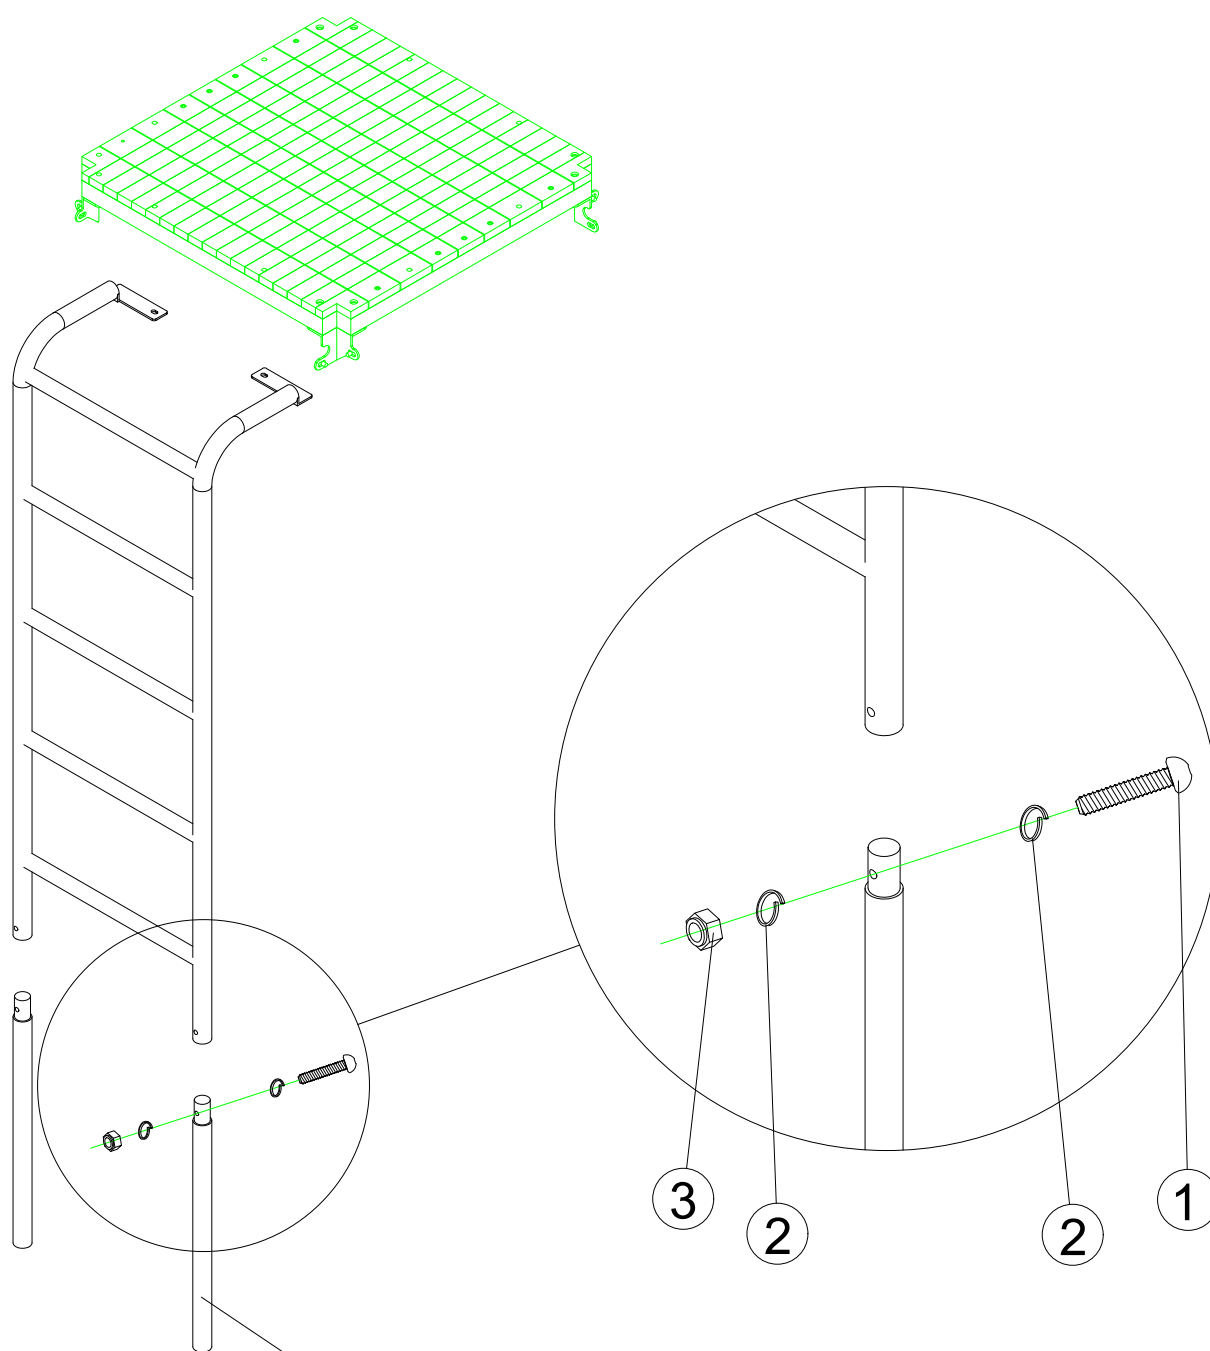


0-W 005- 55

Installation Steps:

1: Place the ladder climber below the deck and align the connection holes then secure with corresponding hardware.

3-W 012 Wise id - 150cm Stainless Rung Ladder 2-2

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*80	2
2	FLAT WASHER	8.5/23.5*T1.5	
3	LOC N T	M8	2
	PLASTIC CAP	3 M10	2


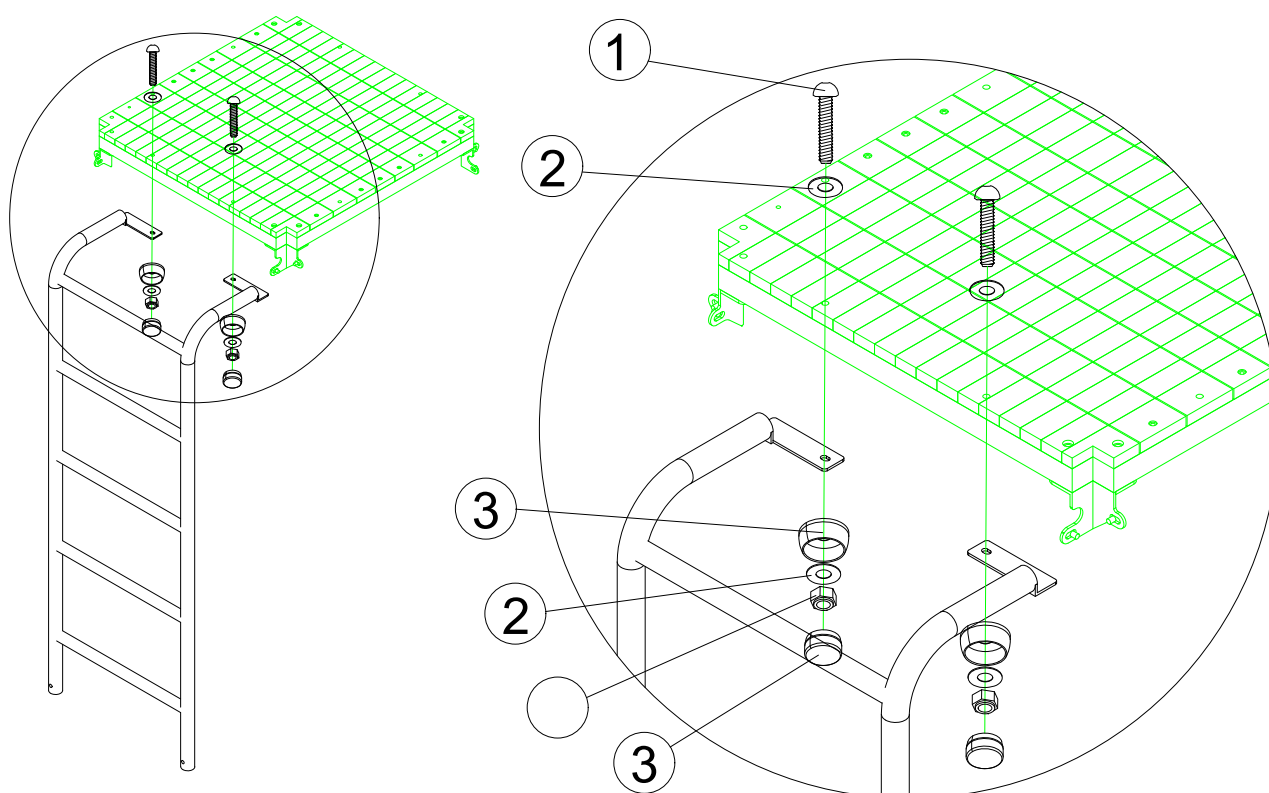


Installation Steps:

1: As shown in the figure, align the holes of the two side panels with those of the top panel, connect and fasten them with corresponding hardware.

66-WK001 WiseKidz - PE Single Slide Hood 1-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*50	4
2	FLAT WASHER	8.5/23.5*T1.5	8
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4

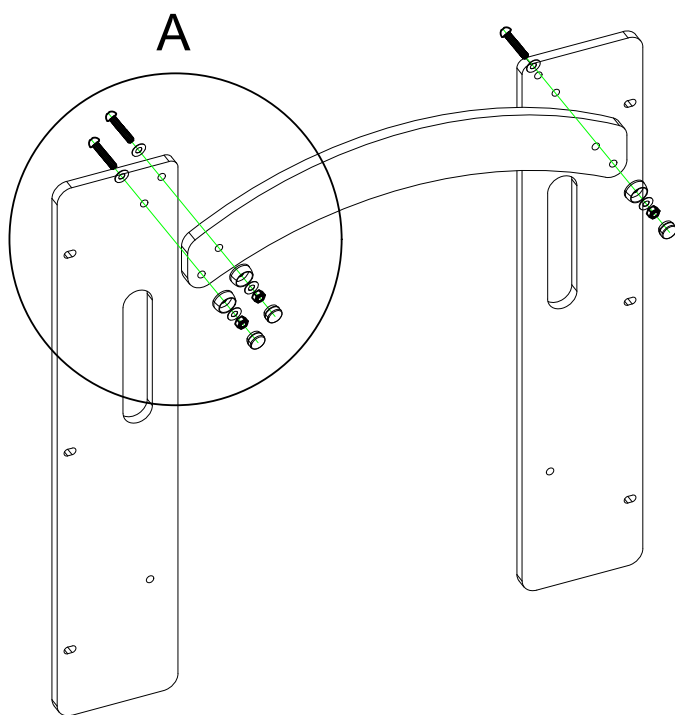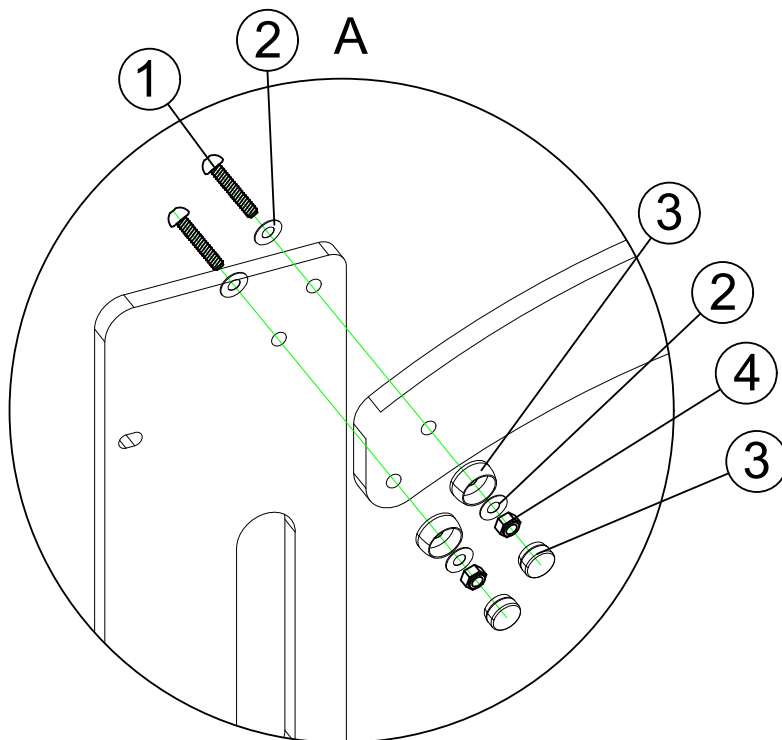


Installation Steps:

1: As shown in the figure, align the stainless steel connector with the connection holes of the deck, use corresponding hardware to connect and fasten them.

66-WK001 WiseKidz - PE Single Slide Hood 2-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*75	2
2	FLAT WASHER	8.5/23.5*T1.5	4
3	PLASTIC CAP	φ34 M10	2
4	LOCK NUT	M8	2

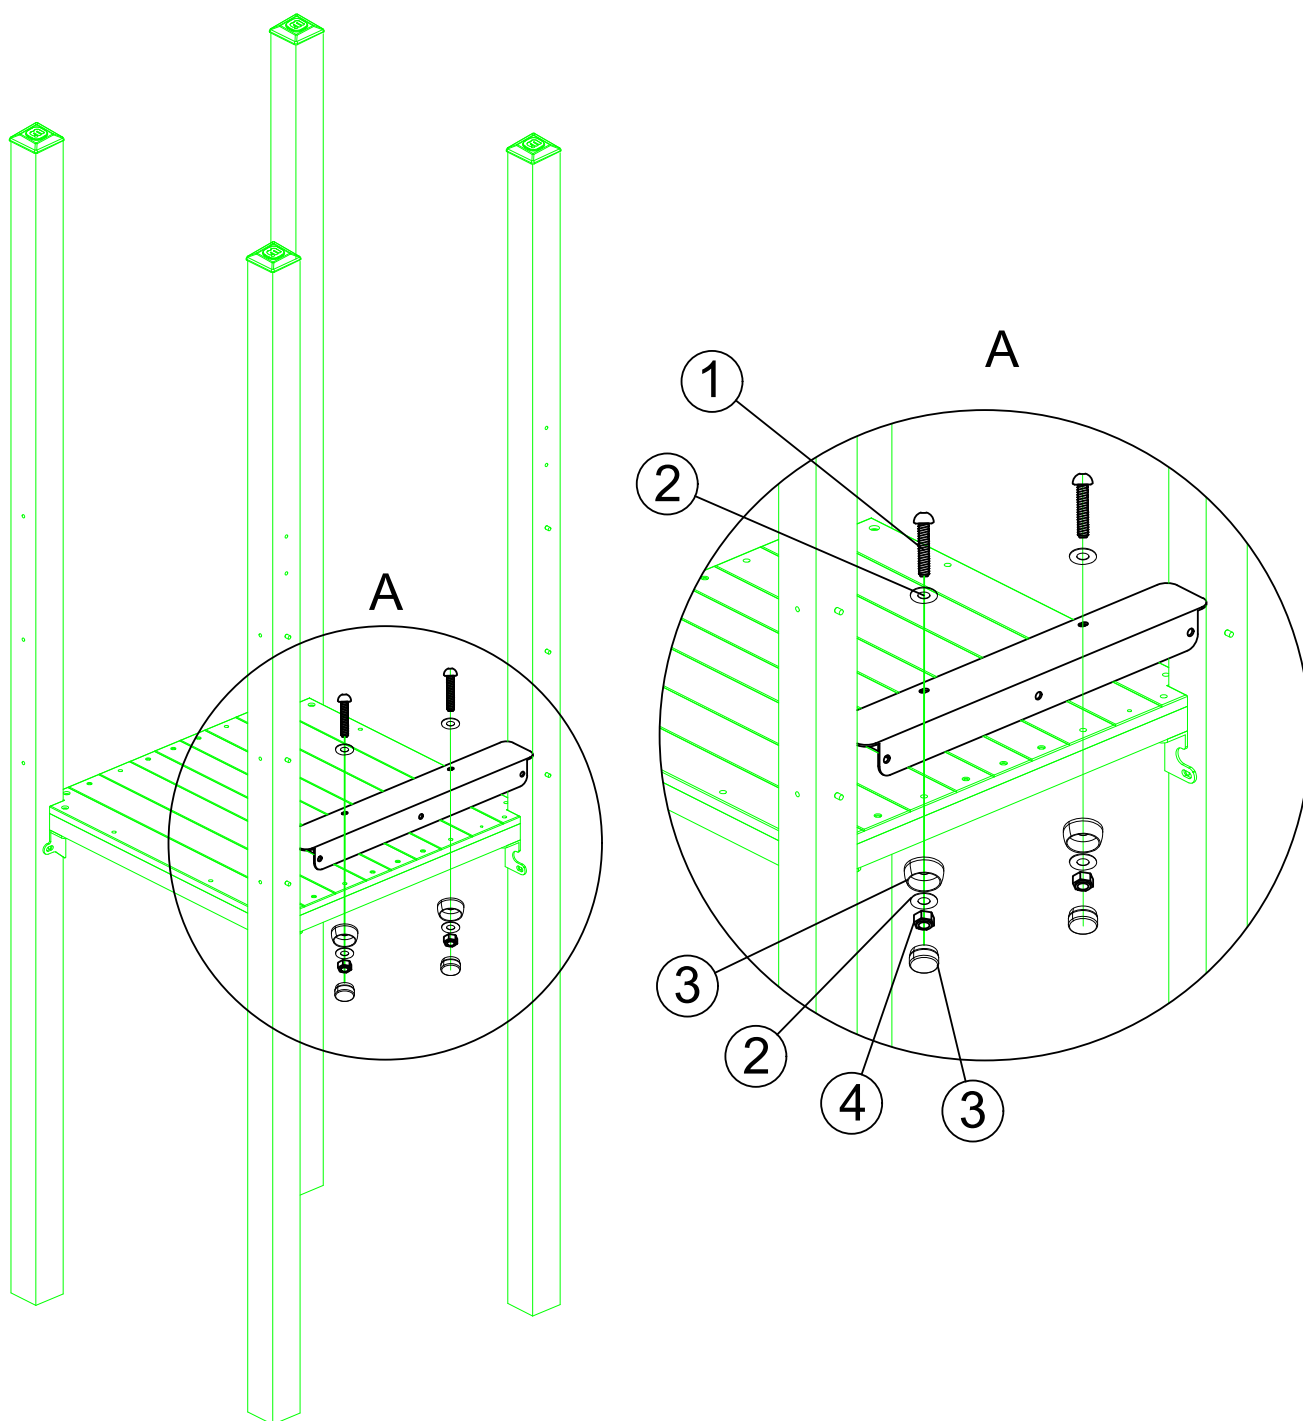


Installation Steps:

1: As shown in the figure, align the panel with the embedded holes of the post, and use corresponding hardware to connect and fasten them.

66-WK001 WiseKidz - PE Single Slide Hood 3-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*35	6
2	FLAT WASHER	8.5/23.5*T1.5	6

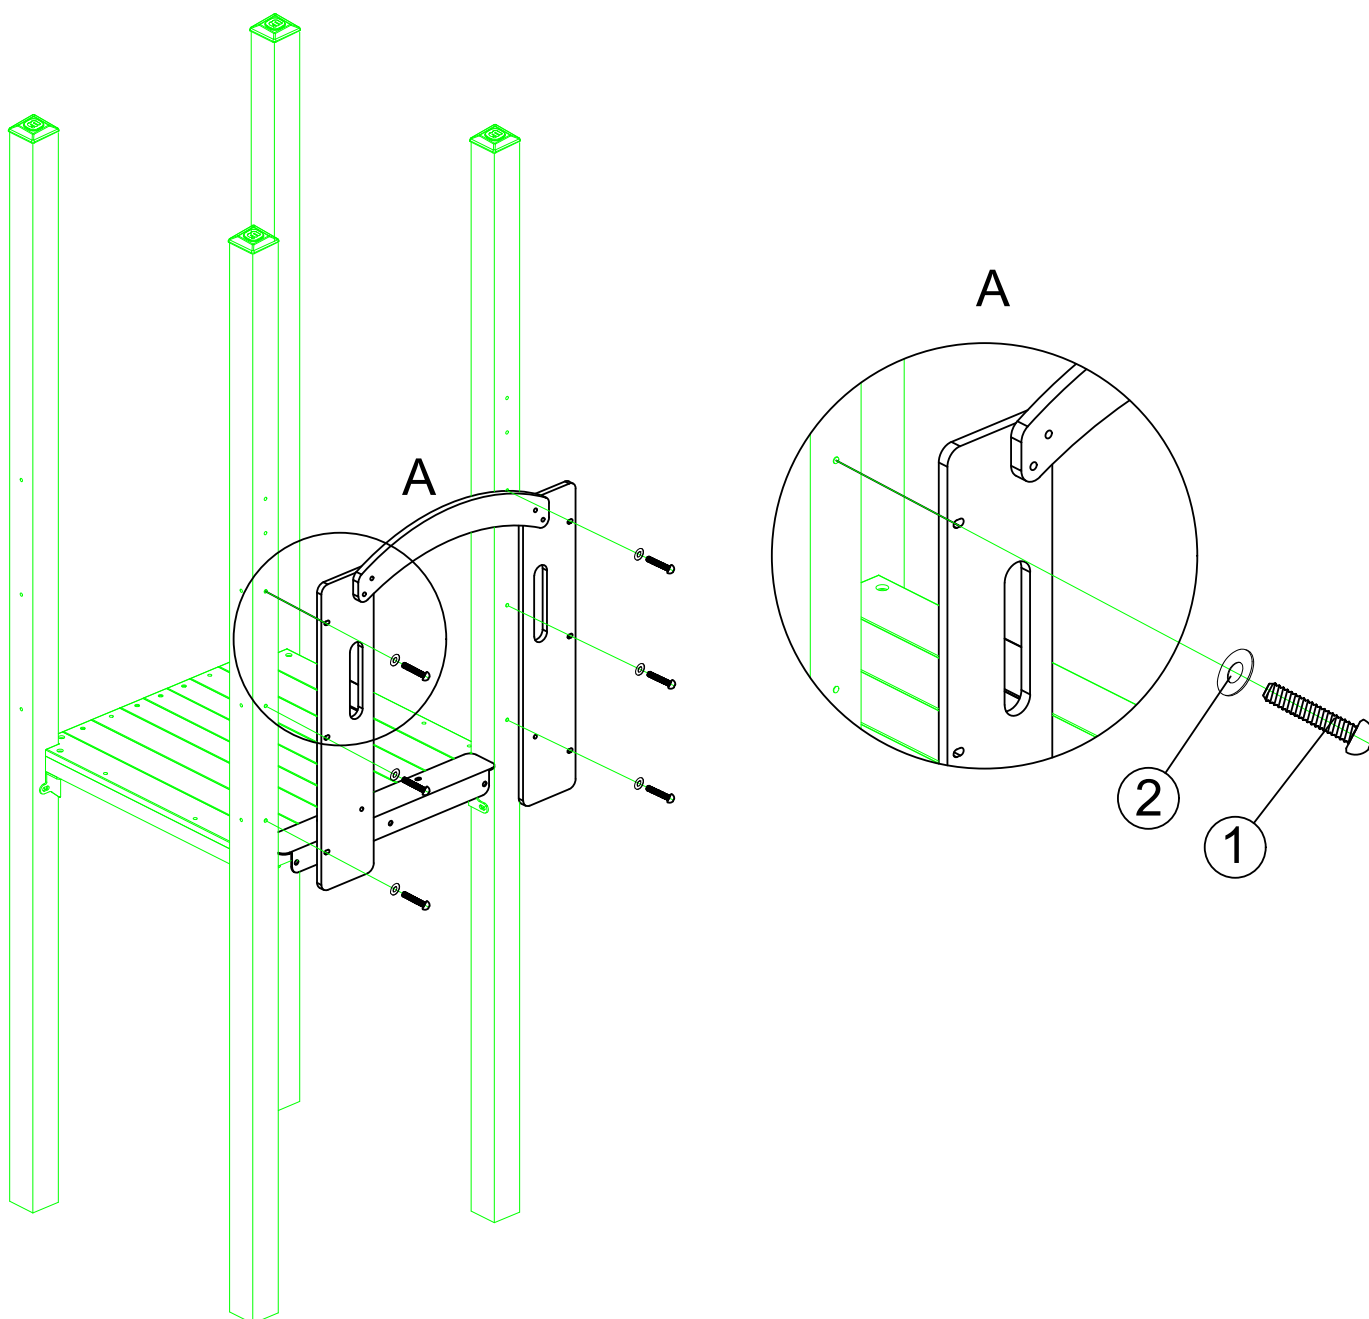


Installation Steps:

1: As shown in the figure, when installing the slide, align the connection holes of the slide with those of the panel, and use corresponding hardware to connect and fasten them.


66-WK001 WiseKidz - PE Single Slide Hood 4-4

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*45	2
2	FLAT WASHER	8.5/23.5*T1.5	9
3	PLASTIC CAP	φ34 M10	4
4	LOCK NUT	M8	4
5	TAMPER RESISTANT TORX-BOLT	M8*35	2
6	TAMPER RESISTANT TORX-BOLT	M8*25	1

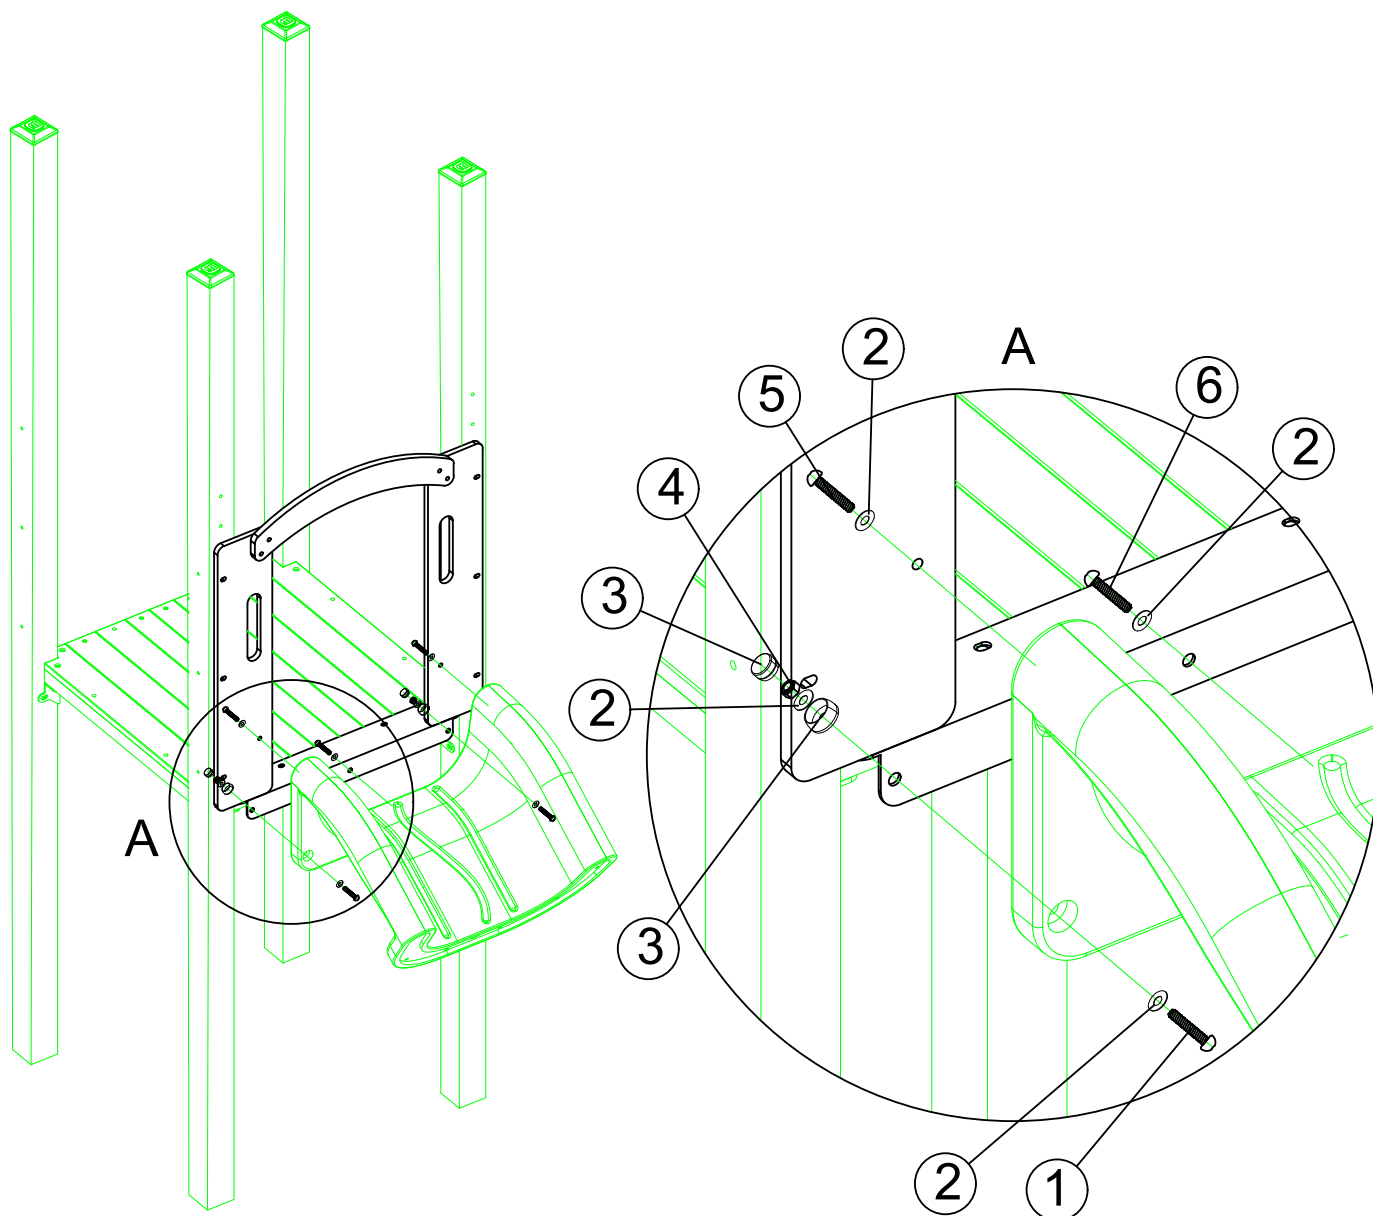

Installation Steps:

65-WKP002A WiseKidz - 120cm Single Slide

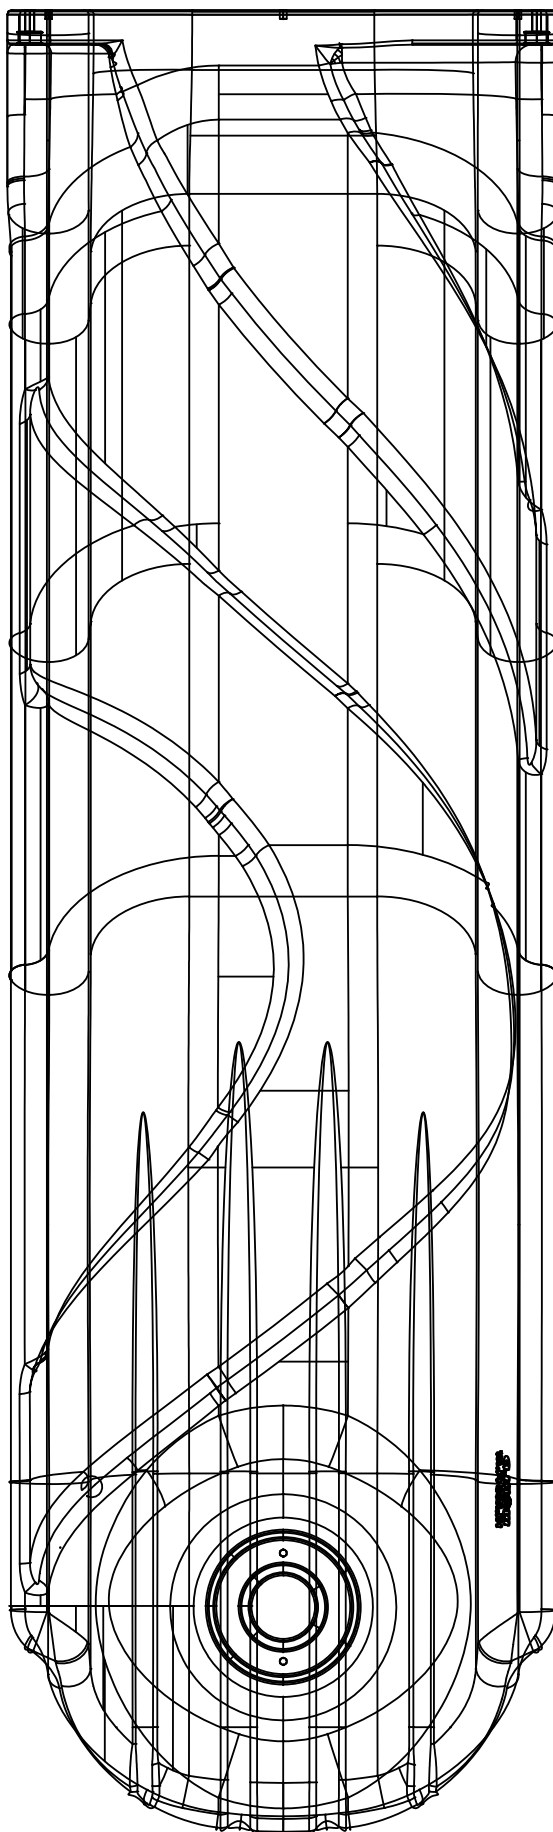


Installation steps:

1:Align the inground footer with the holes on single slide.

2:Insert corresponding hardware and tighten.

70-21001 Single Slide Inground Footer


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*20	2
2	FLAT WASHER	8.5/23.5*T1.5	2

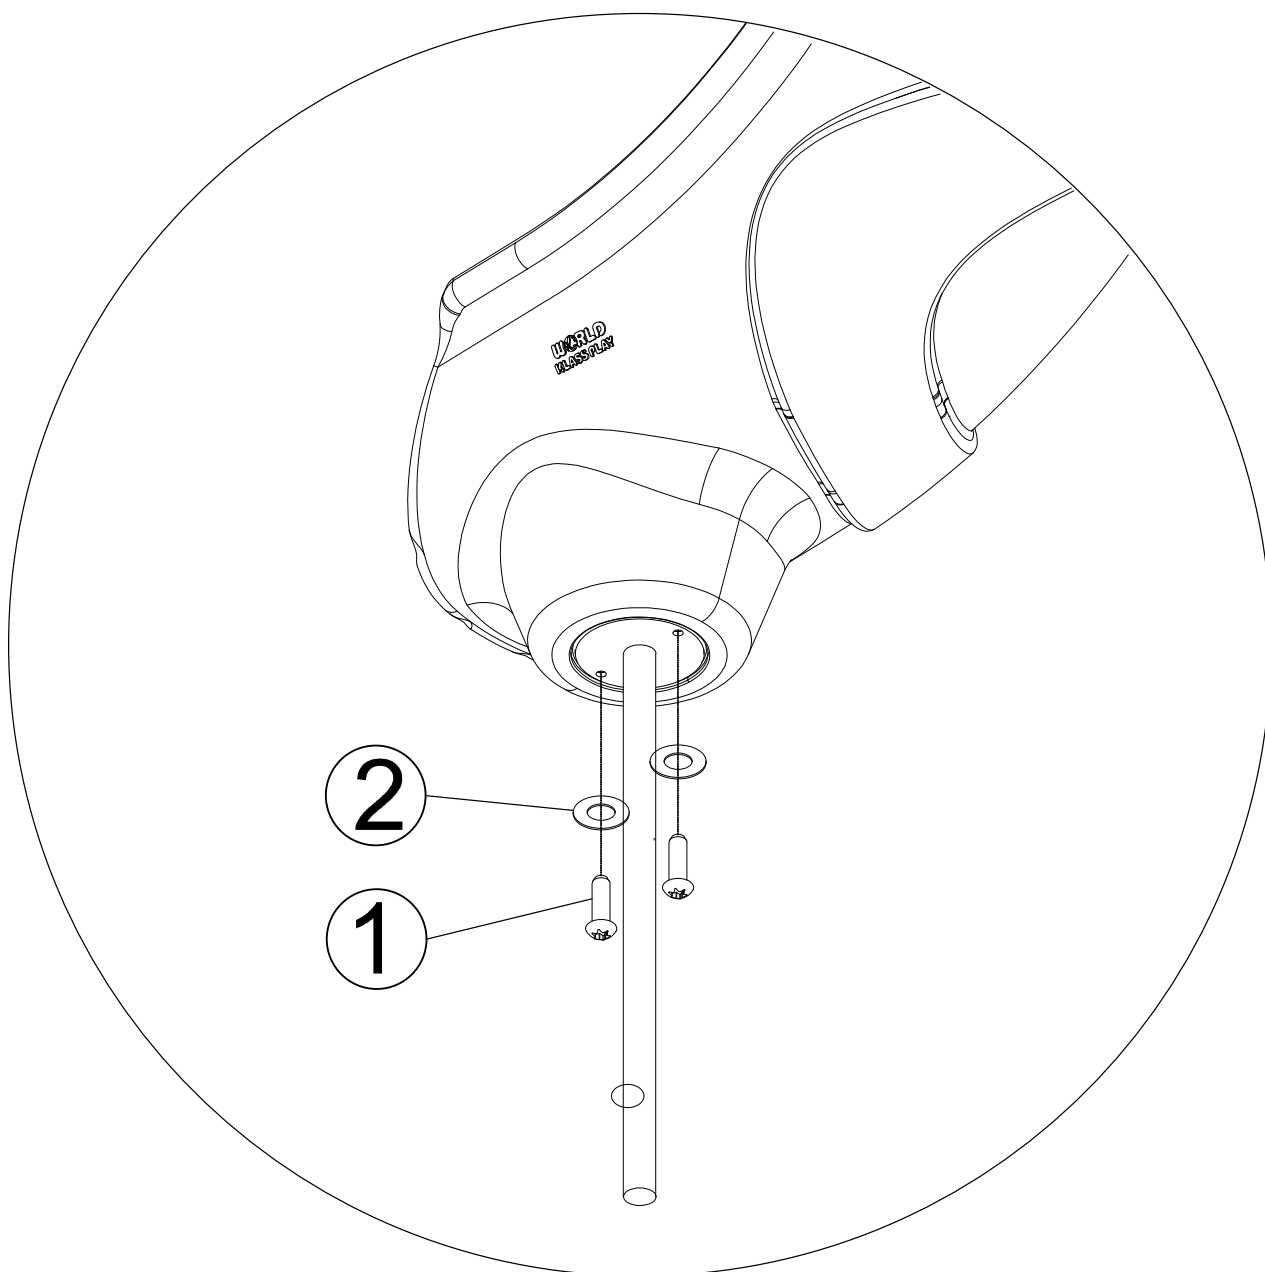

Installation Steps:

1: As shown in the figure, place the decorative panel in the corresponding position and use corresponding hardware to connect and fasten it.

72-WK001 WiseKidz - Post Topper			
Number	Name	Model	Quantity
1	Self-tapping Screw	4*35	3

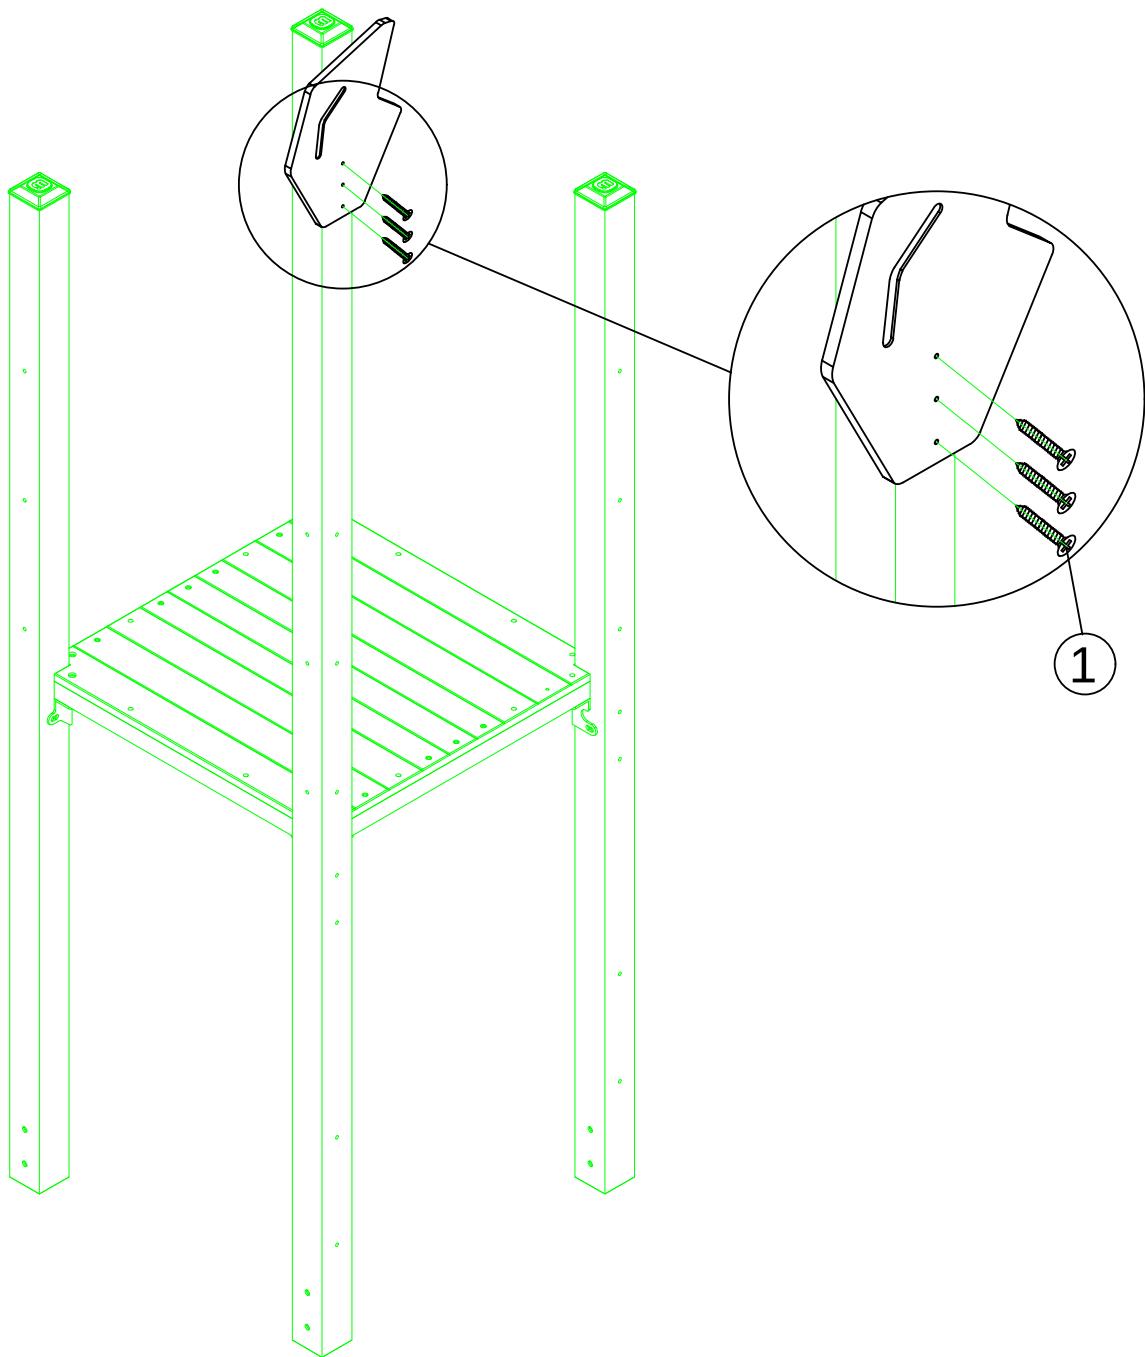


Installation Steps:

1: As shown in the figure, insert the casing into the post and use corresponding hardware to connect and fasten it.

69-WK001 WiseKidz - PE Gable Roof 1-3

Number	Name	Model	Quantity
1	Self-tapping Screw	M4*20	8

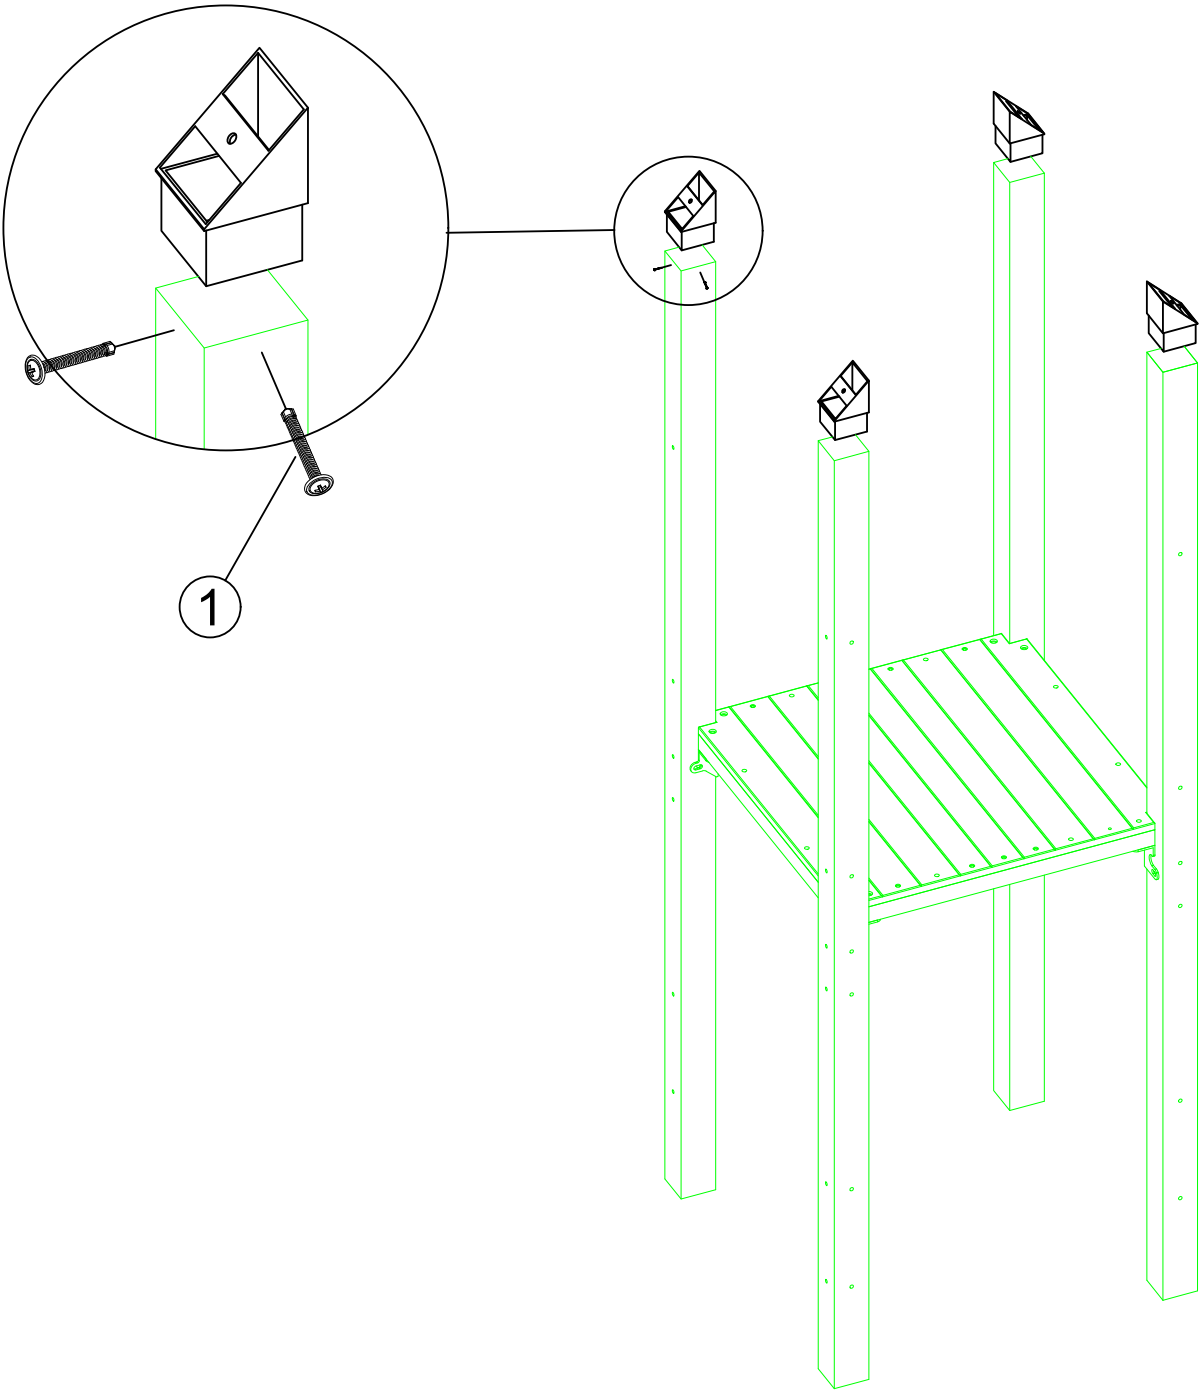


Installation Steps:

1: As shown in the figure, use corner braces to connect the PE boards. Insert corresponding hardware and tighten.

69-WK001 WiseKidz - PE Gable Roof 2-3


Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*30	14
2	FLAT WASHER	8.5/23.5*T1.5	28
3	LOCK NUT	M8	14

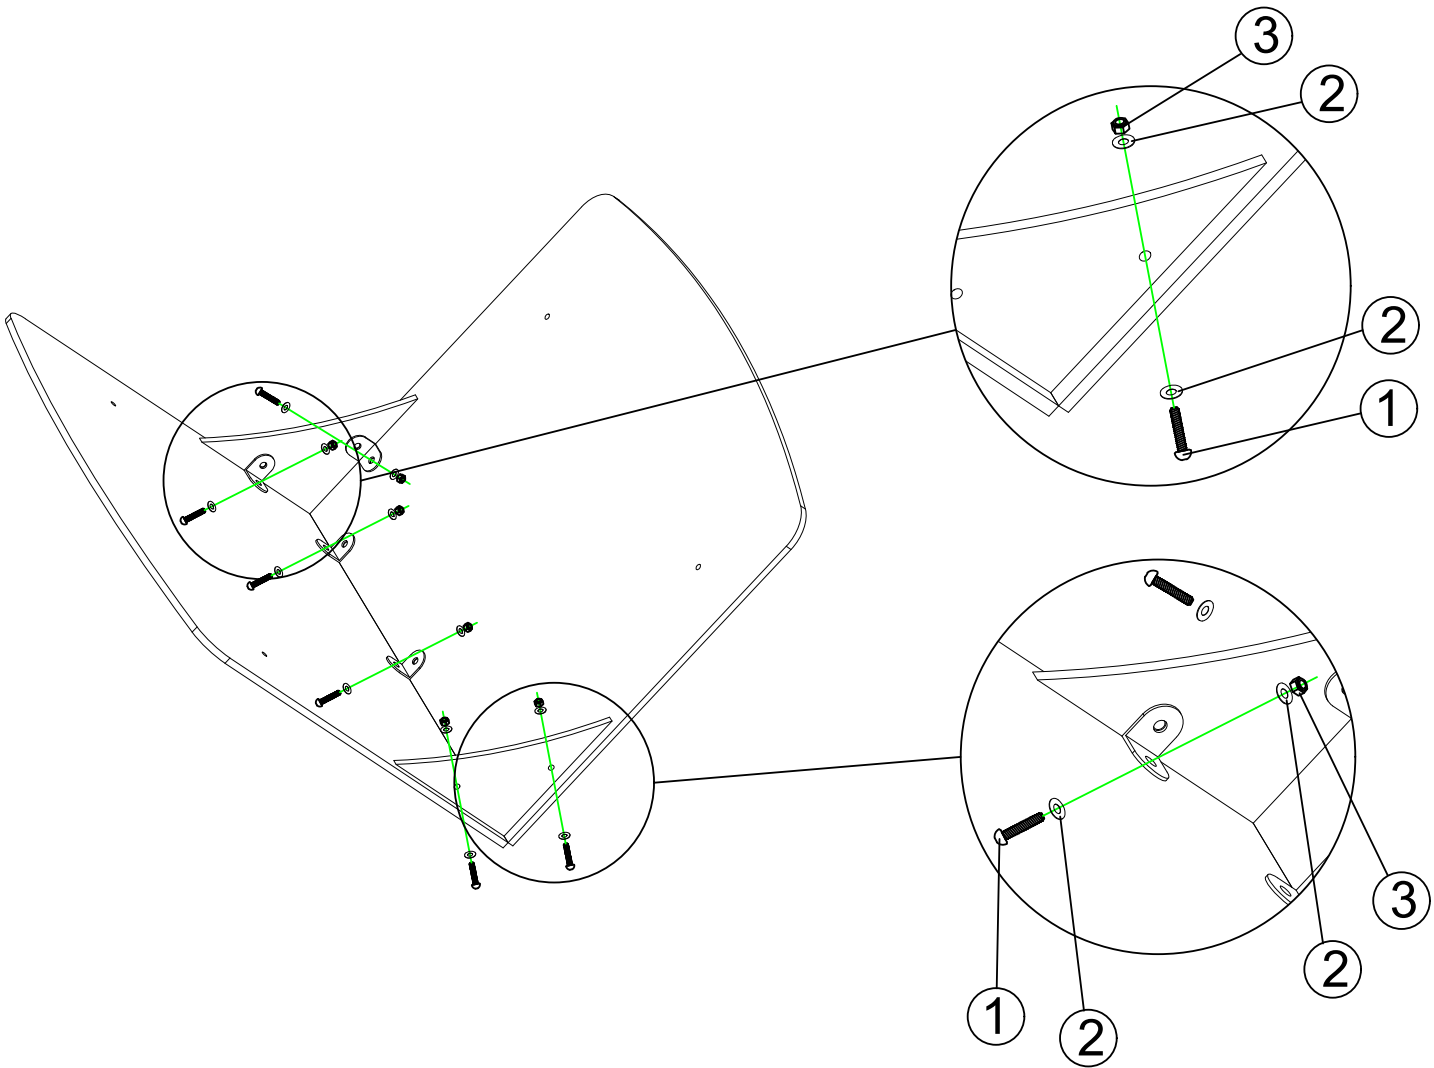

Installation Steps:

1: As shown in the figure, connect and fasten the installed roof to the post sleeve with corresponding hardware.

69-WK001 WiseKidz - PE Gable Roof 3-3			
Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*30	4
2	FLAT WASHER	8.5/23.5*T1.5	4

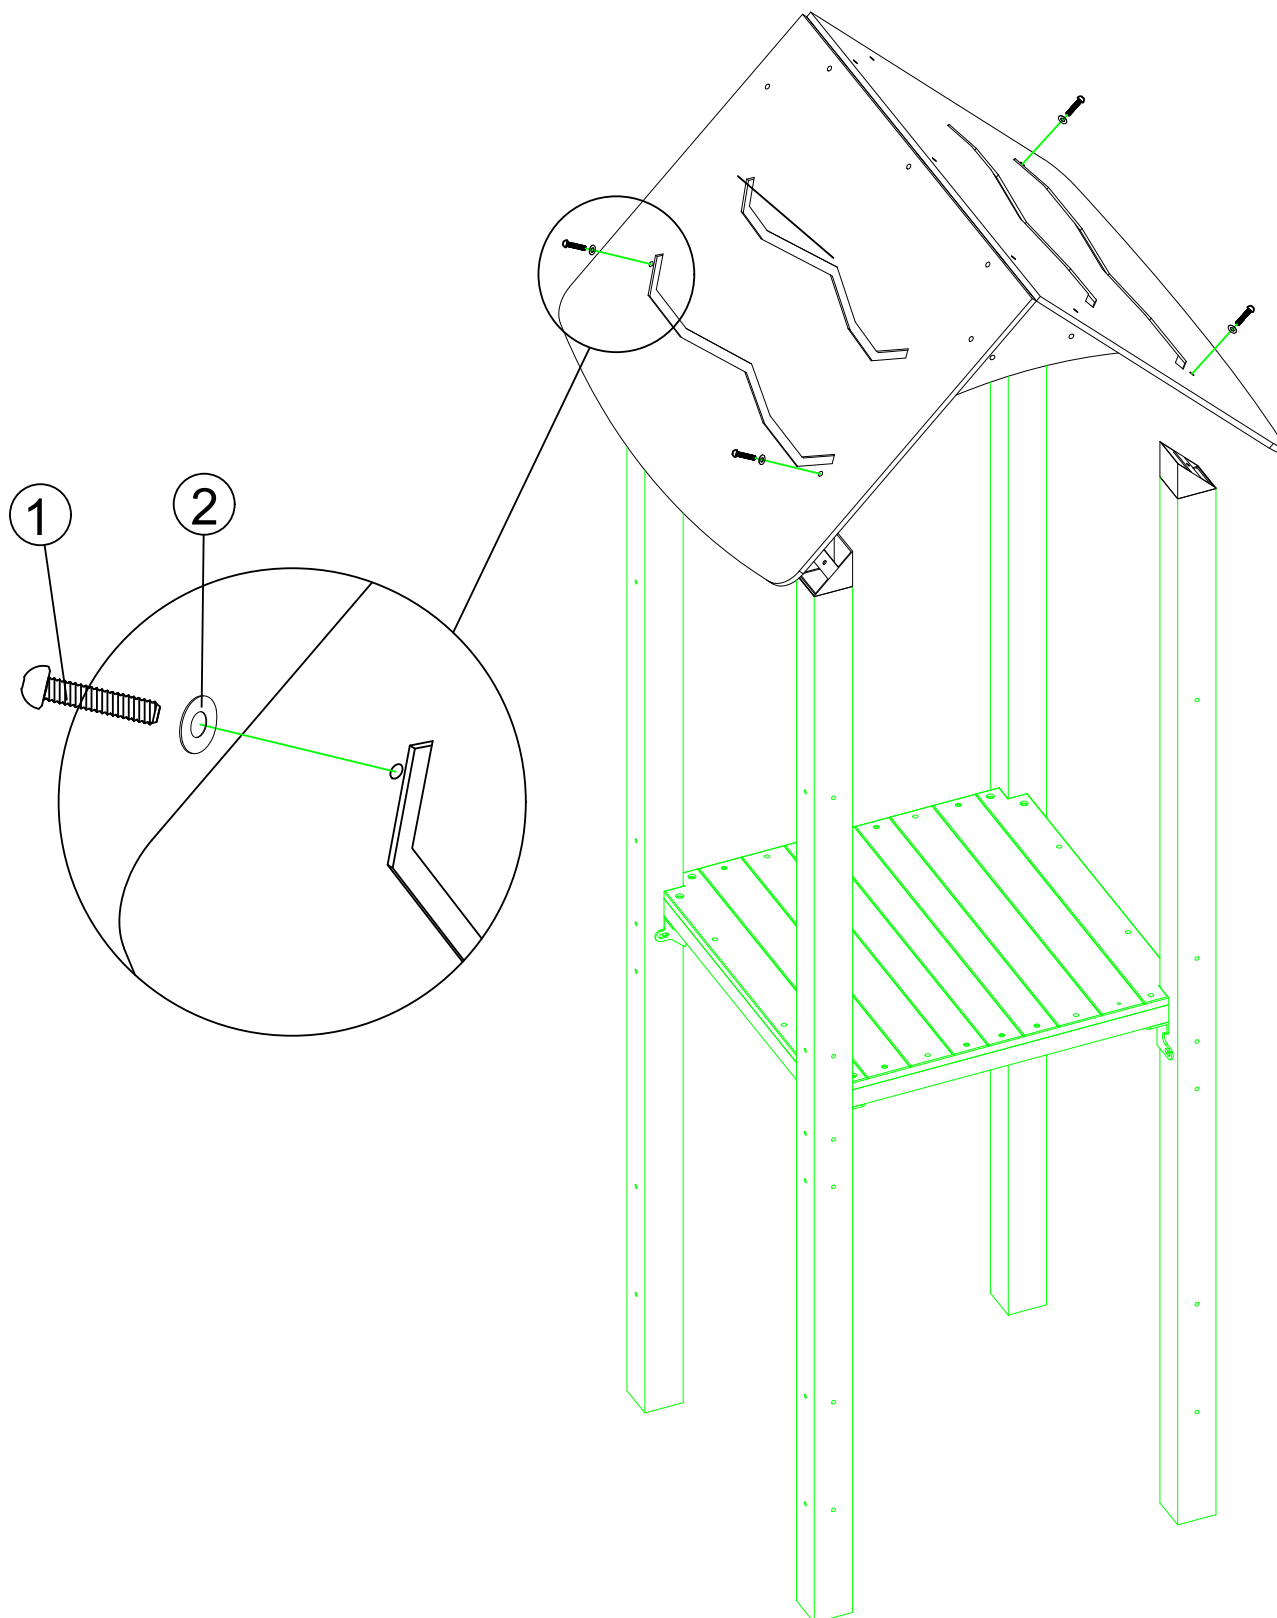

Inspection record

Carry out the inspections at the specified intervals and document the results.

Interval	Check point	YES / NO	Action	Signature
Daily inspection	Screws, bolts and fasteners are firmly tightened.			
	The equipment stands on a level surface; no hazards are present.			
	The equipment is free of dirt and moisture.			
	Moving parts and connections are undamaged and securely fastened.			
	No signs of damage or wear.			
Monthly inspection (in addition to the daily inspection)	Screws are free of rust and damage.			
	All parts are securely connected.			
	Information and compliance labels are intact.			
Annual inspection (in addition to the daily and monthly inspections)	No extensive corrosion; replace affected parts if necessary.			
	No cracks or damage to connecting parts; replace if necessary.			
	No excessive discolouration of components.			
	Screws and connecting elements are in working order, undamaged and not worn.			
	Information labels are legible.			
	The play area under the equipment is safe and level.			

Date of inspection: _____

Carried out by: _____



Thank you for your trust!

If you have any questions about assembly, maintenance or spare parts,
we are happy to help.

WISDOM Education Europe GmbH

schönherr.fabrik · Schönherrstraße 8 · 09113 Chemnitz · Germany
Phone: +49 (0) 37360 488 999 · E-mail: hello@wisdomeurope.eu
www.wisdomeurope.eu